



Sanyo VPC-TH1R Safety Manual

Sanyo digital camera safety manual

1
2
3
4

--

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Service Manual](#)



Enlarged version

SAFETY MANUAL



USING YOUR DIGITAL CAMERA

SAFELY AND CORRECTLY

Before using your camera, please read and understand these safety instructions as well as the instruction manual for your camera.

Keep all manuals in a safe place for later reference.

These safety instructions cover both the camera and its accessories.

Depending on which product was purchased, the camera specifications and accessories may differ.

CAUTIONS CONCERNING BOTH CAMERA AND ACCESSORIES

WARNING

If a device makes a strange noise, emits a strange odor, or if smoke comes out from it, immediately turn off the power and proceed as follows

CAUTIONS CONCERNING



- Do not use v
 - Do not cap monitor wh accident.
 - Be careful automobile the brake p



- Be aware of
 - Pay close camera. F
 - When using your surrou accidents.
 - Do not use where its c accident.

- Do not get th
 - This came



If a device is used under these conditions, it may cause a fire or electric shock.

- 1 Turn off the device.
- 2 When use the docking station or AC adaptor/charger, unplug the power cord from the power outlet.
- 3 Remove the battery.

After completing these actions, wait to make sure no more smoke comes from the device. Then take it to the dealer for service. Do not try to repair or open the device yourself.

Do not use during a storm

To avoid the risk of being struck by lightning, do not use the devices during a thunderstorm. In particular, if used in an open field, you have an increased chance of being struck by lightning. Quickly seek refuge in a place that will protect you from lightning.

Keep the devices out of the reach of children

The following may happen if children play with the devices:

They may wrap the neck strap around their neck and suffocate.

They may swallow the battery or other small parts. In such a case, consult a physician immediately.

They may damage their eyesight if the flash goes off too close to their eyes.

They may get hurt by the camera or other devices.

Do not disassemble or modify

It is dangerous to touch the inside of the devices. Doing so may cause a fire or electric shock.

The camera, especially, incorporates high-voltage circuits.

Any internal check, setting, or repair should be performed by the dealer.

Do not use the AC adaptor as a direct current generator.

CAUTIONS CONCERNING THE CAMERA

Before using your camera, please read and understand these safety instructions as well as the instruction manual for your camera.

Keep all manuals in a safe place for later reference.

These safety instructions cover both the camera and its accessories. Depending on which product was purchased, the camera specifications and accessories may differ.

Be careful where you put down the camera inside an automobile. During sudden stops or turns it may fall behind the brake pedal and prevent braking.

Be aware of your surroundings when using the camera

Pay close attention to your surroundings when using the camera. Failure to do so may lead to an accident or injury.

When using the camera while walking, be very careful of your surroundings and especially the traffic to avoid accidents.

Do not use the camera inside an airplane or elsewhere where the use of electronic devices is prohibited. Doing so may cause an accident.

Do not get the camera wet

This camera is not water-resistant. Do not allow it to get wet, as doing so may cause damage.

If a device makes a strange noise, emits a strange odor, or if smoke comes out from it, immediately turn off the power and proceed as follows:

If a device is used under these conditions, it may cause a fire or electric shock.

When the camera gets wet, immediately turn it off and remove the battery pack. Then take it to a dealer for repair. Using the camera after it has been become wet may cause a fire, electric shock, or other accident.

When use the docking station or AC adaptor/charger, unplug the power cord from the power outlet.

Remove the battery.

After completing these actions, wait to make sure no more smoke comes from the device. Then take it to the dealer for service. Do not try to repair or open the device yourself.

Do not use during a storm

To avoid the risk of being struck by lightning, do not use the devices during a thunderstorm. In particular, if used in an open field, you have an increased chance of being struck by

SAFETY MANUAL

USING YOUR DIGITAL CAMERA SAFELY AND CORRECTLY

CAUTIONS CONCERNING THE CAMERA



- Do not use vehicle as a monitor while driving.
 - Do not capture images, play back images, or watch the LCD monitor while driving a vehicle. Doing so may cause an accident.
 - Be careful of the automobile's brake.



- Be aware of children.
 - Pay close attention to your surroundings when using the camera. Failure to do so may lead to an accident or injury.
 - Do not use the camera where its use may cause an accident.



- Do not get the camera wet.
 - This camera is not water-resistant. Do not use the camera where it may get wet, as doing so may cause damage.
 - Do not use the camera near the battery or other small parts.
 - If the camera falls, it may cause an accident or injury.



- Do not place the camera in a car.
 - The camera may fall behind the brake pedal and prevent braking.
 - If the camera falls, it may cause an accident or injury.



- Do not look directly at the sun.
 - Do not look directly at the sun or other bright light sources.



- Do not use the camera while walking.
 - To prevent an accident or injury, pay close attention to your surroundings when using the camera.



- Do not use the camera near explosive objects.
 - Do not use the camera near explosive objects.

- Caution when using the camera.
 - Do not walk with the camera around your neck or waist and get damaged by swinging arms.
 - Be careful of the camera's lens.
 - Make sure that the camera's lens is covered when not in use.



- If the camera is left in a car.
 - For safety, do not leave the camera in a car. This will prevent the battery from fluid objects.



- Caution during a storm.
 - This camera is not water-resistant.



strong source of light. Doing so may seriously injure your eyes.

k Do not use the flash close to a person's face
i To prevent possible eye injury, do not use the flash near a person's face. If the flash is used close to a person's opened eyes, there is a risk that it may damage that person's eyesight. Especially with young children or babies, use the flash from a distance of at least 1 meter away.

k Do not use where there is risk of explosion
i Do not use the camera in a location where there is explosive gas, or any other flammable material in the air.

Doing so may cause a fire or an explosion.

k Cautions when carrying the camera
i Do not walk around with the camera suspended from your neck or dangling from your wrist. It may hit other objects

and get damaged. When walking around with the camera, secure it with your hand, for example, to prevent it from swinging around.

i Be careful not to drop the camera or subject it to strong shocks.

i Make sure direct sunlight does not hit the camera lens, as that may damage the internal parts. When not using the camera, be sure to always turn it off and confirm that the lens is covered.

k If the camera is not going to be used for a long period of time

i For safety's sake, remove the battery pack from the camera. This will prevent any possible excess heat or leakage of battery fluid that may result in injuries or damage to nearby objects.

k Cautions during use and storage
i This camera is a precision instrument. It should not be used

or stored in a place with excessive heat, humidity, or where it may be exposed to water or dust. Operating environment.

• Temperature 0 to 40°C (32 to 104°F) (operation)
0 to 35°C (32 to 95°F) (charging)
-20 to 60°C (-4 to 140°F) (storage)

i Humidity
30 to 90% (operation, no condensation)
10 to 90% (storage, no condensation)

k Do not hold the hot part for a long time
i The camera may become warm during use.

A low temperature burn may result if you hold the hot part for a long time.

k Do not cover or wrap the camera in a cloth or blanket
i It may generate heat and cause the casing to warp or cause a fire.



SAFETY MANUAL

USING YOUR DIGITAL CAMERA SAFELY AND CORRECTLY

Before using your camera, please read and understand these safety instructions as well as the instruction manual for your camera.

- **Keep all manuals in a safe place for later reference.**
- **These safety instructions cover both the camera and its accessories. Depending on which product was purchased, the camera specifications and accessories may differ.**

CAUTIONS CONCERNING BOTH CAMERA AND ACCESSORIES

WARNING

WARNING

CAUTION

- **If a device makes a strange noise, emits a strange odor, or**

CAUTIONS CONCERNING ACCESSORIES



- **Do not use vehicle**
 - Do not cap monitor while driving.
 - Be careful of the automobile's operation, especially the brake pedal.



- **Be aware of surroundings**
 - Pay close attention to the camera. For example, do not use the camera while driving.
 - When using the camera, be aware of your surroundings to prevent accidents.
 - Do not use the camera where its use could cause an accident.



- **Do not get the camera wet**
 - This camera is not waterproof, so do not use it in the rain.
 - Do not use the camera where the battery pack or the camera's electric shock protection may be damaged.



- **Do not place the camera near a fire**
 - The camera is not fireproof, so do not use it near a fire.
 - If the camera is used near a fire, remove the battery pack to prevent a fire.



- **Do not look directly at the sun**
 - Do not look directly at the sun through the camera's lens. Doing so may damage your eyes.



- **Do not use the camera to take pictures of a person's face**
 - To prevent eye injury, do not use the camera to take pictures of a person's face when the person's eyes are open.
 - Do not use the camera to take pictures of a person's face when the person's eyes are closed.



- **Do not use the camera near explosive gas**
 - Do not use the camera near explosive gas. Doing so may cause an accident.

■ Cautions when carrying the camera

- Do not walk around with the camera suspended from your neck or dangling from your wrist, and get damaged.



[Next Page](#)

1
2
3
4

Related Manuals for Sanyo VPC-TH1R

[Camcorder Sanyo VPC-TH1 Service Manual](#)

Sanyo dual camera service manual (63 pages)

[Camcorder Sanyo VPC-HD2000ABK Instruction Manual](#)

Full 1080p hd video and 8mp digital photos (227 pages)

[Camcorder Sanyo Xacti VPC-FH1 Instruction Manual](#)

Hd dual camera (211 pages)

[Camcorder Sanyo Xacti VPC-TH1 Instruction Manual](#)

Sanyo dual digital camera instruction manual (202 pages)

[Camcorder Sanyo Xacti VPC-HD2000 Instruction Manual](#)

(127 pages)

[Digital Camera SANYO 14000000 Instruction Manual](#)

14 mega pixels (79 pages)

[Camcorder Sanyo VPC-HD2000BK Service Manual](#)

Dual camera (62 pages)

[Software Sanyo VPC HD2 - Xacti Camcorder - 720p Instruction Manual](#)

For digital movie camera (33 pages)

[LCD TV SANYO LCD TV Owner's Manual](#)

(31 pages)

[Freezer Sanyo MDF-U333 Instruction Manual](#)

Biomedical freezer (30 pages)

[Camcorder Sanyo Xacti VPC-HD2000 Quick Manual](#)

Sanyo dual camera quick guide (28 pages)

[Camcorder Sanyo Xacti VPC-HD2000 Specifications](#)

Sanyo xacti vpc-hd2000: specifications (8 pages)

[Projection TV Sanyo 710-00792-1 Installation Manual](#)

Rear projection display (8 pages)

[Camcorder Sanyo VPC-TH1BL Quick Manual](#)

Dual camera (2 pages)

[Camcorder Sanyo Xacti VPC-FH1 Quick Manual](#)

Sanyo xacti vpc-fh1: quick start (2 pages)

[Camcorder Sanyo Xacti VPC-HD2000 Series Specifications](#)

Sanyo xacti vpc-hd2000: specifications (2 pages)

Summary of Contents for Sanyo VPC-TH1R

[Page 1: Safety Manual](#)

SAFETY MANUAL USING YOUR DIGITAL CAMERA SAFELY AND CORRECTLY i Before using your camera, please read and understand these safety instructions as well as the instruction manual for your camera. i Keep all manuals in a safe place for later reference.

[Page 2](#) CAUTIONS CONCERNING THE DOCKING STATION AND AC ADAPTOR/CHARGER DANGER k Do not recharge a battery pack other than the specified battery pack i Recharging a dry-cell battery or other type of rechargeable battery may cause excess heat, combustion, or leakage, and cause a fire, injuries, burns, or damage to nearby objects.

[Page 3](#) SAFETY PRECAUTIONS k Use only batteries manufactured by SANYO i Do not use batteries other than the specified model numbers from SANYO. Especially for safety purposes, do not use imitation products. If dry-cell batteries or other rechargeable batteries are used, the batteries may generate heat, rupture, or leak and result in fire, injury, burns or damage to surroundings.

[Page 4: For Correct Use Of Your Camera](#)

Before capturing important images, make sure that the camera is operating properly and in condition to capture the images properly. i Sanyo Electric shall not be held responsible for any losses that result from images that could not be recorded, are erased, destroyed, or damaged in any way due to a problem with the camera, any of its accessories, or its software.

This manual is also suitable for:

[Vpc hd2 - xacti camcorder - 720p](#)[Hd2000 - lcd projector - 7000 ansi lumens](#)[Vpc-fh1bk - xacti camcorder - 1080p](#)[Vpc-hd2000 - xacti camcorder - 1080p](#)[Vpc-th1b](#)[Vpc th1 - xacti camcorder - 720p](#) ... [Show all](#)