



Sanyo DWM-390 Instruction Manual

Dvd video player

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Remote Control](#)

[2 Connecting to a Conventional Tv \(Example 1\)](#)

[3 Playable Discs](#)


[4 Tvguardian](#)

[5 Troubleshooting Guide](#)

[6 Specifications](#)

[Download this manual](#)

[See also: Quick Manual](#)

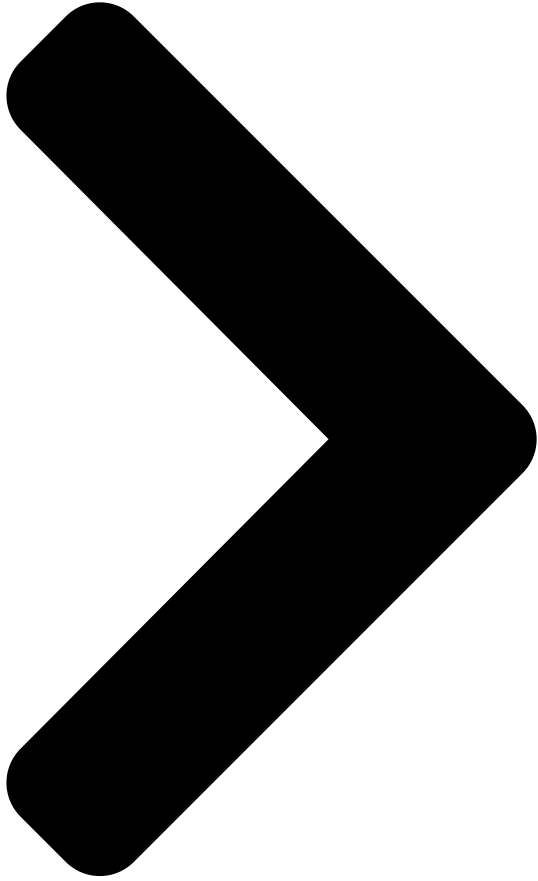

INSTRUCTION MANUAL

DVD Video Player

0
1
2
3
4
5
6
7
8
9
TM

INSTRUCTION MANUAL

SANYO'S HELP-LINE

D

Call the toll-free number below if you have any difficulties operating this product.

1-800-813-3435 (Weekdays: 7:30 AM - 4:00 PM Central Time)

1AD6P1P1806-- DWM-390, Issue Number 1

©
TM

DWM-390

q
f
e
n
a
z/ON



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo DWM-390

[DVD Player Sanyo DWM-390 Quick Manual](#)

Dvd video player (4 pages)

[DVD Player Sanyo DWM-400 Quick Manual](#)

Sanyo dwm-400: quick start (4 pages)

[DVD Player Sanyo DWM-400 Instruction Manual](#)

Sanyo dwm-400: instruction manual (38 pages)

[DVD Player Sanyo DWM-400 Service Manual](#)

(41 pages)

[DVD Player Sanyo DWM-450 Quick Manual](#)

Sanyo dwm-450: quick start (8 pages)

[DVD Player Sanyo DWM-450 Instruction Manual](#)

Sanyo dwm-450: instruction manual (38 pages)

[DVD Player Sanyo DWM-370 Instruction Manual](#)

Dvd video player (34 pages)

[DVD Player Sanyo DWM-380 Quick Manual](#)

(4 pages)

[DVD Player Sanyo DVD-SL33 Instruction Manual](#)

(19 pages)

[DVD Player Sanyo DVD-SL33 Service Manual](#)

(20 pages)

[DVD Player Sanyo DVD-SL33 Instruction Manual](#)

Sanyo instruction manual dvd video player dvd-sl33 (38 pages)

[DVD Player Sanyo DVD-9201 Service Manual](#)

Sanyo dvd player service manual (26 pages)

[DVD Player Sanyo DVD-SL20V Service Manual](#)

(46 pages)

[DVD Player Sanyo DVD-5100 Service Manual](#)

(83 pages)

[DVD Player Sanyo DVD-7201 Instruction Manual](#)

(20 pages)

[DVD Player Sanyo DVP2902 User Manual](#)

(26 pages)

Summary of Contents for Sanyo DWM-390

[Page 1](#) NEXT PLAY CLEAR SEARCH MODE REMOTE CONTROLLER RB-SL25 ® SANYO'S HELP-LINE Call the toll-free number below if you have any difficulties operating this product. 1-800-813-3435 (Weekdays: 7:30 AM - 4:00 PM Central Time) 1AD6P1P1806-- DWM-390, Issue Number 1 DWM-390 z/ON...

[Page 2: Table Of Contents](#)

Important Safety Instructions ... E2 Safety Certification ... E4 Accessories ... E4 Controls ... E5 Remote Control ... E6 Before Connection ... E7 Choosing a Connection ... E7 Basic Connections ... E8 Connecting to a Conventional TV (Example 1) ... E8 Connecting to a TV with Progressive-

scan Capability (Example 2) ...

[Page 3: Important Safety Instructions](#)

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

[Page 4](#) 15. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge...

[Page 5: Safety Certification](#)

SEARCH MODE REMOTE CONTROLLER RB-SL25 CAUTION: Changes or modifications not expressly approved by Sanyo may void the user's authority to operate this equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

[Page 6: Controls](#)

Front Panel Disc tray Open/Close button (q) FL display Remote sensor (IR) FL Display 1. Play indicator (a) 2. Pause indicator (k) 3. CD indicator (CD) 4. DVD indicator (DVD) 5. Last memory indicator (LM) 6. Virtual Surround Sound indicator (3D) 7.

[Page 7: Remote Control](#)

PICTURE z /ON LAST MEMO OPEN/CLOSE MODE PROGRAM SURROUND REPEAT A-B REPEAT /RANDOM ANGLE ON SCREEN ZOOM ANGLE REPLAY SUBTITLE SETUP CHANGE SUBTITLE ON/OFF AUDIO TOP MENU RETURN REV SLOW PAUSE/STEP PREV NEXT PLAY SEARCH Inserting batteries Two "AA" batteries (not supplied) Note: Remove the batteries if the remote control is not to be used for a...

[Page 8: Before Connection](#)

IMPORTANT INFORMATION: • To connect this unit to a TV, TV must have a set of Audio/Video composite input jacks (RCA-type). You cannot use an antenna terminal to connect this unit. • If your TV has only an antenna terminal, please purchase the TV with Audio/Video input jacks or the RF modulator. •...

[Page 9: Basic Connections](#)

Connecting to a Conventional TV (Example 1) Connect the DVD video player to your TV. VIDEO OUT SELECT S-VIDEO OUT To AC 120V, 60Hz To AUDIO OUT jacks Audio/Video cable (supplied) Notes: • Please refer to your TV instruction manual. •...

[Page 10](#) Using RF Modulator If your TV does not have a Video input jack and has an antenna terminal only, please purchase the *RF Modulator (not supplied). (*Please consult your audio/video dealer.) Example: DVD video player, TV and RF Modulator connections Audio/Video cable (supplied) To AUDIO To AC 120V,...

[Page 11: Connecting To A Tv With Progressive-Scan Capability \(Example 2\)](#)

Connecting to a TV with Progressive-scan Capability (Example 2) Your TV must be capable of handling progressive scanning and have component video input capability. To COMPONENT VIDEO OUT jacks DVD video player S-VIDEO OUT To AC 120V, 60Hz *Audio cable (not supplied) 1.

[Page 12: Additional Connection Examples](#)

ADDITIONAL CONNECTION EXAMPLES Connecting to an Audio System and TV (Example 3) Connect the DVD video player to an Audio System and a TV. VIDEO OUT SELECT S-VIDEO OUT To AC 120V, 60Hz To AUDIO OUT jacks Notes: • Please refer to the instruction manual of your Audio System and TV.

[Page 13: Connecting To An Amplifier With Dolby Digital Decoder, Dts Decoder Or Mpeg2 Decoder \(Example 4\)](#)

Notes: • For VIDEO connection, please refer to "BASIC CONNECTIONS". • Please refer to the instruction manual of your amplifier. • When you connect the DVD video player to your amplifier, be sure to turn off the power and disconnect both units from the wall outlet until all the connections have been made.

[Page 14: Connecting To An Amplifier With Dolby Pro Logic Decoder \(Example 6\)](#)

Connecting to an Amplifier with Dolby Pro Logic Decoder (Example 6) To AUDIO INPUT jacks *Audio cable (not supplied) To AUDIO OUT jacks COMPONENT VIDEO OUT VIDEO OUT SELECT S-VIDEO OUT OPT. COMPONENT DIGITAL AUDIO OUT VIDEO OUT Note: Please refer to your amplifier instruction manual. Power Supply Connect the power cord to a 120VAC 60Hz outlet.

[Page 15: Playable Discs](#)

The following types of discs can be played on this unit. Disc type and logo mark DVD-Video Audio CD Region Number Region number (Regional restriction code) is built-in to the unit and DVD video discs. Region number "1" or "ALL" of DVD video discs can be used on this unit.

[Page 16: Basic Operation](#)

When operation buttons are pressed, that operation is displayed on the TV screen. The display turns off after several seconds. 16:9 : " 1. Press [z/ON]. • "SANYO" logo appears on the TV screen. • "-----" blinks, and then "NO DISC" appears on the FL ". display. "

[Page 17: Stopping Playback](#)

4. Press [q] (or [OPEN/CLOSE] on the remote control) again. • The disc tray closes. • "Reading" appears on the TV screen. Note: Some discs may start playback automatically. 5. Press [a PLAY] (or [a] on the unit) to start playback. •...

[Page 18: Selecting A Dvd Menu](#)

Selecting a DVD Menu Notes: • The operation may differ depending on the disc used. • Selecting a menu may not be possible on some discs. 1. Press [MENU]. The main menu screen will appear. Note: Press [MENU] again to resume playback. 2.

[Page 19: Title Search \[Dvd\]](#)

Title Search [DVD] 1. Press [SEARCH MODE] once during playback or in the stop mode. The title search screen appears on the TV screen. Example: Title Search -- /28 2. Press the number button(s) to enter the title number. Example: To select Title No.3, press [3].

[Page 20: Fast Playback](#)

Fast Playback Fast forward playback Press [FWD c] repeatedly to select the fast speed forward playback (up to 200 times normal speed in DVD). [DVD] c 1 v c 2 v c 3 v c 4 (4 steps) [CD] c 1 v c 2 (2 steps) Press [a PLAY] to return to normal playback.

[Page 21: Picture Zoom \(Pin Point Zoom\) \[Dvd\]](#)

Picture Zoom (Pin Point Zoom) [DVD] 1. Press [ZOOM] during normal/slow playback or still picture. The pin point guide appears on the TV screen. The guide divides the screen into nine, and the number shows the point. Note: if you quit the screen, press [ZOOM]. 2.

[Page 22: Repeat Playback](#)

Repeat Playback Press [REPEAT] during playback (or programmed playback) of the title (or track) you want to repeat. Each time the button is pressed, the repeat mode will be changed as follows. [DVD] TV screen FL display Operation Chapter REP 1 Repeat of chapter being played Title ALL REP...

[Page 23: Random Playback \[Cd\]](#)

Random Playback [CD] 1. Press [PROGRAM/RANDOM] once in the stop mode. • "Random" appears on the TV screen. 2. Press [a PLAY] to begin random playback. • "RND" appears on the

FL display. The unit will automatically select tracks at random. Notes: •...

[Page 24: Selecting Subtitle Language \[Dvd\]](#)

Selecting Subtitle Language [DVD] This operation works only with discs on which multiple subtitle languages are recorded. 1. Press [SUBTITLE ON/OFF] during playback. The subtitle language mark appears. (Example: If “ Off” appears, press the button again. 2. Press [SUBTITLE CHANGE] repeatedly until the desired subtitle language appears on the TV screen.

[Page 25: Selecting On-Screen Information](#)

Selecting On-Screen Information Press [ON SCREEN] repeatedly to show the disc information (Title, Chapter, Title elapsed playing time, Language, etc.). Example for DVD: 1. Press [ON SCREEN] during playback. Chapter remaining playing time Title elapsed playing time 00:08:20 00:01:45 2. Press [ON SCREEN] again. Chapter remaining playing time Title elapsed playing time Chapter number...

[Page 26: Tvguardian](#)

TVGuardian Before Setting • Initial setting is “CC2” on this unit. • Please set “CC2” or “C2” (Closed caption on channel 2) on your TV first. For more details, please refer to your TV instruction manual. • Set the subtitle language to “Off”. (See page E23.) Setting TVGuardian ® ...

[Page 27: How It Works After Setting Tvguardian](#)

How It Works After Setting TVGuardian When a disc supporting closed caption is played, it mutes the entire phrase instead of just the swear word and displays the modified text, by design. It turns the sound back on when the phrase is completed.

[Page 28: Mp3/Wma Cd Operation](#)

MP3/WMA CD OPERATION Before Starting This unit can play back the CD that has recorded music data, MP3 or WMA (Windows Media Audio) files. • The file system is ISO9660 Level 1 and Level 2. • If the CD has both audio CD tracks and MP3/WMA files, only audio CD tracks are played.

[Page 29: Stopping Playback](#)

PICTURE z /ON LAST MEMO OPEN/CLOSE MODE PROGRAM SURROUND REPEAT A-B REPEAT /RANDOM ANGLE ON SCREEN ZOOM ANGLE REPLAY SUBTITLE SETUP MENU CHANGE SUBTITLE ON/OFF AUDIO TOP MENU RETURN REV SLOW FWD SLOW PAUSE/STEP PREV NEXT PLAY 4. Press [o], [a], [p] or [b] to move the highlighted box to the desired file.

[Page 30: Picture Disc Operation](#)

PICTURE DISC OPERATION KODAK Picture CD Playback With KODAK Picture CD, it's easy to turn film into pictures you can email from your PC and view on this DVD video player! Just bring your film in for processing, and check the box for KODAK Picture CD.

[Page 31: Jpeg Cd Playback](#)

JPEG CD Playback You can also view digital images from JPEG files on disc created by your computer. • It would take 30 seconds or more for this unit to read the JPEG files depending on its structure. • Some JPEG files cannot be played back depending on the recording conditions.

[Page 32: Initial Settings](#)

Once the initial settings have been completed, the unit can always be operated under the same conditions. The settings will be retained in the memory until they are changed, even if the power is turned off. Setting Language 1. Press [SETUP] in the stop mode. The setup screen appears.

[Page 33: Setting Display](#)

Setting Display 1. Press [SETUP] in the stop mode. The setup screen appears. Language Display Digital Out 2. Press [a] to select “Display”. 3. Press [ENT]. “Display” screen appears. Language Display Digital Out Dimmer Normal TV Type 4:3 LB 4. Press [ENT] again. The submenu (FL display brightness on the player, “Normal”...

[Page 34: Setting Digital Out](#)

Setting Digital Out If the optical DIGITAL OUT jack is connected to the amplifier, you must set as follows: 1. Press [SETUP] in the stop mode. The setup screen appears. Language Display Digital Out 2. Press [a] to select "Digital Out". 3.

[Page 35: Setting Parental](#)

Setting Parental Note: If you set "TVG Mode", "TVG CC" or "TVG CC Ch", set them first before steps 6 and 7. See "Setting TVGuardian®" on page E25. 1. Press [SETUP] in the stop mode. The setup screen appears. 2. Press [a] to select "Parental". Language Display Digital Out...

[Page 36: Language Code List](#)

LANGUAGE CODE LIST Enter the appropriate code number for the initial settings "AUDIO", "SUBTITLE" and "DVD MENU". Code Abbreviation Language of the language 6565 Afar 6566 Abkhazian 6570 Afrikaans 6577 Amharic 6582 Arabic 6583 Assamese 6589 Aymara 6590 Azerbaijani 6665 Bashkir 6669 Byelorussian...

[Page 37: Troubleshooting Guide](#)

TROUBLESHOOTING GUIDE If you have followed the instructions and are having difficulty operation the unit, locate the SYMPTOM in the left column below. Check the corresponding POSSIBLE CAUSE and CORRECTIVE ACTION columns to locate and remedy the problem. SYMPTOM No power. The power is on, but the player does not work.

[Page 38: Maintenance](#)

Should this product require service, refer to the SANYO DVD limited warranty. If you do not have a convenient SANYO service station nearby, contact the SANYO dealer where you purchased the unit. Be sure to give the model number and explain the problem. The dealer will advise you how to obtain service.

[Page 39: Warranty](#)

Acts of God, or normal wear and tear. The foregoing is in lieu of all other express warranties and SANYO does not assume or authorize any party to assume for it any other obligation or liability.

[Page 40](#) SANYO Electric Co., Ltd. Printed in China...