



Sanyo DVC-2000 Instruction Manual

Dvd player + video cassette recorder

1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

--

•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links

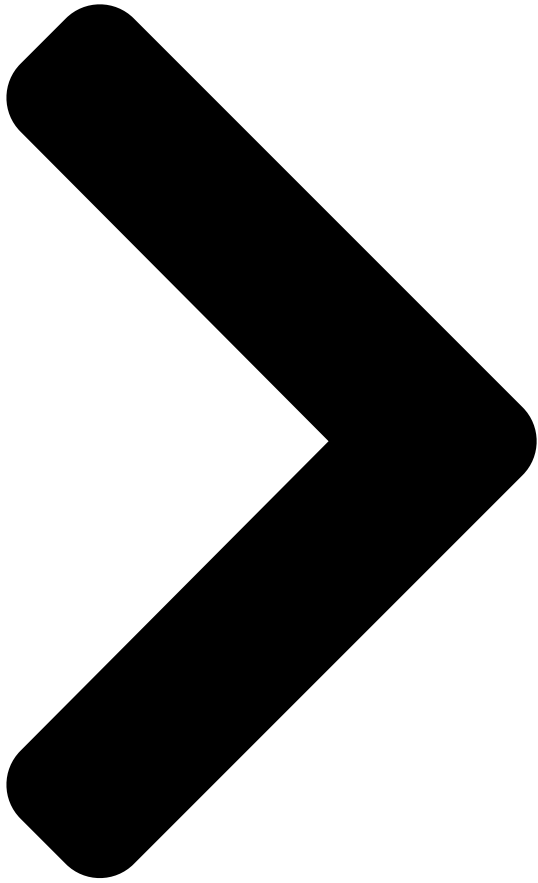

INSTRUCTION MANUAL

DVD Player + Video Cassette Recorder

Lecteur DVD + Magnétoscope à cassette

DVC-2000

English

Français

I

index



Table of Contents

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Troubleshooting

Troubleshooting 34

Troubleshooting 35

Related Manuals for Sanyo DVC-2000

[DVD VCR Combo SANYO DVC-2000 Instruction Manual](#)

Dvd player + video cassette recorder (38 pages)

[DVD VCR Combo Sanyo DVW-7100a Instruction Manual](#)

Dvd player & video cassette recorder (44 pages)

[DVD VCR Combo Sanyo DVW-7100A Quick Start Manual](#)

Sanyo dvw-7100a: quick start (2 pages)

[DVD VCR Combo Sanyo DVC-2600 Instruction Manual](#)

Dvd player + video cassette recorder (36 pages)

[DVD VCR Combo Sanyo DVW-7200 Instruction Manual](#)

Dvd player & video cassette recorder (44 pages)

[DVD VCR Combo Sanyo DVW-7200 Quick Start Manual](#)

Sanyo dvw-7200: quick start (2 pages)

[DVD VCR Combo Sanyo DVC-2500 Instruction Manual](#)

Dvd player + video cassette recorder (38 pages)

[DVD VCR Combo Sanyo SCP SCP-2700 Instruction Manual](#)

Dvd player + video cassette recorder (37 pages)

[DVD VCR Combo Sanyo DVW-7000 Quick Start Manual](#)

Dvd player + video cassette recorder (2 pages)

[DVD VCR Combo Sanyo DVW-7000 Instruction Manual](#)

Dvd video player & 4-head hi-fi stereo vcr (40 pages)

[DVD VCR Combo Sanyo DVW-7100 Quick Start Manual](#)

Dvd player + video cassette recorder (2 pages)

[DVD VCR Combo Sanyo DVW-7100 Instruction Manual](#)

Dvd video player & 4-head vcr (38 pages)

[DVD VCR Combo Sanyo DVW7100OM Instruction Manual](#)

Dvd video player & 4-head vcr (38 pages)

[DVD VCR Combo Sanyo DVW-7100 Manual](#)

(2 pages)

[DVD VCR Combo Sanyo DVR-V100E Service Manual](#)

Dvdr + vcr combi (49 pages)

[DVD VCR Combo Sanyo DVR-V100E User Manual](#)

Dvd recorder + vcr (62 pages)

Summary of Contents for Sanyo DVC-2000

[Page 2: Safety Precautions](#)

Safety Precautions WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: WARNING: CAUTION: ATTENTION: WARNING: NOTE TO CABLE/TV INSTALLER: CAUTION: CAUTION: FCC WARNING: REGULATORY INFORMATION: FCC Part 15 NOTES ON COPYRIGHTS: SERIAL NUMBER:...

[Page 3: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE. DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

[Page 4: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS (Continued) 18. Accessories 19. Damage Requiring Service 20. Servicing 21. Replacement parts 22. Safety Check 23. Disc Tray 24. Burden 25. Connecting 26. Sound Volume 27. Sound Distortion 28. Earphone 29. Laser Beam 30. Disc...

[Page 5: Table Of Contents](#)

Table of Contents Introduction Safety Precautions2 IMPORTANT SAFETY INSTRUCTIONS..3-4 Table of Contents .

[Page 6: Before Use](#)

Before Use Playable Discs Notes Notes on DVDs Regional code of the DVD+VCR and DVDs Note on DTS-encoded CDs Disc-related terms Title (DVD only) Chapter (DVD only) Track (audio CD only) Remote control battery installation Caution Remote Control Operation Range Distance: Angle: IMPORTANT NOTE:...

[Page 7: Before Use](#)

Before Use (Continued) Precautions Handling the unit When shipping the unit When setting up the unit To keep the surface clean Cleaning the unit To clean the cabinet To obtain a clear picture Notes on Discs Handling discs Storing discs Cleaning discs About Symbols About the...

[Page 8: Front Panel](#)

Front Panel Disc Tray (DVD deck) EJECT(Z Z) CHANNEL (v v /V V) Cassette Compartment (VCR deck) Remote Sensor Display window OPEN/CLOSE (Z Z) PLAY (B B) DVD/VCR indicator STOP (x x) STOP (x x) REC (z z) PLAY (B B) PAUSE/STILL(X X)

[Page 9: Display Window](#)

Display Window HI-FI PROG. TITLE CHP/TRK TIMER PROG. TITLE CHP/TRK TIMER SP LP EP HI-FI...

[Page 10: Remote Control](#)

Remote Control DVD/VCR select button POWER TV/VCR DISPLAY, CLK/CNT b B v V (left/right/up/down) CH/TRK v V SETUP, MENU TITLE PAUSE/STEP (X X) STOP (x x) REC (z z) 0-9 numerical buttons AUDIO SUBTITLE MARKER SEARCH REPEAT RANDOM, Ad JUMP A-B, SP/EP OPEN/CLOSE, EJECT (Z Z)

[Page 11: Rear Panel](#)

Rear Panel DVD/VHS OUT (VIDEO/AUDIO (Left/Right)) VHS IN LINE 1 (VIDEO IN/AUDIO IN (Left/Right)) AC Power Cord COMPONENT VIDEO OUT (Y Pb Pr) (DVD OUT) ANTENNA INPUT RF OUT(DVD/VHS OUT) S-VIDEO OUT (DVD OUT) VIDEO OUT (DVD OUT) Do not touch the inner pins of the jacks on the rear panel.

[Page 12: Connections](#)

Connections Tips Connecting to optional equipment Caution Connecting Antenna/Cable TV to DVD+VCR Antenna Antenna Flat Wire (300 ohm) 300/75 ohm Adaptor (Not supplied) Rear of DVD+VCR Without Cable Box With Cable Box To view or record CATV channel Notes Cable TV Wall Jack Rear of DVD+VCR Back Panel of...

[Page 13: Basic Tv Connections](#)

Connections (Continued) Basic TV Connections RF coaxial connection Note How to set the DVD+VCR's RF output channel Audio/Video connection (A1) Note Rear of TV VIDEO ANTENNA AUDIO INPUT INPUT INPUT Rear of DVD+VCR Optional, Preferred TV Connections Notes For using S-VIDEO OUT or COMPONENT VIDEO OUT jack, set the "TV Output Select"...

[Page 14](#) Connections (Continued) Optional, Preferred TV Connections Note (A2) (A1) Connecting to an amplifier equipped with two channel analog stereo or Dolby Surround (A1, A2) Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2, or DTS) Digital Audio Output Digital Multi-channel sound...

[Page 15: Before Operation - Vcr Part](#)

Before Operation - VCR Part On-Screen Display (OSD) ① ② ③ ④ PLAY HI-FI CH 4 STEREO JUL 5 , FRI 2:15 PM ⑤ ⑦ ① TAPE SPEED DISPLAY ② FUNCTION DISPLAY ③ HI-FI DISPLAY ④ CHANNEL DISPLAY ⑤ STEREO/SAP DISPLAY ⑥...

[Page 16: Setting The Vcr Setup Menu](#)

Before Operation - VCR Part (Continued) Setting the VCR Setup Menu Press MENU and the MAIN menu will appear. Press v v /V V to select the VCR SETUP menu, then press SELECT/ENTER. SET CLOCK TIMER RECORD CHANNEL SETUP VCR SETUP SELECT ENTER TO EXIT PRESS...

[Page 17](#) Before Operation - VCR Part (Continued) Setting the Clock Things to know before starting JANUARY 1, 2002, 12:00 AM Auto Clock Set Press MENU and the MAIN menu will appear. Press v v /V V to choose the SET CLOCK menu. Press SELECT/ENTER and the SET CLOCK menu will appear.

[Page 18: Before Operation - Dvd Part](#)

Before Operation - DVD Part General Explanation On-Screen Display On-screen display operation Press DISPLAY during playback. Use v v /V V to select an option. Use b b /B B to change the setting of an option. Options 0:16:57 1 ENG 6 CH NORM.

[Page 19: General Operation](#)

Before Operation - DVD Part (Continued) Initial Settings General Operation Press SETUP. Original Disc Audio Disc Subtitle English Disc Menu French Rating German Spanish Password TV Aspect Italian Menu Language Chinese TV Output Select Polish Digital Audio Output Hungarian 5.1 Speaker Setup Russian Other —...

[Page 20: Sound](#)

Before Operation - DVD Part (Continued) Sound Digital Audio Output DOLBY DIGITAL/PCM: Stream/PCM: PCM: DOLBY Disc Audio DIGITAL Disc Subtitle Stream/PCM Disc Menu Rating Password TV Aspect Menu Language TV Output Select Digital Audio Output 5.1 Speaker Setup Others Others Dynamic Range Control (DRC) /PCM Vocal...

[Page 21: Parental Control](#)

Before Operation - DVD Part (Continued) Parental Control Rating Disc Audio Disc Subtitle Disc Menu Rating Password TV Aspect Menu Language TV Output Select Digital Audio Output Unlock 5.1 Speaker Setup Others Select Rating on the Setup menu using v v /V V buttons.

[Page 22: Operation With Tape](#)

Operation with tape Normal Playback Preparation: Insert a prerecorded video cassette. Press PLAY (H H) once. TV/VCR Press STOP (x x) to stop playback. Tracking Control Auto Tracking Manual Tracking CH/TRK (v v /V V) CHANNEL (v v V V) Special Effect Playbacks Special effects playback notes Search...

[Page 23: Normal Recording](#)

Operation with tape (Continued) Normal Recording Preparation: Insert a video cassette that the safety tab intact. Select the desired channel by using CH/TRK (v v /V V). INPUT Set the desired recording speed (SP or EP) by pressing SP/EP. Set the MTS mode as desired (See page 16, 26).

[Page 24](#) Operation with tape (Continued) Use V V to choose the SPEED option. 1 1 0 0 Use b

Language Code List Code Language Code Language Code Language Code Language...

[Page 37: Specifications](#)

Specifications General Inputs Outputs VCR Specifications DVD Specifications Accessory:...