



Sanyo SCP SCP-2700 Instruction Manual

Dvd player + video cassette recorder

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Front Panel](#)

[2 Remote Control](#)

[3 Troubleshooting](#)

[Download this manual](#)

See also: [Operating Manual](#) , [User Manual](#)



INSTRUCTION MANUAL

DVD Player + Video Cassette Recorder

Lecteur DVD + Magnétoscope à cassette

Only cassettes marked
can be used with this DVD+VCR.

As an E
S

Partner,
ENERGY
STAR

SANYO has determined that
this product or product model
meets the E

S
ENERGY
STAR

guidelines for energy efficiency.

Please read this manual carefully before connecting your DVD+VCR and operating it for the first time.
Keep the manual in a safe place for future reference.

DVC-2700

English



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo SCP SCP-2700

[Cell Phone Sanyo Juno User Manual](#)

Sprint phone (160 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

Sprint cell phone (160 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

(139 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

(139 pages)

[Cell Phone Sanyo SCP2700 Operating Manual](#)

(72 pages)

[DVD VCR Combo Sanyo HVR-DX610 Instruction Manual](#)

(66 pages)

[DVD VCR Combo Sanyo FWDV225F Owner's Manual](#)

Dvd player/vcr with line-in recording (28 pages)

[DVD VCR Combo Sanyo DVW-7200 Instruction Manual](#)

Dvd player & video cassette recorder (44 pages)

[DVD VCR Combo Sanyo FWZV475F Owner's Manual](#)

Dvd recorder/vcr line-in recording (no tuner) (96 pages)

[DVD VCR Combo Sanyo FWZV475F Quick Start](#)

Dvd recorder/vcr line-in recording (no tuner) (2 pages)

[DVD VCR Combo Sanyo DVC-2500 Instruction Manual](#)

Dvd player + video cassette recorder (38 pages)

[DVD VCR Combo Sanyo DVR-V100E User Manual](#)

Dvd recorder + vcr (62 pages)

[DVD VCR Combo Sanyo HV-DX3E Instruction Manual](#)

Dvd player + video cassette recorder (64 pages)

[DVD VCR Combo Sanyo HV-DX3E Service Manual](#)

(55 pages)

[DVD VCR Combo Sanyo DVR-V100E Service Manual](#)

Dvdr + vcr combi (49 pages)

[DVD VCR Combo Sanyo DVW-7100a Instruction Manual](#)

Dvd player & video cassette recorder (44 pages)

Summary of Contents for Sanyo SCP SCP-2700

Page 1 Only cassettes marked can be used with this DVD+VCR. As an E[®] Partner, NERGY SANYO has determined that this product or product model meets the E[®] NERGY guidelines for energy efficiency. Please read this manual carefully before connecting your DVD+VCR and operating it for the first time.

Page 2: Safety Precautions

Safety Precautions CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of

uninsulated dangerous voltage within the product's enclosure that may be of...

[Page 3: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL. AND THOSE MARKED ON THE PRODUCT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE. This product has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard.

[Page 4: Table Of Contents](#)

Table of Contents Introduction Safety Precautions2 IMPORTANT SAFETY INSTRUCTIONS ..3 Table of Contents .

[Page 5: Before Use](#)

Before Use Playable Discs (8 cm/12 cm disc) Audio CD (8 cm/12 cm disc) In addition, this unit can play a CD-R or CD-RW that contains audio titles or MP3 files. Notes - Depending on the conditions of the recording equipment or the CD-R/RW disc itself, some CD-R/RW discs cannot be played on the unit.

[Page 6: Precautions](#)

Before Use (Continued) Precautions Handling the unit When shipping the unit The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packaged at the factory. When setting up the unit The picture and sound of a nearby TV, VCR, or radio may be distorted during playback.

[Page 7: Front Panel](#)

Front Panel Disc Tray (DVD deck) Insert a disc here. Point the DVD+VCR remote control here. Shows the current status of the DVD+VCR. OPEN/CLOSE (Z Z) Opens or closes the disc tray. STOP (x x) Stops playback of disc. PLAY (B B) Starts playback of a disc in the DVD deck.

[Page 8: Display Window](#)

Display Window The DVD deck is selected. A disc is in the DVD deck. (Lights when a disc is in the DVD deck and Flashes when no disc.) Indicates repeat mode. DVD to VCR copy is in progress. DVD+VCR is in timer recording or a timer recording is programmed.(VCR part only) A cassette is in the VCR deck.

[Page 9: Remote Control](#)

Remote Control DVD/VCR select button Select the output source (DVD or VCR) to view on the TV screen. POWER Switches DVD+VCR ON and OFF. TV/VCR To view channels selected by the VCR tuner or by the TV tuner. DISPLAY, CLK/CNT Accesses On-Screen display.

[Page 10: Rear Panel](#)

Rear Panel DVD/VCR OUT (VIDEO/AUDIO (Left/Right)) Connect to a TV with video and audio inputs. VCR IN LINE 1 (VIDEO IN/AUDIO IN (Left/Right)) Connect the audio/video output of an external source (Audio system, TV/Monitor, Another VCR). S-VIDEO OUT (DVD OUT) Connect to a S-Video Input on TV.

[Page 11: Connections](#)

Connections Tips Depending on your TV and other equipment you wish to connect, there are various ways you could connect the DVD+VCR. Use connections described on pages 11-13. Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.

[Page 12: Basic Tv Connections](#)

Connections (Continued) Basic TV Connections Make one of the following connections, depending on the capabilities of your existing equipment. RF coaxial connection Connect the RF.OUT jack on the DVD+VCR to the antenna in jack on the TV using the 75-ohm Coaxial Cable supplied (R).

[Page 13](#) Connections (Continued) Optional, Preferred TV Connections (Continued) Note You can ONLY listen to DVD playback using COAXIAL (X) and AUDIO OUT (A2) connections. The tuner

and VCR will still be heard through the RF.OUT (R) or DVD/VCR AUDIO OUT (A1) jacks. (See page 12.) Connecting to an amplifier equipped with two channel analog stereo or Dolby Surround Connect the Left and Right AUDIO OUT (or DVD/VCR...

[Page 14: Before Operation - Vcr Part](#)

Before Operation - VCR Part On-Screen Display (OSD) Some of these functions will be displayed every time the VCR is operated. ① ② ③ ④ PLAY HI-FI CH 4 STEREO JUL 5 , SAT 2:15 PM ⑥ ⑦ ① TAPE SPEED DISPLAY Shows the current tape speed.

[Page 15: Setting The Vcr Setup Menu](#)

Before Operation - VCR Part (Continued) Setting the VCR Setup Menu Press MENU and the MAIN menu will appear. Press v v /V V to select the SETUP menu, then press SELECT/ENTER. The SETUP menu will appear. Press v v /V V to choose a desired option on the SETUP menu.

[Page 16: Setting The Clock](#)

Before Operation - VCR Part (Continued) Setting the Clock The DVD+VCR gives you two ways to set the time and date: the Auto Clock Feature or manually. The Auto Clock Feature enables the DVD+VCR to set up the clock when the DVD+VCR is turned off. Things to know before starting The clock uses the 12-hour system.

[Page 17: Before Operation - Dvd Part](#)

Before Operation - DVD Part Caution: Before using the remote control, press the DVD button to select the device to be operated. General Explanation This manual gives basic instructions for operating the DVD+VCR. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol appears on the TV screen, indicating that the operation is not permitted by the...

[Page 18: Initial Settings](#)

Before Operation - DVD Part (Continued) Initial Settings In this menu system, there are several ways to customize the settings provided. Most menus consist of three levels to set up the options, but some require greater depth for the variety of settings. If you press SETUP, only the first level of the menu system will appear on the TV screen.

[Page 19: Audio](#)

Before Operation - DVD Part (Continued) AUDIO Each DVD disc has a variety of audio output options. Set the player's Audio Output according to the type of audio system you use. AUDIO Dolby Digital Bitstream Bitstream MPEG Sample Freq. 48 kHz Vocal Move Dolby Digital...

[Page 20: Lock](#)

Before Operation - DVD Part (Continued) LOCK LOCK Rating Unlock Password Country Code Move Rating Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain Parental Control information that applies to the complete disc or to certain scenes on the disc.

[Page 21: Operation With Tape](#)

Operation with tape Normal Playback Preparation: Turn on the TV. Tune the TV to the DVD+VCR output channel (CH 3 or 4) or set the TV's source selector to VIDEO. If a direct VIDEO/AUDIO connection is made between the DVD+VCR and the TV, set the TV's source selector to VIDEO. Set the Output Source to VCR as shown in "Setting the Output Source"...

[Page 22: Normal Recording](#)

Operation with tape(Continued) Normal Recording Preparation: Turn on the power of both the DVD+VCR and TV. Tune the TV to the DVD+VCR output channel (CH 3 or 4) or set the TV's source selector to VIDEO. If a direct VIDEO/AUDIO connection is made between the DVD+VCR and the TV, set the TV's source selector to VIDEO.

[Page 23: Timer Recording](#)

Operation with tape(Continued) 1 1 0 0 Use V V to choose the SPEED option. Use b b /B B to choose the desired recording speed (AUTO, SP or SLP). AUTO mode determines how long tape is left and switches speed from SP to SLP, if necessary, to complete recording the program.

[Page 24: Instant Timer Recording](#)

Operation with tape (Continued) Instant Timer Recording Instant Timer Recording allows you to make a recording easily of a preset length without using the program timer. Preparation: Turn on the power of both the DVD+VCR and the TV. Be sure the TV is tuned to the DVD+VCR output channel (3 or 4). If a direct VIDEO/AUDIO connection is made between the DVD+VCR and the TV, set the TV's source selector to VIDEO.

[Page 25: Vhs Hi-Fi Stereo System/Mts Broadcast](#)

Operation with tape (Continued) VHS Hi-Fi Stereo System/ MTS Broadcast This DVD+VCR is equipped with the VHS Hi-Fi audio sound system for recording and playback. The information below gives a brief description of Hi-Fi audio and how to record and play a tape in the Hi-Fi audio mode. Playback with Hi-Fi Stereo Audio Sound A stereo TV with AUDIO/VIDEO input jacks or a stereo audio system is required for correct stereo playback.

[Page 26: Tape Counter Memory Feature](#)

Operation with tape (Continued) Tape Counter Memory Feature Real-Time Counter Shows length of tape run in hours, minutes, and seconds. Press CLK/CNT to select the real-time counter display. Every press of CLK/CNT changes the TV screen as illustrated below. 2:15 AM 0:05:25 CLOCK...

[Page 27: Operation With Dvd](#)

Operation with DVD Playing DVD Playback Setup Turn on the TV and select the video input source connected to the DVD+VCR. Audio system: Turn on the audio system and select the input source connected to the DVD+VCR. Set the Output Source to DVD as shown in "Setting the Output Source"...

[Page 28: Still Picture And Frame-By-Frame Playback](#)

Operation with DVD (Continued) General Features (Continued) Still Picture and Frame-by-Frame Playback 1 Press PAUSE/STEP (X) during playback. The DVD+VCR will now go into PAUSE mode. 2 You can advance the picture frame by frame by pressing PAUSE/STEP (X) repeatedly on the remote control.

[Page 29: Zoom](#)

Operation with DVD (Continued) General Features (Continued) Zoom The Zoom function allows you to enlarge the video image and to move through the enlarged image. 1 Press ZOOM during playback or still playback to activate the Zoom function. The square frame will be displayed in the right bottom of the picture.

[Page 30: Operation With Audio Cd And Mp3 Discs](#)

Operation with Audio CD and MP3 Discs Playing an Audio CD and MP3 Discs The DVD+VCR can play an audio CD. Also, the DVD+VCR can play MP3 formatted recordings on CD-ROM, CD-R or CD-RW discs. Before playing MP3 recordings, read the notes on MP3 Recordings on the right side of this page.

[Page 31: Pause](#)

Operation with Audio CD and MP3 Discs (Continued) Pause 1 Press PAUSE/STEP (X) during playback. 2 To return to playback, press PLAY(H) or press PAUSE/STEP (X) again. Moving to another Track Press BACKWARD (.) or FORWARD (>) briefly during playback to go to the next track or to return to the beginning of the current track.

[Page 32: Programmed Playback](#)

Programmed Playback Programmed Playback with Audio CD and MP3 Discs The Program function enables you to store your favorite tracks from any disc in the player memory. Program can contain 99 tracks (Audio CD) or 300 tracks (MP3). Insert an Audio CD or MP3 disc. Audio CD or MP3 menu will appear.

[Page 33: Troubleshooting](#)

Troubleshooting Check the following guide for the possible cause of a problem before contacting service. Symptom The power cord is disconnected. No power. No disc is inserted. The power is on, but the DVD+VCR does not work. No tape is inserted.

[Page 34](#) Troubleshooting (Continued) Symptom Some channels are Those channels were deleted with the skipped over when CH. ADD/DEL option. using CH/TRK (v/V) Picture and sound of Antenna or cables are loose. broadcasting channel are weak or missing. Wrong TUNING BAND option is being used.

[Page 35: Language Code List](#)

Language Code List Enter the appropriate code number for the initial settings "Disc Audio", "Disc Subtitle" and/or "Disc Menu" (See page 18). Language Code Language Abkhazian 6566 Fiji Afar 6565 Finnish Afrikaans 6570 French Albanian 8381 Frisian Amharic 6577 Galician Arabic 6582 Georgian...

[Page 36: Country Code List](#)

Country Code List Enter the appropriate code number for the initial setting "Country Code" (See page 20). Country Code Country Afghanistan El Salvador Albania Equatorial Guinea Algeria Eritrea American Samoa Estonia Andorra Ethiopia Angola Falkland Islands Anguilla Faroe Islands Antarctica Fiji Antigua and Barbuda Finland...

[Page 37: Specifications](#)

Specifications General Power requirements Power consumption Dimensions (approx.) Mass (approx.) Operating temperature Operating humidity Signal system Inputs ANTENNA IN VHS VIDEO IN VHS AUDIO IN Outputs VIDEO OUT S-VIDEO OUT COMPONENT VIDEO OUT (PROGRESSIVE SCAN) Audio output (digital audio) Audio output (analog audio) RF OUT VCR Specifications Head system...

This manual is also suitable for:

[Dvc-2700](#)