



# Before Operation - Dvd Part; General Explanation; On-Screen Display - Sanyo SCP SCP-2700 Instruction Manual

Dvd player + video cassette recorder



1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37

---

•

[Table of Contents](#)

•

Troubleshooting

•

## Bookmarks








## Before Operation - DVD Part

### Caution:

Before using the remote control, press the DVD button to select the device to be operated.

## Before Operation - DVD Part

### General Explanation



This manual gives basic instructions for operating the DVD+VCR. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol  **Caution:** Before using the remote control, press the DVD button to select the device to be operated.

**General Explanation**

This manual gives basic instructions for operating the DVD+VCR. Some DVDs require specific operation or allow only limited operation during playback. When this

**3 Use </> to change the**  
The number buttons can numbers (e.g., title number) press SELECT/ENTER to

### Temporary Feedback File

-  Title Repeat Title (DVD)
-  Chapter Repeat Chapter (DVD)

# On-Screen Display

General playback status can be displayed on the TV screen. Some items can be changed on the menu.

## On-screen display operation

1 Press **DISPLAY** during playback.

2 2

Use **v/V** to select an item.

The selected item will be highlighted.

**DVD**

**Items**

Title Number

Chapter Number

Time search

0:20:09

Audio language

1 ENG

and Digital Audio

5.1 CH

Output mode

Subtitle language

Angle

Sound

3D SUR

**Function**

General playback status can be displayed on the TV screen. Some items can be changed on the menu.

Shows the current title number and total number of

1 / 3

titles, and skips to the desired title number.

Shows the current chapter number and total number of

1 / 12

chapters, and skips to the desired chapter number.

Shows the elapsed playing time, and

searches the point by the elapsed time directly.

Shows the current audio soundtrack language,

encoding method, and channel number, and

D

changes the setting.

Shows the current subtitles language, and

1 ENG

changes the setting.

Shows the current angle number and total number of

1 / 1

angles, and changes the angle number.

Shows the current sound mode, and

changes the setting.

3 3

Use **b/B** to change the setting of an item.

The number buttons can be also be used for setting

numbers (e.g., title number). For some functions,

press **SELECT/ENTER** to execute the setting.

**Temporary Feedback Field Icons**

Repeat Title (DVD)

Title

Repeat Chapter (DVD)

Chapter

Repeat A-B

A - B

Repeat Off


off

## Before Operation - DVD Part

**Caution:**

Before using the remote control, press the **DVD** button to select the device to be operated.

## General Explanation

This manual gives basic instructions for operating the DVD+VCR. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol  appears on the TV screen, indicating that the operation is not permitted by the DVD+VCR or is not available on the disc.

## On-Screen Display

General playback status can be displayed on the TV screen. Some items can be changed on the menu.

Shows the current title number and total number of

## On-screen display operation

1 Press **DISPLAY** during playback.

titles, and skips to the desired title number.

Shows the current chapter number and total number of

chapters, and skips to the desired chapter number.

Shows the elapsed playing time, and

searches the point by the elapsed time directly.

Shows the current audio soundtrack language,

encoding method, and channel number, and

D

changes the setting.

Shows the current subtitles language, and

1 ENG

changes the setting.

Shows the current angle number and total number of

angles, and changes the angle number.

Shows the current sound mode, and

changes the setting.

Time search

Shows the elapsed playing time, and

searches the point by the elapsed time directly.

Shows the current audio soundtrack language,

encoding method, and channel number, and

changes the setting.

Shows the current subtitles language, and

changes the setting.

Shows the current angle number and total number of







angles, and changes the angle number.

Shows the current sound mode, and

changes the setting.

3 Use **◀▶** to change the number buttons can numbers (e.g., title number) press **SELECT/ENTER** to

## Temporary Feedback Field

-  Title Repeat Title (DVD)
-  Chapter Repeat Chapter (DVD)
-  A - B Repeat A-B
-  off Repeat Off
-  Resume play from the
-  Action prohibited or not

## Notes

- Some discs may not provide on-screen display examples.
- If no button is pressed for a certain period, the display disappears.
- You can change the desired mark appears on the On-screen display.

Resume play from this point  
Action prohibited or not available

### Notes

Some discs may not provide all of the features on the on-screen display example shown below.

If no button is pressed for 10 seconds, the on-screen display disappears.

You can change the desired status only when "b B" mark appears on the On-screen display menu item.

## Before Operation - DVD Part

### Selection Method:

Before using the remote control, press the **DVD** button to select the device to be operated.

b / B, or

Numbers, SELECT/ENTER

b / B, or

Numbers, SELECT/ENTER

AUDIO

b / B, or

SUBTITLE


b / B, or

ANGLE

b / B







17

### General Explanation

This manual gives basic instructions for operating the DVD+VCR. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol  appears on the TV screen, indicating that the operation is not permitted by the DVD+VCR or is not available on the disc.

**3 Use </> to change the**  
The number buttons can numbers (e.g., title number) press SELECT/ENTER to

### Temporary Feedback File

-  Repeat Title (DVD)
-  Repeat Chapter (DVD)
-  Repeat A-B
-  Repeat Off
-  Resume play from the
-  Action prohibited or not available

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
14  
15  
16  
17  
18  
19  
20  
21

Quick Links:

[Front Panel](#)

[Remote Control](#)

[Troubleshooting](#)

## Related Manuals for Sanyo SCP SCP-2700

[Cell Phone Sanyo Juno User Manual](#)

Sprint phone (160 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

Sprint cell phone (160 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

(139 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)



(139 pages)

[Cell Phone Sanyo SCP2700 Operating Manual](#)

(72 pages)

[DVD VCR Combo Sanyo FWDV225F Owner's Manual](#)

Dvd player/vcr with line-in recording (28 pages)

[DVD VCR Combo Sanyo FWZV475F Owner's Manual](#)

Dvd recorder/vcr line-in recording (no tuner) (96 pages)

[DVD VCR Combo Sanyo FWDV225F Quick Start](#)

(2 pages)

[DVD VCR Combo Sanyo HV-DX300A Instruction Manual](#)

Dvd player + video cassette recorder (34 pages)

[DVD VCR Combo Sanyo DVW-7200 Instruction Manual](#)

Dvd player & video cassette recorder (44 pages)

[DVD VCR Combo Sanyo DVW-7200 Quick Start Manual](#)

Sanyo dvw-7200: quick start (2 pages)

[DVD VCR Combo Sanyo DVW-7000 Instruction Manual](#)

Dvd video player & 4-head hi-fi stereo vcr (40 pages)

[DVD VCR Combo Sanyo HVR-DX610 Instruction Manual](#)

(66 pages)

[DVD VCR Combo Sanyo FWZV475F Quick Start](#)

Dvd recorder/vcr line-in recording (no tuner) (2 pages)

[DVD VCR Combo Sanyo DVW-7000 Quick Start Manual](#)

Dvd player + video cassette recorder (2 pages)

[DVD VCR Combo Sanyo DVR-V100E Service Manual](#)

Dvdr + vcr combi (49 pages)

## Related Content for Sanyo SCP SCP-2700

[HV-DX1E Dvd Part](#)

Sanyo HV-DX1E

[HVR-DX625 Disc Operation In Dvd±R, Dvd-Rw Disc](#)

Sanyo HVR-DX625

[DVR-V100E Dvd Playback](#)

Sanyo DVR-V100E

[FWDV225F Changing The Dvd Settings \(In The Setup Menu\)](#)

Sanyo FWDV225F

[FWZV475F Switching Dvd / Vcr Mode](#)

Sanyo FWZV475F

[HVR-DX610 About Dvd Recording](#)

Sanyo HVR-DX610

[HV-DX3E Dvd Playback](#)

Sanyo HV-DX3E

[DVR-V100E Front Part Schematic Diagram \(Dvdr+Vcr\)](#)

Sanyo DVR-V100E

This manual is also suitable for:

Dvc-2700