

Pause; Operation With Audio Cd And Mp3 Discs; Moving To Another Track; Repeat Track/All/Off - Sanyo SCP SCP-2700 Instruction Manual

Dvd player + video cassette recorder

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Operation with Audio CD and MP3 Discs (Continued)

Pause

CD
MP3

- 1 Press PAUSE/STEP (X) during playback.
- 2 To return to playback, press PLAY(H) or press PAUSE/STEP (X) again.

Pause  

Moving to another Track Press PAUSE/STEP (||) during playback.

CD
MP3

- 2 To return to playback, press PLAY(D>) or press PAUSE/STEP (||) again.

Press BACKWARD (.) or FORWARD (>) briefly during playback to go to the next track or to return to the beginning of the current track.

Moving to another Track

 

Operation with Audio CD and MP3 Discs (Continued)

Random  

- 1 Press RANDOM during playback. The unit automatically begins random playback. "Random" appears on the screen.
- 2 To return to normal playback, press PLAY(D>) repeatedly until "Random" disappears from the screen.

Press BACKWARD (.) twice briefly to step back to the previous track.

To go directly to any track, enter the track number using the numbered buttons (0-9) during playback.

Repeat Track/All/Off

Operation with Audio CD and MP3 Discs (Continued)

1 To repeat the track currently playing, press REPEAT.

The Repeat icon and "TRACK" appears on the menu screen.

2 To repeat all tracks on a disc, press REPEAT a second time.

The Repeat icon and "ALL" appears on the menu screen.

3 To cancel Repeat mode, press REPEAT a third time.
2 To return to playback, press PLAY (▷) or press PAUSE/STEP (||) again.

Search

CD
MP3

Moving to another Track

CD MP3

1 Press and hold BACKWARD (◀) or FORWARD (▶) briefly

(>) for about two seconds during playback. The player will now go into SEARCH mode.

2 Press and hold BACKWARD (◀) or FORWARD (▶) repeatedly to select the required speed: mX2, mX4, mX8 (backward) or MX2, MX4, MX8 (forward).

Search speed and direction are indicated on the menu screen.

3 To exit SEARCH mode, press PLAY (▷).

Note The DVD+VCR mutes sound during search mode of MP3 files.

1 To repeat the track currently playing, press REPEAT.
The Repeat icon and "TRACK" appears on the menu screen.

2 To repeat all tracks on a disc, press REPEAT a second time.
The Repeat icon and "ALL" appears on the menu screen.

3 To cancel Repeat mode, press REPEAT a third time.

Random

CD
MP3

Search

CD MP3

1 Press and hold BACKWARD (◀) or FORWARD (▶) briefly

for about two seconds during playback. The player will now go into SEARCH mode.

2 Press and hold BACKWARD (◀) or FORWARD (▶) repeatedly to select the required speed: ◀◀X2, ◀◀X4, ◀◀X8 (backward) or ▶▶X2, ▶▶X4, ▶▶X8 (forward).

Search speed and direction are indicated on the menu screen.

3 To exit SEARCH mode, press PLAY (▷).

Note The DVD+VCR mutes sound during search mode of MP3 files.

To repeat a sequence in a title:

1 Press A-B at your chosen starting point.

The Repeat icon and "A" appears on the menu screen.

2 Press A-B again at your chosen end point. (after more than 3 seconds)

The Repeat icon and "A - B" appears on the menu screen, and the repeat sequence begins.

Random

CD MP3

1 Press RANDOM during playback.
The unit automatically begins "Random" appears on the menu screen.

2 To return to normal playback repeatedly until "Random" disappears on the menu screen.

Repeat A-B

CD

To repeat a sequence in a title:

1 Press A-B at your chosen starting point.
The Repeat icon and "A" appears on the menu screen.

2 Press A-B again at your chosen end point. (after more than 3 seconds)

The Repeat icon and "A - B" appears on the menu screen, and the repeat sequence begins.

3 To exit the sequence and return to normal playback, press A-B again.

3 To exit the sequence and return to normal play, press

A-B again.

31 |

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
28
29
30
31
32
33
34
35

Quick Links:

[Front Panel](#)

[Remote Control](#)

[Troubleshooting](#)

Related Manuals for Sanyo SCP SCP-2700

[Cell Phone Sanyo Juno User Manual](#)

Sprint phone (160 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

Sprint cell phone (160 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

(139 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

(139 pages)

[Cell Phone Sanyo SCP2700 Operating Manual](#)

(72 pages)

[DVD VCR Combo Sanyo FWDV225F Owner's Manual](#)

Dvd player/vcr with line-in recording (28 pages)

[DVD VCR Combo Sanyo FWZV475F Owner's Manual](#)

Dvd recorder/vcr line-in recording (no tuner) (96 pages)

[DVD VCR Combo Sanyo FWDV225F Quick Start](#)

(2 pages)

[DVD VCR Combo Sanyo HV-DX300A Instruction Manual](#)

Dvd player + video cassette recorder (34 pages)

[DVD VCR Combo Sanyo DVW-7200 Instruction Manual](#)

Dvd player & video cassette recorder (44 pages)

[DVD VCR Combo Sanyo DVW-7200 Quick Start Manual](#)

Sanyo dvw-7200: quick start (2 pages)

[DVD VCR Combo Sanyo DVW-7000 Instruction Manual](#)

Dvd video player & 4-head hi-fi stereo vcr (40 pages)

[DVD VCR Combo Sanyo HVR-DX610 Instruction Manual](#)

(66 pages)

[DVD VCR Combo Sanyo FWZV475F Quick Start](#)

Dvd recorder/vcr line-in recording (no tuner) (2 pages)

[DVD VCR Combo Sanyo DVW-7000 Quick Start Manual](#)

Dvd player + video cassette recorder (2 pages)

[DVD VCR Combo Sanyo DVR-V100E Service Manual](#)

Dvdr + vcr combi (49 pages)

Related Content for Sanyo SCP SCP-2700

[HV-DX1E Pause](#)

Sanyo HV-DX1E

[DVW-7100 Pause](#)

Sanyo DVW-7100

[DVW-7000 Pause](#)

Sanyo DVW-7000

[DVC-2500 To Pause The Recording](#)

Sanyo DVC-2500

[DVC-2000 To Pause The Recording](#)

Sanyo DVC-2000

[DVC-2600 Pause](#)

Sanyo DVC-2600

This manual is also suitable for:

[Dvc-2700](#)