 
Precautions; Before Use; Notes On Discs; About Symbols - Sanyo SCP SCP-2700 Instruction Manual

Dvd player + video cassette recorder


```
1
2
3
Table Of Contents
4
5
6
7
8
9
10
11
12
13
14
15
16
17
```


19 20 21 22 23 24	
21222324	
222324	
23 24	
24	
25	
26	
27	
28	
29	
30	
31	
32	
33	
34	
35	
36	
37	

 Table of Contents







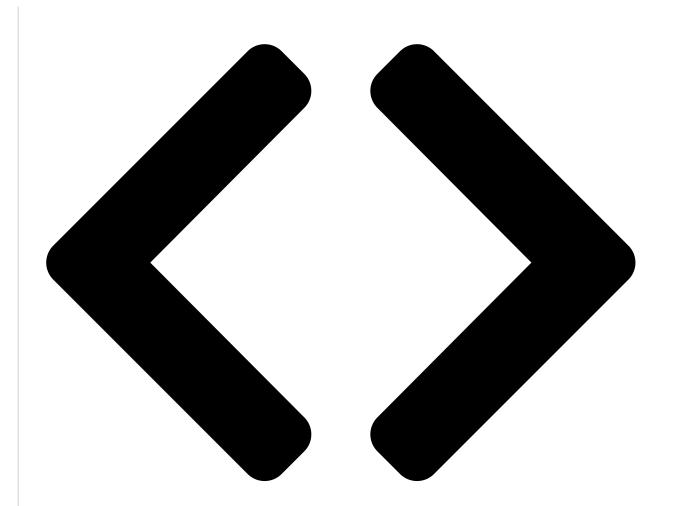

Before Use (Continued)

Precautions

Handling the unit

When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packaged at the factory.

When setting up the unit

The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc.

To keep the surface clean

Do not use volatile liquids, such as insecticide spray,



near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

Cleaning the unit

To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

To obtain a clear picture

The DVD+VCR is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor.

Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.)

For details, please contact your nearest dealer.



Notes on Discs

Handling discs

Do not touch the playback side of the disc.

 
Hold the disc by the edges so that fingerprints will not get on the surface.

Do not stick paper or tape on the disc.

Storing discs

After playing, store the disc in its case.

Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.



Cleaning discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

Yes

Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.



anualsLib.co

About Symbols

About the _____symbol display

" may appear on the TV screen during operation.
This icon means the function explained in this owner's manual is not available on that specific DVD video disc.

About the disc symbols for instructions

applicable onl	e title has one of the following symbols are y to those discs represented by the symbol.	
Audio CDs.		
MP3 Discs.		
You must seleved VCR) to view of If you want to the until DVD indicts ource of DVD do If you want to the Press VCR on the until VCR indicts ource of VCR do Note If you insert a seleved in the volume of VCR do Note If you insert a seleved in th	he Output Source oct one of your output sources (DVD or on the TV screen. o view output source of DVD deck: the remote or DVD/VCR on the front panel ator in the display window lights and output eck is viewed on the TV screen. o view output source of VCR deck: the remote or DVD/VCR on the front panel eator in the display window lights and output eck is viewed on the TV screen. disc while the DVD+VCR is in the VCR	
automatically	D+VCR will switch to DVD mode /. cassette tape without an erasure	
	o intact while the DVD+VCR is in the e DVD+VCR will switch to VCR mode /.	
No		0
	Table of Contents	

Previous Page Next Page

Quick Links:			
Front Panel			
Remote Control			
Troubleshooting			

Related Manuals for Sanyo SCP SCP-2700

Cell Phone Sanyo Juno User Manual
Sprint phone (160 pages)
Cell Phone Sanyo SCP-2700 User Manual
Sprint cell phone (160 pages)
Cell Phone Sanyo SCP-2700 User Manual
(139 pages)
Cell Phone Sanyo SCP-2700 User Manual

(139 pages)

Cell Phone Sanyo SCP2700 Operating Manual

(72 pages)

DVD VCR Combo Sanyo FWDV225F Owner's Manual

Dvd player/vcr with line-in recording (28 pages)

DVD VCR Combo Sanyo FWZV475F Owner's Manual

Dvd recorder/vcr line-in recording (no tuner) (96 pages)

DVD VCR Combo Sanyo FWDV225F Quick Start

(2 pages)

DVD VCR Combo Sanyo HV-DX300A Instruction Manual

Dvd player + video cassette recorder (34 pages)

DVD VCR Combo Sanyo DVW-7200 Instruction Manual

Dvd player & video cassette recorder (44 pages)

DVD VCR Combo Sanyo DVW-7200 Quick Start Manual

Sanyo dvw-7200: quick start (2 pages)

DVD VCR Combo Sanyo DVW-7000 Instruction Manual

Dvd video player & 4-head hi-fi stereo vcr (40 pages)

DVD VCR Combo Sanyo HVR-DX610 Instruction Manual

(66 pages)

DVD VCR Combo Sanyo FWZV475F Quick Start

Dvd recorder/vcr line-in recording (no tuner) (2 pages)

DVD VCR Combo Sanyo DVW-7000 Quick Start Manual

Dvd player + video cassette recorder (2 pages)

DVD VCR Combo Sanyo DVR-V100E Service Manual

Dvdr + vcr combi (49 pages)

Related Content for Sanyo SCP SCP-2700

DVW-7000 Safety Precautions

Sanyo DVW-7000

DVC-2500 Safety Precautions

Sanyo DVC-2500

DVW-7200 Precautions

Sanyo DVW-7200

DVC-2000 Safety Precautions

Sanyo DVC-2000

DVC-2600 Safety Precautions

Sanyo DVC-2600

This manual is also suitable for:

Dvc-2700