



Sanyo DP26671 Owner's Manual

26" and 31.5" hdtv lcd/dvd combo

1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Features](#)

[2 Remote Control](#)

[3 Antenna Connections](#)

[4 Starting Setup](#)


[5 Connections to Other Equipment](#)

[6 Problems and Troubleshooting](#)

7 Specifications

[Download this manual](#)

See also: [Service Manual](#)

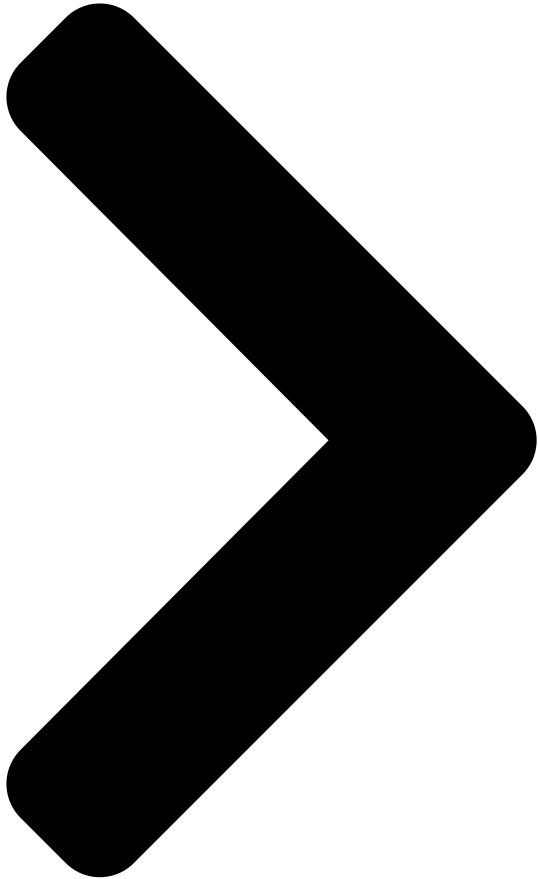

56Q0221A_eng.indd 1
56Q0221A_eng.indd 1
J56Q0221A
1/8/11 5:31:34 PM
1/8/11 5:31:34 PM



SAN 



Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo DP26671

[TV DVD Combo Sanyo DP26671 Service Manual](#)

26" hdtv lcd / dvd combo (78 pages)

[LCD TV Sanyo DP26671 Service Manual](#)

26" hdtv lcd/dvd combo (76 pages)

[TV DVD Combo Sanyo DP32671 Service Manual](#)

32 inch hdtv lcd/dvd combo (81 pages)

[TV DVD Combo Sanyo DP32671 Service Manual](#)

32" hdtv lcd / dvd combo factory code z6cf (80 pages)

[TV DVD Combo Sanyo DP26670 Owner's Manual](#)

Hdtv lcd / dvd combo (41 pages)

[TV DVD Combo Sanyo DP26670 Service Manual](#)

18.5" hdtv lcd (75 pages)

[TV DVD Combo SANYO LCD-22VT10DVD Instruction Manual](#)

Lcd tv with dvd player (43 pages)

[TV DVD Combo Sanyo LCD-19VT11DVD Service Manual](#)

Lcd tv dvd built-in (92 pages)

[TV DVD Combo Sanyo LCD-22VT11DVD Service Manual](#)

Lcd tv dvd built-in (93 pages)

[TV DVD Combo Sanyo LCD-19VT11DVD Service Manual](#)

Lcd tv dvd built-in (92 pages)

Summary of Contents for Sanyo DP26671

[Page 1](#) 56Q0221A_eng.indd 1 56Q0221A_eng.indd 1 J56Q0221A 1/8/11 5:31:34 PM 1/8/11 5:31:34 PM...

[Page 2: Warranty](#)

TV to be free from manufacturing defects in materials and workmanship under normal use and conditions for parts and labor. For the FIRST 90 DAYS from the date of original retail purchase, Sanyo Manufacturing Corporation will replace any defective TV via exchange at the retailer. To ensure proper warranty application, keep the original-dated-sales receipt for evidence of purchase.

[Page 3: Trademarks](#)

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. "As an Energy Star® Partner, Sanyo Manufacturing Corporation has determined that this product meets the EnergyStar® guidelines for energy efficiency."...

[Page 4](#) Laser Notice No. 50, dated June 24, 2007. RECYCLING OF SANYO TELEVISIONS: SANYO television customers should contact MRM Recycling at 888-769-0149 or visit their website at www.mrmrecycling.com regarding SANYO's waste management plan.

[Page 5](#) 15) Apparatus should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the apparatus. 16) An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits.

[Page 6: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS 23) When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.

[Page 7: Safety Precautions](#)

The unit emits heat when in operation. Do not place any covers or blankets on the unit, this may cause overheating. Do not block ventilation holes, or set up near radiators. Do not place in direct sunshine. When placing on a shelf leave 10 cm (4 inches) free space around the entire unit. Notes when mounting the LCD TV/DVD on a wall If the unit is to be mounted on the wall, contact the retailer where you purchased the LCD TV/DVD for advice, and have the equipment professionally installed.

[Page 8: How To Attach The Stand](#)

How to attach the stand NOTE: • Unplug the AC cord from the AC INPUT terminal. • Before beginning this process, assure that the TV is laid on a clean, safe, and cushioned surface to avoid any damage to the unit. •...

[Page 9: Features](#)

LCD color TV With DVD/CD player Unique space saving design combines a 26"/32" LCD color TV and a DVD/CD player. A DVD disc has much more capacity, but is the same size as an audio CD disc. The Picture/Audio quality of a DVD exceeds other software.

[Page 10: Table Of Contents](#)

Contents Before using your unit WARRANTY ...2 TRADEMARKS ...3 IMPORTANT SAFETY INSTRUCTIONS ...5 SAFETY PRECAUTIONS ...7 IMPORTANT NOTICE ...7 How to attach the stand ...8 How to remove the stand ...8 Features ...9 Contents ...10 Disc...11 Parts and functions ...13 Remote control ...14 Power source ...15 Antenna connections ...16..

[Page 11: Disc](#)

Playable discs Disc type and logo mark DVD Video CD-DA The following discs are also available. • DVD-R/RW discs of DVD video format. • CD-R/RW discs of MP3/WMA/JPEG. Region Number Region number (Regional restriction code) is built-in to the unit and DVD video discs. Region number "1"...

[Page 12](#) Disc ■ Title/Chapter/Track PC-created disc • You may not be able to play discs recorded using a personal computer or recorder for disc compatibilities, scratches or marks on the disc, dirty lenses of the unit or condensation and so on. •...

[Page 13: Parts And Functions](#)

Front Remote sensor POWER Indicator Red : Standby Green : On Rear side AC INPUT jack VIDEO2 IN jack VAR. (VARIABLE) AUDIO OUT jacks 56Q0221A_eng.indd 13 56Q0221A_eng.indd 13 Parts and functions Left side DISC slot To display the menu screen. Press MENU button to display the menu screen.

[Page 14: Remote Control](#)

Remote control 56Q0221A_eng.indd 14 56Q0221A_eng.indd 14 POWER Power On/Off DISPLAY Call TV information Call DVD information TV/DVD Switch between TV and DVD (EJECT) Eject a disc 0-9/- Direct channel selection of TV Input setting Enter a password Input "-" for digital channels SLEEP Sleep timer SETUP/...

[Page 15: Power Source](#)

Remote control Inserting Batteries Open the battery compartment cover in the direction of the arrow. Operation • Aim the remote control at the remote sensor and press control buttons to operate. • Operate the remote control within a 30° angle on either side of the remote sensor, up to a distance of approximately 15 feet.

[Page 16: Antenna Connections](#)

Antenna connections If you are using an indoor or outdoor antenna, follow the instructions

below that correspond to your antenna system. If you are using a Cable TV service, see "Cable TV connections". Combination VHF/UHF Antenna (Single 75 ohm cable) Antenna Jack Cable TV connections...

[Page 17: Tv Operation](#)

Starting setup The Auto Setup menu appears the first time you turn on the TV, and assists you to specify the Air/Cable setting, and program your channels automatically. IMPORTANT: Make sure that the antenna or cable TV system connection is made! To turn on the TV, press POWER (POWER indicator on the front of the unit changes green).

[Page 18: Quick Guide For Menu Operation](#)

DISPLAY Press DISPLAY to display the current information on the screen. When the TV receives a digital signal, the digital information will appear. 62-1 HDTV Moving Picture1 Sleep Timer CH-1 TV-MA Digital English No Program Information is available Full 1080i •...

[Page 19: Convenience Functions](#)

You can change the default settings by pressing the TV MENU button on your remote, then select the one of the icons at the left of the menu - follow the On-Screen prompts to set your preferences. Icon Selected Items Picture Picture Sports...

[Page 20: Memorizing Channels](#)

Memorizing channels This TV is equipped with a channel memory feature which allows channels to skip up or down to the next channel set into memory, skipping over unwanted channels. Before selecting channels, they must be programmed into the TV's memory. To use this TV with an antenna, set the Signal Type option to the Air mode.

[Page 21: Checking The Digital Signal Strength](#)

Clear All All channels are deleted from the channel memory. Select "Channel", then press ► or ENTER. Press ▲ or ▼ to select "Add/Delete", then press ► or ENTER. Press ▲ or ▼ to select "Clear All", then press ► or ENTER.

[Page 22: Setting The V-Chip](#)

Setting the V-Chip An age limitation can be set to restrict children from viewing or hearing violent scenes or pictures that you may choose to exclude. The restriction applies to "TV Rating" and "Movie Rating" if this data is transmitted. You may set this restriction separately.

[Page 23: Closed Caption](#)

Press ◀ or ▶ to set "V-Chip" to "On". Press ▲ or ▼ to select "V-Chip Set (DTV)", then press ► or ENTER. If the TV is not storing the additional rating system, the TV will begin downloading it, which may take some time to be completed.

[Page 24: Setting The Picture Size](#)

Press ▲ or ▼ to select "CC Advanced", then press ► or ENTER. The CC Advanced menu will appear. Press ▲ or ▼ to select the desired item, then press ◀ or ▶ to change the setting. CC Advanced Text Size Auto Text Type Auto...

[Page 25: Preparation](#)

Preparation The following pages describe the setup/ operation in DVD mode. Preparation Before DVD/CD operation, please make the following preparations. Insert the AC cord plug into a standard 120V 60Hz polarized AC outlet. • If the AC cord plug is plugged in for the first time, wait for about 5 seconds before pressing POWER.

[Page 26: Special Playback](#)

Special playback Fast Forward Playback Press SEARCH (u u) during normal playback. Each press of SEARCH (u u) will increase the speed of the search. • To resume normal playback, press PLAY (). Review Playback Press SEARCH (tt) during normal playback. Each press of SEARCH (tt) will increase the speed of the search.

[Page 27: Marking Desired Scenes](#)

Marking desired scenes The TV/DVD stores the points that you want to watch again up to 12 points. You can resume playback from each scene. Marking the scenes Press MARKER during playback. Select the blank Marker using ▲/▼/◀/▶, then press ENTER at the desired scene. •...

[Page 28: Using Home Menu](#)

Using HOME MENU Playing a disc Press SETUP during stop mode. HOME MENU will appear. Press ▲/▼/◀/▶ to select "Disc Audio Settings Navigator", then Play Mode press ENTER Initial Settings Press ▲/▼ to select Disc Navigator Title desired option, then Chapter press ENTER.

[Page 29: Audio Settings Menu](#)

Program playback Press PLAY MODE during playback or stop mode. Play Mode screen will appear. Press ▲/▼ to select "Program", then press ENTER. Press ▲/▼ to select "Create/Edit", then Program Program Step press ENTER. 01. 01 "Create/Edit" display differs, depending on discs or files.

[Page 30: Video Adjust Menu](#)

Video Adjust menu From the Video Adjust menu you can adjust various settings that affect how the picture is presented. Press SETUP during stop mode. HOME MENU will appear. Press ▲/▼/◀/▶ to select "Video Adjust", Audio Settings then press ENTER. Play Mode Initial Settings Press ▲/▼/◀/▶...

[Page 31: Function Setup](#)

Setting Option Digital Audio Out settings Digital Out Dolby Digital Out Dolby Digital Dolby Digital > PCM DTS Out 96kHz PCM Out 96kHz > 48kHz 96kHz MPEG Out MPEG MPEG > PCM Video Output settings TV Screen 4:3 (Letter Box) 4:3 (Pan &...

[Page 32: Parental Control](#)

Parental Control Some discs are specified as not suitable for children. Such discs can be limited not to playback with the unit. How to into the Parental Control menu Press SETUP in stop mode. HOME MENU will appear. Press ▲/▼/◀/▶ to select "Initial Audio Settings Settings", then press...

[Page 33: Language Code List](#)

Language (Language code letter), Language code Japanese (ja), 1001 Bhutani (dz), 0426 English (en), 0514 Esperanto (eo), 0515 French (fr), 0618 Estonian (et), 0520 German (de), 0405 Basque (eu), 0521 Italian (it), 0920 Persian (fa), 0601 Spanish (es), 0519 Finnish (fi), 0609 Chinese (zh), 2608 Fiji (fj), 0610 Dutch (nl), 1412...

[Page 34: Connections To Other Equipment](#)

Connections to other equipment The exact arrangement you use to interconnect various video and audio components to this unit is dependent on the model and features of each component. Check the Owner's Manual provided with each component for the location of video and audio inputs and outputs. To connect the LCD TV/DVD to a VCR Rear of the unit To VIDEO/AUDIO IN...

[Page 35](#) Connections to other equipment To connect an audio system This connection allows you to use an audio amplifier and external speakers, and adjust the audio level using the TV's remote control. To control the audio, turn on the TV and the stereo amplifier, and turn off the TV's built-in speakers (see "Speakers"...

[Page 36](#) Connections to other equipment Using an AV Amplifier with built-in digital surround If you are using an Amplifier with built-in digital surround sound, you can enjoy various audio systems including Dolby Digital Surround audio that sounds just like the movie. Connect an AV amplifier with built-in Dolby Digital decoder, DTS decoder, or MPEG decoder etc.

[Page 37](#) To connect the TV to a PC (Personal Computer) NOTE: Before connecting any cables, disconnect the AC Power Cords of both the TV and Personal Computer from the AC outlets. Connect an RGB cable from the monitor output (a) on your PC to the RGB connector on the TV and tighten the screws.

[Page 38: Reception Disturbances](#)

Reception disturbances Most types of television interference can be remedied by adjusting the height and position of the VHF/ UHF antenna. Outdoor antennas are recommended for best results. The most common types of television interference are shown below. If one of these symptoms appear when the TV is connected to a Cable TV system, the disturbance may be caused by the local Cable TV company broadcast.

[Page 39: Problems And Troubleshooting](#)

Use the following check list for troubleshooting when you have problems with your TV/DVD. Consult your local dealer or service outlet if problems persist. Be sure all connections are properly made when using with other units. SYMPTOMS POWER • Make sure the power cord is plugged in. TV/DVD does not operate.

[Page 40](#) Problems and troubleshooting SYMPTOMS • No disc is inserted. Playback doesn't start. • The disc may be dirty. Clean up the disc. • The unit cannot play CD-ROMs, etc. No picture. • TV/DVD selector is not set correctly. • Check the input selector of the amplifier is set properly. No sound.

[Page 41: Specifications](#)

Model DP26671 GENERAL Power supply: AC 120V 60Hz Power consumption: Operation: 76W Stand by: 0.3W Weight: 6.5 kg (14.3 lbs) Dimensions: Width: 630 mm (24-13/16 inches) Height: 475.8 mm (18-3/4 inches) Depth: 213.3 mm (8-3/8 inches) Operating temperature: 5°C - 40°C...

This manual is also suitable for:

[Dp32671Dp36671](#)