






## Sanyo 1180 User Manual

Portable mp3/wma/smv player



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17

 Table Of Contents



- 

[Table of Contents](#)

•

## Bookmarks

## Quick Links

[1 Battery Management](#)

[Download this manual](#)





DMC 1180/DMC 2020 series MP3/WMA/SMV Player User Guide

# Portable MP3/WMA/SMV Player User Guide

## SANYO DMC 1180/2020 series

[Introduction](#)

[Installing the MP3 Player](#)

[Transferring data to and from the MP3 Player](#)

[Listening to your WMA/MP3 music](#)

[Player Controls](#)

[LCD Display](#)

[Video](#)

[Voice Recorder](#)

[FM Tuner](#)

[Navigation](#)

[Advanced Settings](#)

[Removing the MP3 Player from your computer](#)

[Troubleshooting](#)

[Specifications](#)

[Safety](#)

[Warranty](#)

[Introduction](#)

Thank-you for choosing the Sanyo DMC-1180/2020 MP3 player. Please take a moment to read this instruction booklet so

you will become familiar with the many features of this unit. This device incorporates a portable WMA/MP3/SMV

Player, FM Radio, Voice Recorder and 1 GB (DMC1180 series) or 2GB (DMC2020 series) Mass Storage Device.

***MP3 Player Features:***

WMA/MP3/SMV player

Synchronous lyric display with WMA/MP3 music

Voice recorder

1 of 17

file:///D:/English/guide.htm

5/15/2008 3:39 PM

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Sanyo 1180

[MP3 Player Sanyo HDP-M3000 Instruction Manual](#)

Hdd audio player (24 pages)

[MP3 Player Sanyo DMP-M600 Instruction Manual](#)

Digital memory player (23 pages)

[MP3 Player Sanyo DMC-526/1126 Instruction Manual](#)

Sanyo mp3 player user manual (19 pages)

[MP3 Player Sanyo DMP-M360 Instruction Manual](#)

(30 pages)

[MP3 Player SANYO DMC-526 Instruction Manual](#)

Mp3 player (19 pages)

## Summary of Contents for Sanyo 1180

[Page 1](#) Warranty Introduction Thank-you for choosing the Sanyo DMC-1180/2020 MP3 player. Please take a moment to read this instruction booklet so you will become familiar with the many features of this unit. This device incorporates a portable WMA/MP3/SMV Player, FM Radio, Voice Recorder and 1 GB (DMC1180 series) or 2GB (DMC2020 series) Mass Storage Device.

### [Page 2: Battery Management](#)

Battery: Built-in 530mAh Rechargeable Lithium ion battery Charge: Connect the MP3 Player to the computer. Press and hold "Power on/off " button for few seconds until a battery icon appears on the top of the MP3 Player's screen. The battery is charging.

### [Page 3: Transfer Data To And From The Mp3 Player](#)

Listen to WMA/MP3 music files with the MP3 Player Follow the instructions for the transfer of data to and from the MP3 Player to copy WMA/MP3/SMV music files to the MP3 Player. Connect the supplied headphones to the headphone socket.

### [Page 4: Mp3 Player Controls](#)

DMC 1180/DMC 2020 series MP3/WMA/SMV Player User Guide the MP3 player cannot recognize the lyric file. MP3 Player Controls Power On/Off Earphone jack A-B/Menu button Play/Pause Skip Next / Fast Forward Skip Previous / Fast Rewind Hold Switch Stop Microphone...

### [Page 5: Voice Recorder](#)

DMC 1180/DMC 2020 series MP3/WMA/SMV Player User Guide The MP3 Player allows you to play video files. You can "transcode" AVI, WMV and MPG video files to the SMV video format using the software on the product CD. (Note: Only SMV video files can be played on this MP3 player.)  
1.

### [Page 6: Listen To Fm Radio](#)

To exit FM radio mode, press and hold the A-B/Menu button. Exit to Main Menu from FM mode Press and hold the A-B/Menu button for a while and release it. The MP3 Player will exit FM tuner mode and go back to Main Menu.

### [Page 7: Add To Preset](#)

Add to Preset The MP3 Player tuner allows user to save a FM radio station to preset. After you have tuned to an FM radio station, Select "Add to Preset" in the FM Settings menu and press the A-B/Menu button.

## [Page 8: Fm Radio Recording](#)

Select "Auto Scan" in the FM Settings menu and press the A-B/Menu button. The MP3 Player tuner starts to seek and save the FM stations automatically. Please then wait a moment. How to delete an FM radio station in the preset list.

## [Page 9: Hold Function](#)

To activate the Hold function, slide the Hold switch. Slide the Hold switch back to turn off the Hold function. Note: The MP3 Player will turn off automatically if the key is held when turning on the power. Navigation Use A-B/Menu button to enter Menu.

## [Page 10: Advanced Settings](#)

To browse the pictures, press the menu button and select Photo. Note: Support picture with JPG format. Note: Pictures must be stored in the folder "Photo" of the MP3 player, otherwise you cannot view them. Advanced Settings To navigate the Settings menu: Press &...

## [Page 11: Adjust Lcd Contrast](#)

DMC 1180/DMC 2020 series MP3/WMA/SMV Player User Guide In the settings menu, select Repeat. Press the Skip buttons to select a play mode. Adjust LCD Contrast To adjust the LCD contrast, In the settings menu, select Contrast. Press the Skip buttons to adjust the contrast level.

## [Page 12: Language Select](#)

DMC 1180/DMC 2020 series MP3/WMA/SMV Player User Guide Press the Skip buttons to set up the record format and sampling rate. Press the Play button or A-B/Menu button to exit. Note: A higher recording sampling frequency brings better recording quantity, but takes more memory space.

[Page 13](#) DMC 1180/DMC 2020 series MP3/WMA/SMV Player User Guide In the settings menu, select "Default". Press the A-B/Menu button. The default settings are loaded to the MP3 Player. Delete Stop playback or recording before attempting to Delete. Press and hold the A-B/Menu button and release it to enter the menu and select Delete .

[Page 14](#) DMC 1180/DMC 2020 series MP3/WMA/SMV Player User Guide Select About in Main Menu list. The firmware version and Internal Media info appears. Press the Play button or A-B/Menu button to exit to Main Menu list screen. Removing the MP3 Player from your computer Windows Me, 2000 &...

[Page 15](#) DMC 1180/DMC 2020 series MP3/WMA/SMV Player User Guide Display 128 x 128 Dot-Matrix 65K Color STN display ID3 Tag display Controls Power On / OFF Play / Pause Stop Skip Next Skip Previous A-B/Menu button Volume + Volume - Hold Switch...

[Page 16](#) This warranty only applies in favour of the original retail purchaser of the warranted product. SANYO CANADA INC.'S RESPONSIBILITY During the warranty period, SANYO Canada Inc. will repair, or at our option, replace an Audio product which shows evidence of a manufacturing defect in materials or workmanship.

[Page 17](#) HOW TO OBTAIN WARRANTY SERVICE Please contact the Sanyo Authorized Dealer from whom the product was purchased, or contact us directly at: SANYO Canada Inc.

This manual is also suitable for:

[2020Dmc 1180 series](#) [Dmc 2020 series](#)

