

Sanyo 710-00792-1 Installation Manual

Rear projection display



Download this manual	Quick Links	



Rear Projection Display Installation Manual

Please read all instructions below and install this system properly.

Please read "SAFETY PRECAUTIONS" and "IMPORTANT SAFETY INSTRUCTIONS" on

OWNER'S MANUAL to install and place this system.

This system is supplied in 3 packages and they need to be installed. Please make sure all the

parts are included. If any part is missing, or if you have questions, contact a sales dealer.

Install the system following steps.

1

CHECK CONTENTS IN PACKAGES

2.

ASSEMBLE BOTTOM CABINET

3.

JOINT TOP AND BOTTOM CABINETS

4.

SETUP PROJECTION MIRROR

5.

ADJUST PROJECTION MIRROR

6.

ASSEMBLE STORAGE SPACES

7.

LOCK CABINET

WHEN INSTALLING THIS SYSTEM, BE CAREFUL NOT TO DAMAGE THE PROJECTION

SCREEN. AND NEVER TOUCH THE SURFACE OF THE PROJECTION SCREEN AND THE PROJECTION MIRROR DIRECTLY. THEY MAY EFFECT THE PROJECTION IMAGE

lanualsLib.con

OUALITY.

BE CAREFUL NOT TO DROP ANY PART OR TOOL LIKE SCREW INTO THE SYSTEM. IF

IT CHOLLID CONTACT A CEDVICE

EXCEPT WHEN ADJUSTING THE PROJECTION MIRROR, NEVER TURN THE
SYSTEM
ON UNTIL THE INSTALLATION IS FINISHED. IT MAY CAUSE ELECTRICAL SHOCK OR
FIRE HAZARD.
710-00792-1
CAUTION
1AA6P1P1756 (M8EA)
Next Page



Related Manuals for Sanyo 710-00792-1

Digital Camera SANYO DE Instruction Manual

14 mega pixels (79 pages)

Projection TV Sanyo PLC-XR70N Owner's Manual

Multimedia rear-projection display (46 pages)

LCD TV SANYO LCD TV Owner's Manual

(31 pages)

Freezer Sanyo MDF-U333 Instruction Manual

Biomedical freezer (30 pages)

Digital Camera Sanyo VPC-TH1R Safety Manual

Sanyo digital camera safety manual (4 pages)

Projection TV SANYO PLV-55WHD1 Service Manual

Lcd projection tv hd pro series (53 pages)

Projection TV Sanyo PLV-55WHD1 Service Manual

Lcd hd pro series (176 pages)

Projection TV Sanyo PLV-65WHD1 Owner's Manual

Hd pro series wide screen lcd projection tv (35 pages)

Projection TV Sanyo PLV-55WR1Z Service Manual

Lcd projection tv (136 pages)

Projection TV SANYO PLV-55WHD1 Service Manual

Hd pro series lcd projection tv (48 pages)

Projection TV Sanyo PLV-45WR1Z Owner's Manual

Lcd projection tv (72 pages)

Summary of Contents for Sanyo 710-00792-1

<u>Page 1</u> BE CAREFUL NOT TO DROP ANY PART OR TOOL LIKE SCREW INTO THE SYSTEM. IF IT SHOULD, CONTACT A SERVICE. EXCEPT WHEN ADJUSTING THE PROJECTION MIRROR, NEVER TURN THE SYSTEM ON UNTIL THE INSTALLATION IS FINISHED. IT MAY CAUSE ELECTRICAL SHOCK OR FIRE HAZARD. 710-00792-1 CAUTION 1AA6P1P1756-- (M8EA)

<u>Page 2</u> CHECK CONTENTS IN PACKAGES This system is supplied in 3 packages. Make sure all the parts listed below (cabinets, Installation parts, and accessories) are included in those packages. Package 1 Top Cabinet Package 2 Bottom Cabinet: Refer to the steps 2, 6 and 7 for installation. Installation Parts Package 3 Installation Part...

<u>Page 3</u> ASSEMBLE BOTTOM CABINET Remove Joint Bolts and Cover Plates Remove the 4 Joint Bolts on the Bottom Cabinet. Keep these bolts for later use. They are necessary for joint the Top and Bottom Cabinets. Remove the 2 Cover Plates on the top of the Bottom Cabinet.

<u>Page 4</u> JOINT TOP AND BOTTOM CABINETS Joint Top and Bottom Cabinets Lift the Top Cabinet and put it on the Bottom Cabinet. When setting the Top Cabinet, be sure the frame of the Bottom Cabinet is fitted into the frame of the Top Cabinet completely. CAUTION THE TOP CABINET OF THIS PROJECTOR HAS ITS GRAVITY AT THE SCREEN SIDE.

<u>Page 5</u> SETUP PROJECTION MIRROR Preparation Remove the 4 Protection Pads inside of the Top Cabinet and remove the 2 Fixing Bands (right and left) of the Projection Mirror. CAUTION NEVER TOUCH THE PROJECTION MIRROR DIRECTLY. IT MAY EFFECT THE PROJECTION IMAGE QUALITY. MOVE THE MIRROR BY HOLDING THE MIRROR HANDLE.

<u>Page 6</u> ADJUST PROJECTION MIRROR When the figure of the projection image does not match the Projection Screen, adjust the Projection Mirror. If the figure fits the Projection Screen precisely, skip the steps 2, 3 and 4 and replace the Back Cover. Check Projection Image Connect the projector to the AC outlet, and turn the projector on.

<u>Page 7</u> ASSEMBLE STORAGE SPACES Replace Back Cover Replace the Back Cover to the Top Cabinet. Turn the Back Cover over, and fix the cover in the reverse to the initial position. Install Glass Doors 1. Remove the Hinge Covers by removing the 2 screws of each Hinge.

<u>Page 8</u> LOCK CABINET Lock the Cabinet Turn Lock Bolts to the direction indicated on the figure to lock the cabinet on the floor. Make sure that all the Casters are slightly raised from the floor. The tilt of Cabinet can be also adjusted with these Lock Bolts.

This manual is also suitable for:

laa6p1p1756Plc-xr70nRear projection display