



# TOSHIBA

Toshiba DP5018F-S Quick Manual

Non display handset



1  
2

•

## Bookmarks

[Download this manual](#)

### Quick Links



Enlarged version





## Handset Key Description

- Voicemail Notification Key
- Mute Key
- Redial Key
- Hands free / Loudspeaker Key
- Volume Up / Volume Down
- Transfer Key
- Hold Key
- Speed Dial Key

Additional Guides available at

<http://www.swcomms.co.uk/resource-centre/user-guides-and-manuals>

Service Desk 01392 330033

email:

[servicedesk@swcomms.co.uk](mailto:servicedesk@swcomms.co.uk)

Customer Service 01392 315315

email:

[customer.service@swcomms.co.uk](mailto:customer.service@swcomms.co.uk)

Issue 11 24.2.16

## Toshiba

### Non Display Handset (DP5018F-S)

### Quick Guide



[Next Page](#)

1

2

## Related Manuals for Toshiba DP5018F-S

[Handsets Toshiba Strata AirLink Integrated Wireless Handset User Manual](#)

Toshiba integrated wireless handset user guide (131 pages)

[Handsets Toshiba Strata AirLink User Manual](#)

Integrated wireless handset (131 pages)

[Handsets Toshiba Strata AirLink User Manual](#)

Integrated wireless handset (132 pages)

[Handsets Toshiba DP5032FS-D Quick Manual](#)

Display handset (2 pages)

[Toshiba DP5032FS-D, DP5022F-SD - Display Handset Quick Guide](#)

(article)

[Handsets Toshiba IP4100 SIP DECT User Manual](#)

Ip edge strata cix, sip dect handset (23 pages)

[Handsets Toshiba DP5000 Quick Manual](#)

Supervisor handset (2 pages)

[Handsets Toshiba IP5131F-SDL Quick Manual](#)

Ip edge large display handset (2 pages)

[Handsets Toshiba Strata AirLink User Manual](#)

External wireless handset (48 pages)

## Summary of Contents for Toshiba DP5018F-S

[Page 1](#) Redial Key Toshiba Service Desk 01392 330033 email: servicedesk@swcomms.co.uk Hands free / Loudspeaker Key Non Display Handset Customer Service 01392 315315 (DP5018F-S) email: customer.service@swcomms.co.uk Volume Up / Volume Down Quick Guide Transfer Key Issue 11 24.2.16 Hold Key Speed Dial Key...

[Page 2](#) Basic Call Handling Forwarding Your Telephone Transfer a caller to a mailbox Answer a call Dial one of the following codes followed by the Whilst on a call, press key, dial # 407 and Lift receiver or press key to answer call destination number (eg: extn number to receive the mailbox number (extn number), press # and hang hands free...