



Sanyo DP26670 Owner's Manual

Hdtv lcd / dvd combo

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Features](#)

[2 Remote Control](#)


[3 Starting Setup](#)

[4 Connections to Other Equipment](#)

[5 Specifications](#)

[Download this manual](#)

See also: [Service Manual](#)

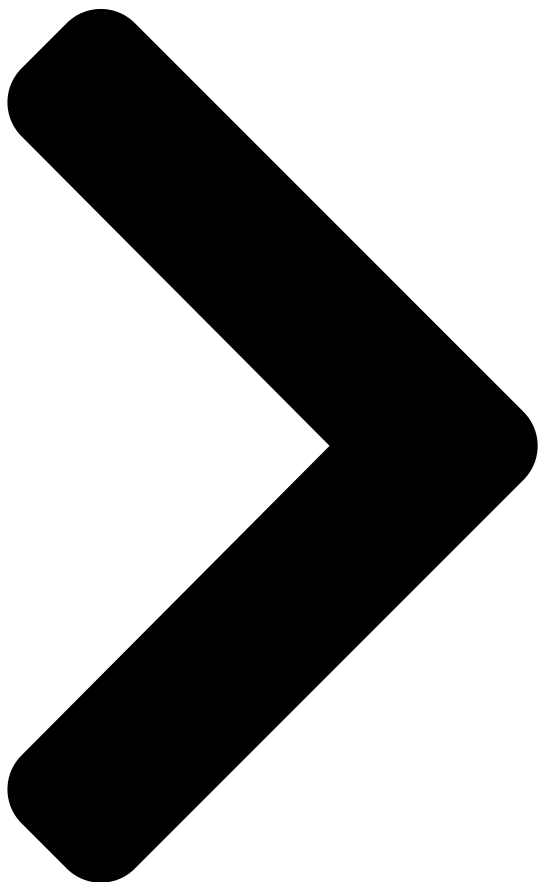

diagonal / diagonale 66cm

31.5



diagonal / diagonale 80cm

© 2010 Sanyo Manufacturing Corporation

54H0521B_eng.indd 1

54H0521B_eng.indd 1

HDTV LCD / DVD Combo

Combo TVHD de LCD / DVD

SANYO

31.5

TVHD Combine ACL / DVD

D

P26670

DP32670

26-Z5AE

Owner's Manual

Manual del usuario

Manuel d'instructions

Part No. / No. de parte / N° de piece:

J54H0521B

3/25/10 4:39:01 PM

3/25/10 4:39:01 PM



SAN

26"

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo DP26670

[TV DVD Combo Sanyo DP26670 Service Manual](#)

18.5" hdtv lcd (75 pages)

[LCD TV Sanyo DP32640 Owner's Manual](#)

32" hdtv lcd (52 pages)

[TV Sanyo DP32640 Troubleshooting Manual](#)

2010 models (46 pages)

[TV Sanyo DP26640 Troubleshooting Manual](#)

2010 models (46 pages)

[TV Sanyo DP32640 Service Manual](#)

(43 pages)

[TV Sanyo DP32640 Service Manual](#)

Remote control digital color television (37 pages)

[LCD TV Sanyo DP32640 Owner's Manual](#)

32" class (31.5" diagonal) lcd 720p 60hz hdtv (16 pages)

[TV DVD Combo Sanyo DP26671 Owner's Manual](#)

26" and 31.5" hdtv lcd/dvd combo (41 pages)

[TV DVD Combo Sanyo DP26671 Service Manual](#)

26" hdtv lcd / dvd combo (78 pages)

[TV DVD Combo Sanyo DP32671 Service Manual](#)

32 inch hdtv lcd/dvd combo (81 pages)

[TV DVD Combo Sanyo DP32671 Service Manual](#)

32" hdtv lcd / dvd combo factory code z6cf (80 pages)

[TV DVD Combo SANYO LCD-22VT10DVD Instruction Manual](#)

Lcd tv with dvd player (43 pages)

[TV DVD Combo Sanyo LCD-19VT11DVD Service Manual](#)

Lcd tv dvd built-in (92 pages)

[TV DVD Combo Sanyo LCD-22VT11DVD Service Manual](#)

Lcd tv dvd built-in (93 pages)

[TV DVD Combo Sanyo LCD-19VT11DVD Service Manual](#)

Lcd tv dvd built-in (92 pages)

Summary of Contents for Sanyo DP26670

[Page 1](#) / diagonale 66cm 31.5 diagonal / diagonale 80cm Combo TVHD de LCD / DVD TVHD Combine ACL / DVD © 2010 Sanyo Manufacturing Corporation 54H0521B_eng.indd 1 54H0521B_eng.indd 1 Owner's Manual Manual del usuario Manuel d'instructions HDTV LCD / DVD Combo...

[Page 2: Warranty](#)

TV to be free from manufacturing defects in materials and workmanship under normal use and conditions for parts and labor. For the FIRST 90 DAYS from the date of original retail purchase, Sanyo Manufacturing Corporation will replace any defective TV via exchange at the retailer. To ensure proper warranty application, keep the original-dated-sales receipt for evidence of purchase.

[Page 3: Trademarks](#)

It is designed and manufactured to meet rigid U.L. safety standards against risk of fire, casualty and electrical hazards. SANYO recommends keeping the TV set at its factory settings or moving Energy Saver settings from "Level 1" to "Level 2" or "Level 3" to further reduce power requirements and increase energy savings. Doing so contributes to the sustainability of our resources and environment.

[Page 4](#) ENGLISH CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OPEN FLAMES AWAY FROM THIS PRODUCT AT TIMES.

[Page 5](#) 15) Apparatus should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the apparatus. 16) An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits.

[Page 6: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS 23) When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.

[Page 7: Safety Precautions](#)

The unit emits heat when in operation. Do not place any covers or blankets on the unit, this may cause overheating. Do not block ventilation holes, or set up near radiators. Do not place in direct sunshine. When placing on a shelf leave 10 cm (4 inches) free space around the entire unit. Notes when mounting the LCD TV/DVD on a wall If the unit is to be mounted on the wall, contact the retailer where you purchased the LCD TV/DVD for advice, and have the equipment professionally installed.

[Page 8: Features](#)

Features LCD color TV With DVD/CD player Unique space saving design combines a 26/32 LCD color TV and a DVD/CD player. A DVD disc has much more capacity, but is the same size as an audio CD disc. The Picture/Audio quality of a DVD exceeds other software.

[Page 9: Table Of Contents](#)

Before using your unit WARRANTY ...2 TRADEMARKS ...3 IMPORTANT SAFETY INSTRUCTIONS ...5 SAFETY PRECAUTIONS ...7 IMPORTANT NOTICE ...7 Features ...8 Contents ...9 Disc...10 Location of controls ...11 How to attach the stand ...12 How to remove the stand ...12 Remote control ...13 Power source ...14 Antenna connections ...15 Cable TV connections ...16...

[Page 10: Disc](#)

Disc Playable discs Disc type and logo mark DVD Video CD-DA The following discs are also available. • DVD-R/RW discs of DVD video format. • CD-R/RW discs of MP3/WMA/JPEG. Region Number Region number (Regional restriction code) is built-in to the unit and DVD video discs. Region number "1"...

[Page 11: Location Of Controls](#)

Front Remote sensor Rear side AC INPUT jack HDMI 2 IN jack HDMI 1/DVI IN jack PC/DVI AUDIO IN jack (for COMPONENT IN and LINE2 VIDEO IN) 54H0521A_eng.indd 11 54H0521A_eng.indd 11 Location of controls Left side DISC slot POWER indicator To display the menu screen.

[Page 12: How To Attach The Stand](#)

How to attach the stand NOTE: • Unplug the AC cord from the AC INPUT terminal. • Before beginning this process, assure that TV is laid on a clean, safe, and cushioned space to avoid any damage to the unit. •...

[Page 13: Remote Control](#)

54H0521A_eng.indd 13 54H0521A_eng.indd 13 Remote control POWER Power On/Off DISPLAY

Call TV information Call DVD information TV/DVD Switch between TV and DVD (EJECT) Eject a disc Direct channel selection of TV Input setting Enter a password - Input "-" for digital channels SLEEP Sleep timer SETUP/...

[Page 14: Power Source](#)

Remote control Inserting Batteries Open the battery compartment cover in the direction of the arrow. Operation • Aim the remote control at the remote sensor and press control buttons to operate. • Operate the remote control within a 30° angle on either side of the remote sensor, up to a distance of approximately 15 feet.

[Page 15: Antenna Connections](#)

If you are using an indoor or outdoor antenna, follow the instructions below that correspond to your antenna system. If you are using a Cable TV service, see page 16 for Cable TV connections. Combination VHF/UHF Antenna (Single 75 ohm cable or 300 ohm twin-lead wire) Antenna Jack 75 ohm...

[Page 16: Cable Tv Connections](#)

Cable TV connections This TV has an extended tuning range and can tune most cable channels without using a Cable TV Converter box. Some cable companies offer "premium pay channels" where the signal is scrambled. Descrambling these signals for normal viewing requires the use of a descrambler device which is generally provided by the Cable TV company.

[Page 17: Tv Operation](#)

Starting setup The Starting Setup menu appears the first time you turn on the TV, and assists you to specify the Air/Cable setting, and program your channels automatically. IMPORTANT: Make sure that the antenna or cable TV system connection is made! To turn on the TV, press POWER (POWER indicator on the front of the unit changes green).

[Page 18: Quick Guide For Menu Operation](#)

When the TV receives a digital signal, the digital information will appear. 62-1 HDTV Moving Picture1 Sleep Timer CH-1 TV-MA Digital English No Program Information is available Full 1080i • Channel number • Station name • Channel label (if preset) •...

[Page 19: Convenience Functions](#)

You can change the default settings by pressing the Menu button on your remote, then select the one of the icons at the top of the menu - follow the On-Screen prompts to set your preferences. Icon Selected Items Picture Picture Brightness / Contrast Setting...

[Page 20: Memorizing Channels](#)

Memorizing channels This TV is equipped with a channel memory feature which allows channels to skip up or down to the next channel set into memory, skipping over unwanted channels. Before selecting channels, they must be programmed into the TV's memory. To use this TV with an antenna, set the Signal Type option to the Air mode.

[Page 21: Checking The Digital Signal Strength](#)

Clear All All channels are deleted from the channel memory. Select "Channel", then press ► or ENTER. Press ▲ or ▼ to select "Add/Delete", then press ► or ENTER. Press ▲ or ▼ to select "Clear All", then press ► or ENTER.

[Page 22: Setting The V-Chip](#)

Setting the V-Chip An age limitation can be set to restrict children from viewing or hearing violent scenes or pictures that you may choose to exclude. The restriction applies to "TV Rating" and "Movie Rating" if this data is transmitted. You may set this restriction separately.

[Page 23: Closed Caption](#)

Press ◀ or ▶ to set "V-Chip" to "On". Press ▲ or ▼ to select "V-Chip Set (DTV)", then press ► or ENTER. If the TV is not storing the additional rating system, the TV will begin downloading it, which may take some time to be completed.

[Page 24: Setting The Picture Size](#)

Press ▲ or ▼ to select “Digital CC Preset”, then press ◀ or ▶ to select “Custom”. Press ▲ or ▼ to select “CC Advanced”, then press ▶ or ENTER. The CC Advanced menu will appear. Press ▲ or ▼ to select the desired item, then press ◀...

[Page 25: Preparation](#)

Preparation The following pages describe the setup/ operation in DVD mode. Preparation Before DVD/CD operation, please make the following preparations. Insert the AC cord plug into a standard 120V 60Hz polarized AC outlet. • If the AC cord plug is plugged in for the first time, wait for about 5 seconds before pressing POWER.

[Page 26: Special Playback](#)

Special playback Fast Forward Playback Press SEARCH () during normal playback. Each press of SEARCH () will increase the speed of the search. • To resume normal playback, press PLAY. Review Playback Press SEARCH () during normal playback. Each press of SEARCH () will increase the speed of the search.

[Page 27: Marking Desired Scenes](#)

Marking desired scenes The TV/DVD stores the points that you want to watch again up to 12 points. You can resume playback from each scene. Marking the scenes Press MARKER during playback. Select the blank Marker using ▲/▼/◀/▶, then press ENTER at the desired scene. •...

[Page 28: Using Home Menu](#)

Using HOME MENU Playing a disc Press SETUP during stop mode. HOME MENU will appear. Press ▲/▼/◀/▶ to select “Disc Audio Settings Navigator”, then Play Mode press ENTER Initial Settings Press ▲/▼ to select Disc Navigator Title desired option, then Chapter press ENTER.

[Page 29: Audio Settings Menu](#)

Program playback Press PLAY MODE during playback or stop mode. Play Mode screen will appear. Press ▲/▼ to select “Program”, then press ENTER. Press ▲/▼ to select “Create/Edit”, then Program Program Step press ENTER. 01. 01 “Create/Edit” display differs, depending on discs or files.

[Page 30: Video Adjust Menu](#)

Video Adjust menu From the Video Adjust menu you can adjust various settings that affect how the picture is presented. Press SETUP during stop mode. HOME MENU will appear. Press ▲/▼/◀/▶ to select “Video Adjust”, Audio Settings then press ENTER. Play Mode Initial Settings Press ▲/▼/◀/▶...

[Page 31: Function Setup](#)

Setting Option Digital Audio Out settings Digital Out Dolby Digital Out Dolby Digital Dolby Digital > PCM DTS Out 96kHz PCM Out 96kHz > 48kHz 96kHz MPEG Out MPEG MPEG > PCM Video Output settings TV Screen 4:3 (Letter Box) 4:3 (Pan &...

[Page 32: Parental Control](#)

Parental Control Some discs are specified as not suitable for children. Such discs can be limited not to playback with the unit. How to into the Parental menu Press SETUP in stop mode. HOME MENU will appear. Press ▲/▼/◀/▶ to select “Initial Audio Settings Settings”, then press Play Mode...

[Page 33: Language Code List](#)

Language (Language code letter), Language code Japanese (ja), 1001 Bhutani (dz), 0426 English (en), 0514 Esperanto (eo), 0515 French (fr), 0618 Estonian (et), 0520 German (de), 0405 Basque (eu), 0521 Italian (it), 0920 Persian (fa), 0601 Spanish (es), 0519 Finnish (fi), 0609 Chinese (zh), 2608 Fiji (fj), 0610 Dutch (nl), 1412...

[Page 34: Connections To Other Equipment](#)

Connections to other equipment The exact arrangement you use to interconnect various video and audio components to this unit is dependent on the model and features of each component. Check the Owner's Manual provided with each component for the location of video and audio

inputs and outputs. To connect the LCD TV/DVD to a VCR Rear of the unit To VIDEO/AUDIO IN...

[Page 35](#) Connections to other equipment To connect a HDMI or a DVI device to the unit The HDMI 1 input receives digital audio and uncompressed video from a HDMI device or uncompressed digital video from a DVI device. When you connect to a DVI device with a HDMI-to-DVI adapter cable, it transfers only video signal. Separate analog audio cords required.

[Page 36](#) Connections to other equipment To connect an audio system This connection allows you to use an audio amplifier and external speakers, and adjust the audio level using the TV's remote control. To control the audio, turn on the TV and the stereo amplifier, and turn off the TV's built-in speakers (see "Speakers"...

[Page 37](#) To connect the TV to a PC (Personal Computer) NOTE: Before connecting any cables, disconnect the AC Power Cords of both the TV and Personal Computer from the AC outlets. Connect an RGB cable from the monitor output (a) on your PC to the RGB connector on the TV and tighten the screws.

[Page 38: Reception Disturbances](#)

Reception disturbances Most types of television interference can be remedied by adjusting the height and position of the VHF/ UHF antenna. Outdoor antennas are recommended for best results. The most common types of television interference are shown below. If one of these symptoms appear when the TV is connected to a Cable TV system, the disturbance may be caused by the local Cable TV company broadcast.

[Page 39: Problems And Troubleshooting](#)

Use the following check list for troubleshooting when you have problems with your TV/DVD. Consult your local dealer or service outlet if problems persist. Be sure all connections are properly made when using with other units. SYMPTOMS POWER • Make sure the power cord is plugged in. TV/DVD does not operate.

[Page 40](#) Problems and troubleshooting SYMPTOMS • No disc is inserted. Playback doesn't start. • The disc may be dirty. Clean up the disc. • The unit cannot play CD-ROMs, etc. No picture. • TV/DVD selector is not set correctly. • Check the input selector of the amplifier is set properly. No sound.

[Page 41: Specifications](#)

Model DP26670 GENERAL Power supply: AC 120V 60Hz Power consumption: Operation: 61W Stand by: 0.3W Weight: 8.3 kg (18.3 lbs) Dimensions: Width: 663 mm (26-1/8 inches) Height: 498 mm (19-5/8 inches) Depth: 214 mm (8-7/16 inches) Operating temperature: 5°C - 40°C...

This manual is also suitable for:

[Dp32640 - 31.5" diagonal lcd hdtv 720p](#)