



Sanyo GXDB Basic Operation Manual

Sanyo remote control basic operation guide

 
1
2

--

•

Bookmarks

Available languages

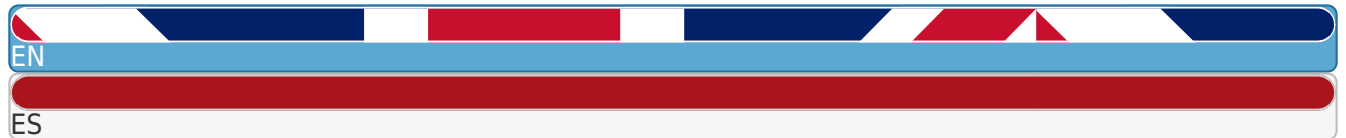

Quick Links

[1 Guía de Operación Básica](#)

[Download this manual](#)



GXDB Remote

Basic Operation Guide

Displays the on-screen menu.

Move the cursor in OK the menu screens.

ENTER

Select highlighted menu items.

Press twice to restore



your HDTV to its original factory settings.

Set the loudness level of the audio output.

+
to increase

-
to decrease
Sets the volume level to 0.

Restores the volume to the previous level before muting.

Switch from one Video input source to another.

NOTE: Hold for three seconds to open the Input List menu.

Selects the desired audio mode (when available).

AUDIO

Choose between available aspect ratio options Pix1 thru Pix7 and Pix-Auto (for digital channels) to enable

PIX SH

or disable image stretch.

Cycle through the predetermined picture modes.

PICTURE

Cycle through the predetermined sound modes.

SOUND

For assistance call the toll free number 1.800.877.5032 or visit our website at

 
www.sanyoctv.com

Allows the remote to function with your Sanyo HDTV.

Check Battery Installation information

For controlling other devices see the Remote Control Programming sheet.

Power On or power Off your

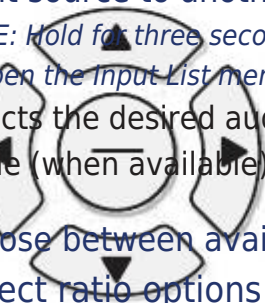

ManualsLib.com

HDTV.
OK
ENTER

RESET
RECALL
USB
CC

in owner's manual first.
Display channel banner
information.
Exit the the current on-screen
menu and return to normal
TV viewing.

Activate Xacti functions when Xacti
camera connected via HDMI.

Switch back and forth
between the last two

selected channels.

Scan through the channels
in the HDTV's memory
database.

▲ for a higher channel
▼ for a lower channel

through

Tune to a channel directly.

Ex: Press 0 then 6 for channel 6.

 
NOTE: Press and hold the 1 key to
activate the first of three digits for
channels 100 and higher.

Switch directly to the

USB
USB input.

Enable/disable digital
caption options CC1-CC6

CC
(digital)

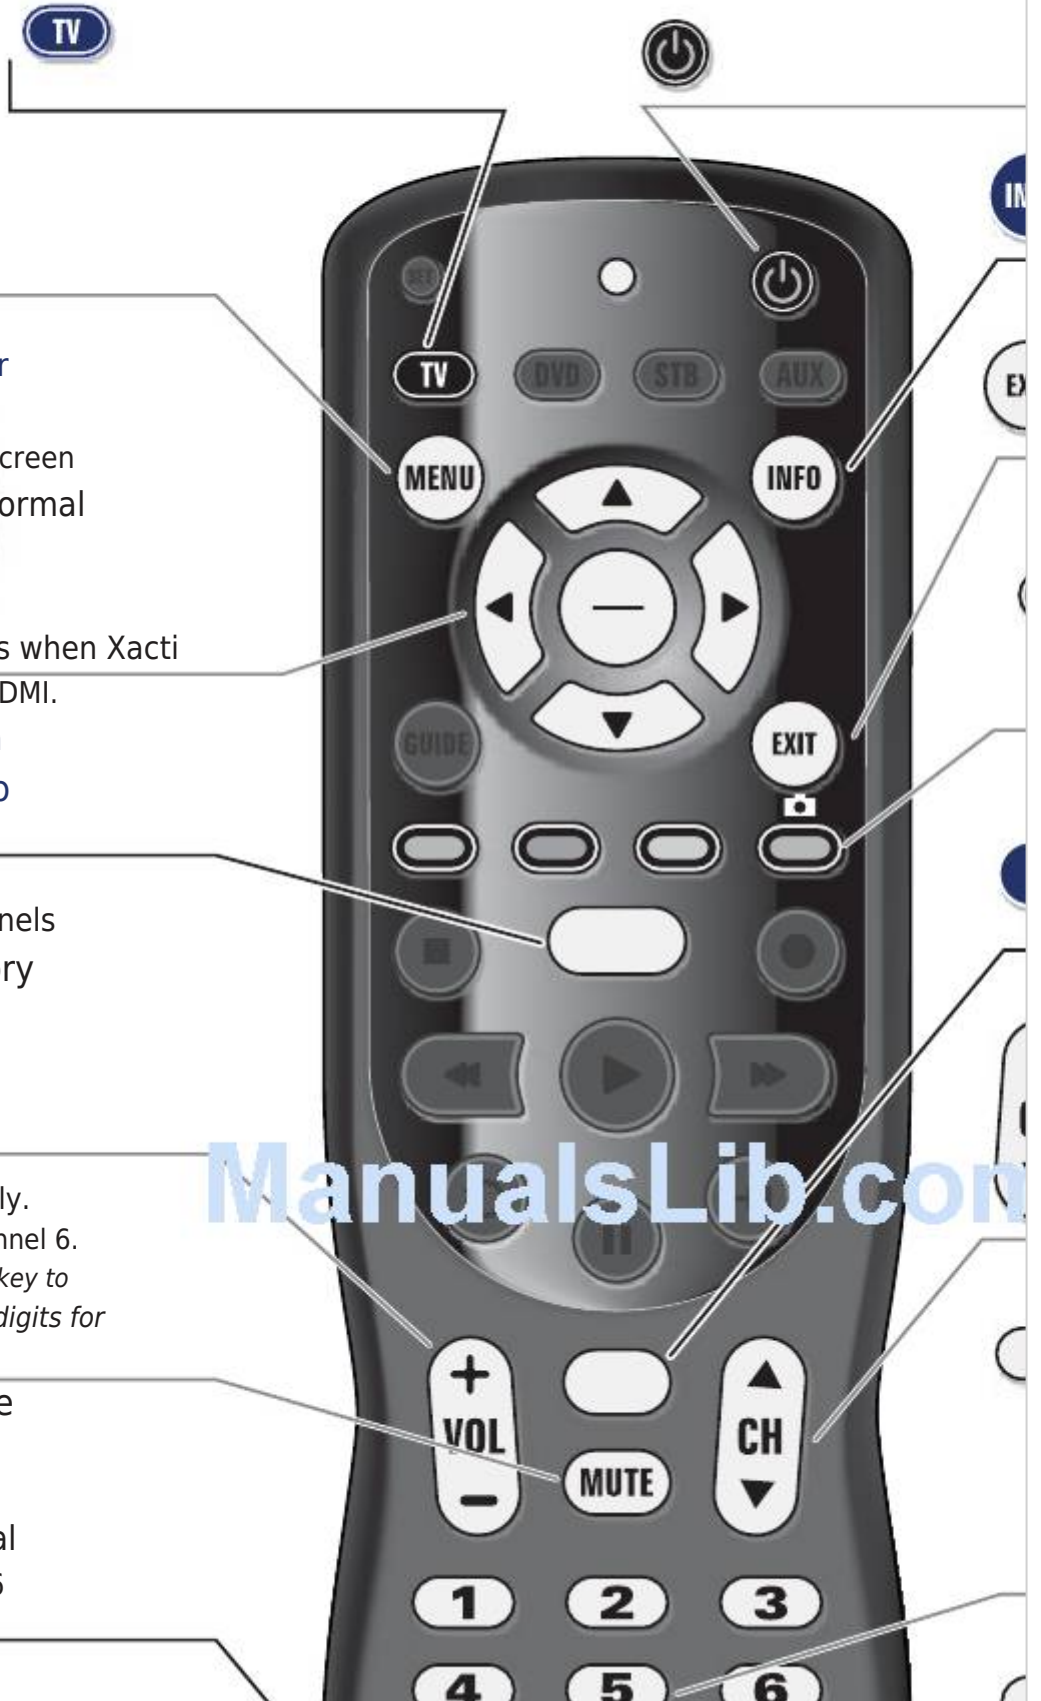

ManualsLib.com

CAPTION

(analog).

Displays SLEEP timer.

Pressing "0" key sets the Off Timer.

SLEEP

Displays the Switch On Time banner.

ON TIMER

Displays the On-screen Help menu with common problems and solutions.


HELP

Part No. JCP1P0339--

T

OR

 CC1-CC4

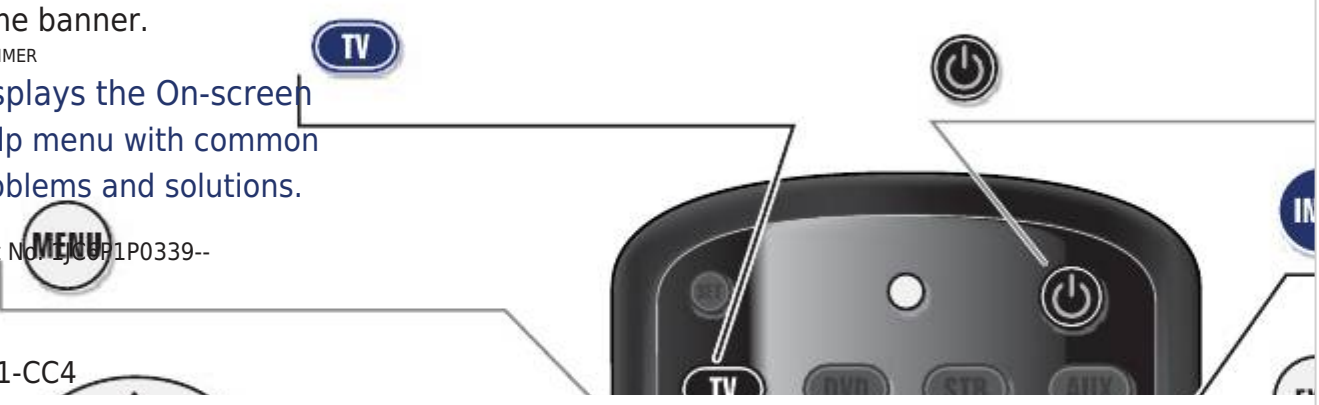

[Next Page](#)

1

2

Related Manuals for Sanyo GXDB

[LCD TV Sanyo DP42849 Owner's Manual](#)

42"/46"/52" lcd hdtv (67 pages)

[Plasma TV Sanyo DP50749 Owner's Manual](#)

50" hdtv plasma (67 pages)

[Plasma TV Sanyo DP50749 Service Manual](#)

Remote control digital color television (48 pages)

[TV Sanyo DP26649 Service Manual](#)

Remote control digital color television (46 pages)

[TV Sanyo DP42849 Service Manual](#)

Remote control digital color television (43 pages)

[TV Sanyo DP50749 Service Manual](#)

(6 pages)

[HDTV Sanyo DP19649 Setup Manual](#)

Sanyo dp19649: quick start (2 pages)

Summary of Contents for Sanyo GXDB

[Page 1](#) GXDB Remote Basic Operation Guide Allow the remote to function with your Sanyo HDTV. Displays the on-screen menu. Move the cursor in the menu screens. ENTER Select highlighted menu options. Press twice to restore RESET your HDTV to its original factory settings.

[Page 2: Guía De Operación Básica](#)

Control GXDB Guía de operación básica Permite a su control funcionar con el televisor Sanyo. Desplegar el menú en pantalla. Mover el cursor en menús pantalla. ENTER Seleccionar opción resaltada en el menú Presionar dos veces para RESET restaurar la HDTV a su configuración de fábrica.

This manual is also suitable for:

[Dp50749 - 50" plasma tv](#)[Dp42849 - 42" lcd tv](#)[Dp46849 - 46" lcd tv](#)[Dp52449 - 52" lcd tv](#)

[Save PDF](#)