



# Table Of Contents - Asus Rog Strix H370-I Gaming Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89

• PAGE

3

OF 89 GO

•

[Table of Contents](#)

•

## Bookmarks







# Contents

[Safety information](#)

..... vi

[About this guide](#)

..... vii

[ROG STRIX H370-I GAMING specifications summary](#)

..... ix

[Package contents](#)

..... xiii

[Installation tools and components](#)

..... xiv

## [Chapter 1:](#)

### 1.1

[Motherboard overview](#) ..... 1-1

#### 1.1.1

#### 1.1.2

#### 1.1.3

#### 1.1.4

#### 1.1.5

#### 1.1.6

#### 1.1.7

#### 1.1.8

## [Chapter 2:](#)

### 2.1

[Building your PC system](#)..... 2-1

#### 2.1.1

#### 2.1.2

#### 2.1.3

#### 2.1.4

#### 2.1.5

#### 2.1.6

#### 2.1.7

#### 2.1.8

#### 2.1.9

#### 2.1.10

### 2.2

[Motherboard rear and audio connections](#) ..... 2-14

#### 2.2.1

#### 2.2.2

### 2.3

[Starting up for the first time](#) ..... 2-18

### 2.4

[Turning off the computer](#) ..... 2-19

## [Product Introduction](#)

[Before you proceed](#) ..... 1-1

[Motherboard layout](#) ..... 1-2

[Central Processing Unit \(CPU\)](#) ..... 1-4

<a href="#">System memory</a> .....	1-5
<a href="#">Expansion slots</a> .....	1-7
<a href="#">Jumpers and holes</a> .....	1-8
<a href="#">Onboard LEDs</a> .....	1-10
<a href="#">Internal connectors</a> .....	1-11
<b>Basic Installation</b>	
<a href="#">Motherboard installation</a> .....	2-1
<a href="#">CPU installation</a> .....	2-3
<a href="#">Cooling system installation</a> .....	2-4
<a href="#">DIMM installation</a> .....	2-6
<a href="#">ATX power connection</a> .....	2-7
<a href="#">SATA device connection</a> .....	2-8
<a href="#">Front I/O connector</a> .....	2-9
<a href="#">Expansion card installation</a> .....	2-10
<a href="#">M.2 installation</a> .....	2-11
<a href="#">Wi-Fi antenna installation</a> .....	2-13
<a href="#">Rear I/O connection</a> .....	2-14
<a href="#">Audio I/O connections</a> .....	2-16

[Previous Page](#)  
[Next Page](#)

1  
2  
3  
4  
5  
6  
7

Quick Links:

[Motherboard Overview](#)

[Motherboard Layout](#)

[Jumpers and Holes](#)

[Onboard Leds](#)

[M.2 Installation](#)

## Related Manuals for Asus Rog Strix H370-I Gaming

[Motherboard Asus ROG STRIX H370-F GAMING User Manual](#)

(96 pages)

[Motherboard Asus PRIME H370-PLUS Manual](#)

(36 pages)

[Motherboard Asus PRIME H370-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME B360-PLUS Manual](#)



(28 pages)

[Motherboard Asus TUF H370-PRO GAMING Manual](#)

(40 pages)

[Motherboard Asus PRIME H370-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H370-A Manual](#)

(36 pages)

[Motherboard Asus H370 MINING MASTER Manual](#)

(25 pages)

[Motherboard Asus PRIME H370M-PLUS User Manual](#)

(40 pages)

[Motherboard Asus PRIME H370M-PLUS Manual](#)

(40 pages)

[Motherboard Asus PRIME H310M-E Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus PRIME H310M-C R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-A R2.0 Manual](#)

(29 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-K R2.0 Manual](#)

(27 pages)

## Related Content for Asus Rog Strix H370-I Gaming

[PRIME Z270-K Table Of Contents](#)

Asus PRIME Z270-K

[Z170-P Table Of Contents](#)

Asus Z170-P

[Prime H270-PRO Table Of Contents](#)

Asus Prime H270-PRO

[PRIME Z270-P Table Of Contents](#)

Asus PRIME Z270-P

[PRIME Z370-P Table Of Contents](#)

Asus PRIME Z370-P

[970 PRO GAMING/AURA Table Of Contents](#)

Asus 970 PRO GAMING/AURA

[Pro WS X570-ACE Table Of Contents](#)

asus Pro WS X570-ACE

[PRIME Z390-P Table Of Contents](#)

Asus PRIME Z390-P