

Apm Configuration; Pci Subsystem Settings; Usb Configuration; Network Stack Configuration - Asus Rog Strix H370-I Gaming Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89



•

[Table of Contents](#)

•

Bookmarks



3.6.8

APM Configuration

The items in this menu allow you to set system wake and sleep settings.

ErP Ready

This item allows you to switch off some power at S4+S5 or S5 to get the system ready for ErP requirement. When set to [Enabled], all other PME options are switched off.

Configuration options: [Disabled] [Enable(S4+S5)] [Enable(S5)]

3.6.9

PCI Subsystem Settings

The items in this menu allow you to configure PCI, PCI-X, and PCI Express settings.

3.6.10

USB Configuration

The items in this menu allow you to change the USB-related features. The Mass Storage Devices item shows the auto-detected values. If no USB device is detected, the item shows None.

3.6.11

Network Stack Configuration

The items in this menu allow you to configure Ipv4 / Ipv6 PXE support.

3.6.12

HDD/SSD SMART Information

The items in this menu display the SMART information of the connected devices. NVM Express devices do not support SMART information.

3-18

Chapter 3: BIOS Setup

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
67
68
69
70
71
72
73
74

Quick Links:

[Motherboard Overview](#)

[Motherboard Layout](#)

[Jumpers and Holes](#)

[Onboard Leds](#)

[M.2 Installation](#)

Related Manuals for Asus Rog Strix H370-I Gaming

[Motherboard Asus ROG STRIX H370-F GAMING User Manual](#)

(96 pages)

[Motherboard Asus PRIME H370-PLUS Manual](#)

(36 pages)

[Motherboard Asus PRIME H370-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME B360-PLUS Manual](#)

(28 pages)

[Motherboard Asus TUF H370-PRO GAMING Manual](#)

(40 pages)

[Motherboard Asus PRIME H370-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H370-A Manual](#)

(36 pages)

[Motherboard Asus H370 MINING MASTER Manual](#)

(25 pages)

[Motherboard Asus PRIME H370M-PLUS User Manual](#)

(40 pages)

[Motherboard Asus PRIME H370M-PLUS Manual](#)

(40 pages)

[Motherboard Asus PRIME H310M-E Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus PRIME H310M-C R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-A R2.0 Manual](#)

(29 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-K R2.0 Manual](#)

(27 pages)

Related Content for Asus Rog Strix H370-I Gaming

[P5KPL-E Apm Configuration](#)

Asus P5KPL-E

[STRIX Z270F GAMING Apm Configuration](#)

Asus STRIX Z270F GAMING

[MAXIMUS VII HERO Apm Configuration](#)

Asus MAXIMUS VII HERO

[STRIX Z270H GAMING Apm Configuration](#)

Asus STRIX Z270H GAMING

[TUF Z270 MARK 1 Apm Configuration](#)

Asus TUF Z270 MARK 1

[TUF X470-PLUS GAMING Apm Configuration](#)

Asus TUF X470-PLUS GAMING

[PRIME X570-P Apm Configuration](#)

Asus PRIME X570-P

[STRIX Z270H GAMING Apm Configuration](#)

Asus STRIX Z270H GAMING