 


Tool Menu; Asus Ez Flash 3 Utility;
Secure Erase - Asus Rog Strix H370-I
Gaming Manual

| |
|-------------------|
| 1 |
| 2 |
| Table Of Contents |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |
| 12 |
| 13 |
| 14 |
| 15 |
| 16 |
| 17 |

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89



•

[Table of Contents](#)

•

Bookmarks



3.9

Tool menu

The Tool menu items allow you to configure options for special functions. Select an item then press <Enter> to display the submenu.

Setup Animator

This item allows you to enable or disable the Setup animator.

Configuration options: [Enabled] [Disabled]

3.9.1

ASUS EZ Flash 3 Utility

This item allows you to run ASUS EZ Flash 3. When you press <Enter>, a confirmation

message appears. Use the left/right arrow key to select between [Yes] or [No], then press <Enter> to confirm your choice.

For more details, refer to section 3.11.2 ASUS EZ Flash 3.

3.9.2

Secure Erase

SSD speeds may lower over time as with any storage medium due to data processing. Secure Erase completely and safely cleans your SSD, restoring it to factory performance levels.

Secure Erase is only available in AHCI mode. Ensure to set the SATA mode to AHCI. Click Advanced > PCH Storage Configuration > SATA Mode Selection > AHCI.

To launch Secure Erase, click Tool > Secure Erase on the Advanced mode menu.

Secure Erase is only supported on selected SATA SSDs, and cannot erase NVMe storage devices.

- The time to erase the contents of your SSD may take a while depending on its size.

Do not turn off the system during the process.

- Secure Erase is only supported on Intel SATA port. For more information about Intel SATA ports, refer to section 1.1.2 Motherboard layout of this manual.

ROG STRIX H370-I GAMING

3-21



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
70
71
72
73
74
75
76
77

Quick Links:

[Motherboard Overview](#)

[Motherboard Layout](#)

[Jumpers and Holes](#)

[Onboard Leds](#)

[M.2 Installation](#)

Related Manuals for Asus Rog Strix H370-I Gaming

[Motherboard Asus ROG STRIX H370-F GAMING User Manual](#)

(96 pages)

[Motherboard Asus PRIME H370-PLUS Manual](#)

(36 pages)

[Motherboard Asus PRIME H370-PLUS Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME B360-PLUS Manual](#)

(28 pages)

[Motherboard Asus TUF H370-PRO GAMING Manual](#)

(40 pages)

[Motherboard Asus PRIME H370-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H370-A Manual](#)

(36 pages)

[Motherboard Asus H370 MINING MASTER Manual](#)

(25 pages)

[Motherboard Asus PRIME H370M-PLUS User Manual](#)

(40 pages)

[Motherboard Asus PRIME H370M-PLUS Manual](#)

(40 pages)

[Motherboard Asus PRIME H310M-E Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-A R1.0 Instruction Manual](#)

(29 pages)

[Motherboard Asus PRIME H310M-C R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-A R2.0 Manual](#)

(29 pages)

[Motherboard Asus PRIME H310M-E R2.0 Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-K R2.0 Manual](#)

(27 pages)

Related Content for Asus Rog Strix H370-I Gaming

[AM1M-E Tool Menu](#)

Asus AM1M-E

[STRIX Z270H GAMING Tool Menu](#)

Asus STRIX Z270H GAMING

[TUF Z270 MARK 1 Tool Menu](#)

Asus TUF Z270 MARK 1

[TUF X470-PLUS GAMING Tool Menu](#)

Asus TUF X470-PLUS GAMING

[PRIME X570-P Tool Menu](#)

Asus PRIME X570-P

[STRIX Z270H GAMING Tool Menu](#)

Asus STRIX Z270H GAMING

[ROG CROSSHAIR VIII IMPACT Tool Menu](#)

Asus ROG CROSSHAIR VIII IMPACT

[WS C621E SAGE Series Tool Menu](#)

Asus WS C621E SAGE Series