

 


Sanyo SIRIUS STILETTO 10 User Manual

Portable plug-n-play receiver

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20



•

Table of Contents

-

Troubleshooting

•

Bookmarks


[Download this manual](#)

Quick Links



Enlarged version

Sanyo Fisher Co.
2100 S. University Ave.
Chatsworth, CA 91311

www.sanyo.com

SIRIUS Satellite Radio
1221 Avenue of the Americas
New York, NY 10020
(888) 539-7474

CRSR-10 User Guide
www.sirius.com

©
2004 SIRIUS Satellite Radio Inc.
CRSR-10 (7-24-04)

ManualsLib.com



Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo SIRIUS STILETTO 10

[Receiver Sanyo CRSR-10 User Manual](#)

(44 pages)

[Receiver Sanyo CRSR-10 User Manual](#)

(20 pages)

[Receiver SANYO CRSR-10 User Manual](#)

Sirius radio (20 pages)

[Receiver Sanyo CRSR-10 User Manual](#)

Sanyo crsr-10: user guide (20 pages)

[Receiver Sanyo WorldSpace DSB-WS1000 Instruction Manual](#)

(27 pages)

[Receiver Sanyo FXD-MP690 Operating Instructions Manual](#)

Full panel detachable high power fm/mw/lw stereo receiver compact disc player

(22 pages)

[Receiver Sanyo KA-IF01RGB Owner's Manual](#)

Interface board (21 pages)

Summary of Contents for Sanyo SIRIUS STILETTO 10

[Page 1](#) Sanyo Fisher Co. 21605 Plummer St. Chatsworth, CA 91311 www.sanyo.com SIRIUS Satellite Radio 1221 Avenue of the Americas New York, NY 10020 (888) 539-7474 CRSR-10 User Guide www.sirius.com © 2004 SIRIUS Satellite Radio Inc. CRSR-10 (7-24-04)

[Page 2: Table Of Contents](#)

Important Information ... 37 Menu Display Options ... 21 Warranty ... 38 Box Contents Unpack your Sanyo CRSR-10 and accessories carefully and make sure that everything listed here is Satellite Radio's ® present: 1 x CRSR-10 and 3 x Faceplates 1 x Adaptor...

[Page 3: Safety Precautions](#)

Safety Precautions Warning Take the following precautions to prevent fire and Take the following precautions to prevent traffic avoid personal injury: accidents and avoid personal injury: • To avoid short circuits, never put or leave any • Installation must be performed according to this metallic objects (coins, tools, etc.) inside the unit.

[Page 4: Installation In A Vehicle](#)

Cleaning the Unit • Do not install the CRSR-10 where it may hinder the If the unit becomes dirty, turn its power off and function of safety devices such as an airbag. wipe it clean with a soft dry cloth. Do not use hard Doing so may prevent the airbag from functioning cloths or paint thinner, alcohol, or other volatile properly in the event of an accident.

[Page 5: Installation In A Home Or Office](#)

Running the Car Antenna Cable 8. Temporarily plug the cigarette lighter adapter Before routing the antenna cable, confirm that the into the cigarette lighter. antenna is mounted in a good location. 9. Hook the CRSR-10 onto the mounting slot of 1.

[Page 6: Sanyo Controls And Features](#)

Sanyo Controls and Features 1. Power Button 2. CHANNEL Button: Navigates through display 3. SELECT Button: Selects of items highlighted 4. Category (CAT.) Up/ Down Buttons: Navigates through the Category List Screen which displays : Pressing and releasing SIRIUS Channel

Categories. The current turns the CRSR-10 On and Off.

[Page 7: Activating Your Sirius Subscription](#)

You will not be able to tune to any other channels Before you can listen to the CRSR-10, you must until you activate your SIRIUS subscription. subscribe to SIRIUS Satellite Radio's service. 1. Make sure that the CRSR-10 is properly 4. Press the MENU button to enter the "Menu connected and that its antenna is oriented to Options"...

[Page 8: Search Modes \(Category, Channel, Artist, Song\)](#)

Search Modes (Category, Channel, Artist, Song) The CRSR-10 has four ways to search for and select music: by category, by channel, by artist, and by song title. Searching Categories If you want to listen to a different entertainment Searching Channels (Channel List Mode) category, push the CAT.

[Page 9: Setting Channel Presets](#)

Setting Channel Presets Searching for a Channel Preset (P.TUNE Mode) You can store up to 20 of your favorite channels as It is possible to quickly search through all of presets, for quick access. Presets are stored in 2 your presets using the CHANNEL Button. banks, A and B, each containing 10 channel presets.

[Page 10: Memory \(Memo\) And Song Seek \(S-Seek\) Functions18](#)

Memory (MEMO) and Song Seek (S-SEEK) display for 1-second, followed by a pop-up screen Functions presenting the Replace-Cancel (below, top right) This feature allows you to capture and store the options. This prompt allows you to make the current Artist & Song title with a total of 10 listings following Replace/Cancel choices: (10 Artist/Song Title combinations).

[Page 11: Menu Display Options](#)

Activating the Song (S-Seek) Alert 1. Press and hold the MEMO button for 2 seconds to An audible beep tone will be heard indicating that enter the S-Seek Mode. a match has been found. The display then reverts 2. Press and Release the SELECT Button. A pop-up to the S-Seek Alert screen which displays the screen displaying two selectable options - current matches.

[Page 12: Display Settings](#)

Display Settings To adjust the Brightness and Contrast of the CRSR- 10's LCD display, either press the DISP Button on the face of the CRSR-10 or while in the "Menu Options" list, perform the following steps: 1. Use the CHANNEL Button to highlight the "Display Settings"...

[Page 13: Channel Add/Skip](#)

Audio Jack Connection Options Use the CHANNEL Buttons to scroll through the If you would like to use the supplied Audio Jacks list of available frequencies. Use the CAT. (shown below) instead of the built-in wireless FM Buttons to scroll 5 lines at a time for faster Transmitter, you must first confirm that your car Frequency search.

[Page 14: Audio Level](#)

Audio Level Changing the Lock/Unlock Code The audio output of the CRSR-10 can be adjusted The first time the Lock/Unlock function is accessed, to fine-tune the audio signal level for maximum the user must enter the default lock code. The performance.

[Page 15: Memory Options](#)

Memory Options In this mode, the user can turn the Memory Search Function (S-SEEK) On or Off. In addition, all 20 Preset Memory Locations can be cleared. To change the Memory Options, use the following procedure while in the "Menu Options" List mode: b.

[Page 16](#) the display followed by the alarm options: • Set Alarm: Use the CHANNEL Button to select "Set Alarm" From the Alarm Clock Menu. Select either " Off" (Default) or ""On" from the Menu and press the SELECT Button to set the alarm On or Off.

[Page 17: Factory Default](#)

Factory Default This Menu option is designed to restore all the original factory settings. To activate the Factory Default perform the following procedure while in the "Menu Options" List

mode: 1. Use the CHANNEL Button to highlight the "Factory Default" option. Press the SELECT Button to select.

[Page 18: Troubleshooting](#)

Troubleshooting PROBABLE CAUSE FAULT Blown Fuse, power cable not properly CRSR-10 does not turn on connected Satellite antenna not connected "Antenna Not Detected" Antenna or cable is faulty message FM modulator frequency contains static Audio static or loss of clarity Vehicle antenna not connected to radio No signal on CRSR-10 Check for obstacles over or around...

[Page 19: Optional Accessories](#)

Optional Accessories Add one or all of these accessories to maximize your Sanyo experience. BMBX-10 Portable Boombox The BMBX-10 Boombox is a portable docking The FM Switching Box is an optional accessory if station and audio system for the Sanyo CRSR- you choose to hard-wire your CRSR-10 to your 10.

[Page 20: Warranty](#)

SANYO MOBILE AUDIO MODEL CRSR-10 LIMITED WARRANTY OBLIGATIONS In order to obtain warranty service, the product must be delivered to and picked up from an Authorized Sanyo Factory Service Center at the user's expense, unless specifically stated otherwise in this warranty. The names and addresses of Authorized Sanyo Service Centers may be obtained by calling the toll-free number listed below.

This manual is also suitable for:

[Crsr10](#)