

# Asus VENTO 3600 Quick Start Manual

2								
•								



Download this manual	Quick Links	



# Removing the side cover

```
A

1. Push down to release the top tabs of the cable management kit, then pull up the cable management kit to release it from the bottom tabs.

2. Remove three screen on the rear panel.

3. Turn the swivel and the direction of the rear panel.

5. Tilt the side covered the direction of the chassis.

B

1. Slide the PSU into the screen it it snugly fits the metal rail.

2. Secure with screen and side it out of the voltage in your area.
```





### C

- 1. Push the marked portion of the Magic Mask
- 2. Remove the drive bay cover.
- 3. Slide the bay lock toward the
- sign.
  4. Insert the ODD into the bay.
  5. Align the ODD holes with the bay holes, then slide

the bay lock toward the sign to secure the drive in

place.
6. Connect cables.

Spanish






Installing the power supply unit (PSU)



 




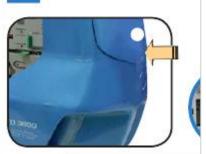







Computer Accessories Asus Prime AP201 User Manual

(32 pages)

Computer Accessories Asus ROG-THOR Series Quick Start Manual

Power supply unit (141 pages)

Computer Accessories Asus P2000 User Manual

Keyboard and mouse set (2 pages)

Asus CW100 - Wireless Keyboard And Mouse Set Manual

(article)

Computer Accessories Asus CW101 Quick Start Manual

Wireless keyboard and mouse set (2 pages)

Computer Accessories Asus TUF Gaming GT 501 User Manual

(28 pages)

Computer Accessories Asus Chromebit CS10 Quick Start Manual

(2 pages)

Computer Accessories Asus Varidrive Installation Manual

Varidrive (4 pages)

Computer Accessories Asus Audio Cover CA71 User Manual

(112 pages)

Computer Accessories Asus Eee Keyboard & Mouse Kit Manual

(2 pages)

Computer Accessories Asus W3000 Quick Start Manual

Wireless keyboard & mouse kit (2 pages)

Computer Accessories Asus TA-55 User Manual

Screwless model (2 pages)

Computer Accessories Asus Xonar HDAV 1.3 Slim Quick Start Manual

Av card (44 pages)

Computer Accessories Asus Eee Keyboard + Mouse Set User Manual

(43 pages)

## Summary of Contents for Asus VENTO 3600

Page 1 E2844 VENTO 3600 Removing the side cover Installing the power supply unit (PSU) Installing an optical disk drive (ODD) Continued at the back English German French 1. Push down to release the top tabs of the cable management kit, then pull up the cable management kit to release it from the bottom tabs. 2. Remove three screws on the rear panel. 3. Turn the swivel 45° clockwise to release the side cover. 4. Push the side cover to the direction of the rear panel. 5. Tilt the side cover and slide it out of the chassis. 1. Slide the PSU into the slot until it snugly fits the metal rail.

Page 2 VENTO 3600 (continued) Installing a floppy disk drive (FDD) Installing a hard disk drive (HDD) Screw holes Reinstalling the side cover Side panel hooks Installing an expansion card Chassis side rail French English German 1. Press down the HDD cage lock, then pull the cage out of the chassis. 2. Insert the HDD into the upper bay of the cage. Secure with screws. 3. Reinstall the HDD cage to the chassis. 4. Connect cables. 1. Push out the green lock tab.