



# Sanyo Sprint SCP-7000 Operating Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73



•

[Table of Contents](#)

•

## Bookmarks

## Quick Links

[Download this manual](#) See also: [User Manual](#)





# SCP-7000

Operating Guide  
(Draft)



## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Sanyo Sprint SCP-7000

[Cell Phone Sanyo SPRINT PCS VISIO SCP-7000 User Manual](#)

Sprint pcs vision phone (254 pages)

[Cell Phone Sanyo SCP-7000 User Manual](#)

Sanyo scp-7000: users guide (254 pages)

[Mobile phone Sanyo SCP-7000 User Manual](#)

Sanyo scp-7000 mobile phone user guide (140 pages)

[Cell Phone Sanyo SCP-7000 Specifications](#)

Sanyo scp-7000: specifications (2 pages)

[Cell Phone Sanyo SCP-7300 User Manual](#)

Dual band/tri mode phone (81 pages)

[Cell Phone Sanyo SCP-7300 Specifications](#)

Rugged and stylish dual band/tri-mode sprint pcs ready link phone (2 pages)

[Cell Phone Sanyo SCP-7300 User Manual](#)

Pcs vision ready link phone (252 pages)

[Cell Phone Sanyo SCP-7050 User Manual](#)

Sanyo cell phone user manual (139 pages)

[Cell Phone Sanyo SCP-7050 User Manual](#)

Sony cell phone user manual (130 pages)

[Cell Phone Sanyo SCP-7050 User Manual](#)

Sprintvision phone (267 pages)

[Cell Phone Sanyo SCP-7050 User Manual](#)

Sprint vision phone (267 pages)

[Cell Phone Sanyo SCP-7400 User Manual](#)

Sanyo cell phone user's guide (293 pages)

[Cell Phone Sanyo SCP-7200 User Manual](#)

Sanyo scp-7200: user guide (197 pages)

[Cell Phone Sanyo Sprint SCP-7200 User Manual](#)

Pcs vision ready link phone (197 pages)

[Cell Phone Sanyo SCP-7200 Specifications](#)

Sanyo scp-7200: specifications (2 pages)

[Cell Phone Sanyo SCP-7500 User Manual](#)

(183 pages)

## Summary of Contents for Sanyo Sprint SCP-7000

[Page 1](#) SCP-7000 Operating Guide (Draft)

### [Page 2: Table Of Contents](#)

Table of Contents Getting to Know Your Phone .....6 Front View of Phone  
.....6 Key Functions .....7 Viewing the Display Screen.....8  
Turning Your Phone On and Off .....9 Unlocking Your Phone.....9 Using  
Your Phone's Battery.....10 Displaying Your Phone Number .....11 Making  
and Answering Calls .....12 Making Calls .....12...

[Page 3](#) Selecting Ringer Types for Messages.....21 Selecting Ringer Types for

Voicemail or Calendar/Alarm.....22 Setting Tone Length, Start-up/Power-off Tone, Voice Prompt or Key Press Echo.....22 Adjusting the Phone's Volume Settings.....22 Alert Notification .....23 Silence All .....23 Display Settings.....24 Changing the Text Greeting .....24 Changing the Backlight Time Length.....24 Changing the Display Screen Animation.....25 Changing the Display for Incoming Calls.....25...

[Page 4](#) Resetting Your Phone .....34 Resetting and Locking Your Phone Through SMS .....34 Controlling Your Roaming Experience .....35 Understanding Roaming.....35 Setting Your Phone's Roam Mode .....36 Controlling Roaming Charges Using Call Guard .....36 Navigating Through Phone Menus .....38 Menu Navigation .....38 Menu Structure.....38 Managing Call History .....39...

[Page 5](#) Erasing Day's Events or Call Alarms .....48 Viewing a Feature/Past Day's Scheduled Events.....48 Adding To Do List Items .....49 Viewing the To Do List .....49 Editing To Do List Items.....49 Adding a To Do List Item to the Calendar .....49 Deleting Items from the To Do List .....50 Viewing Memory in Your Scheduler .....50 Purging All Events.....50...

[Page 6](#) New Messages.....62 Message Storage .....62 Sending a Message in the Outbox Folder .....62 Message Options.....62 Displaying an SMS Text Message.....64 Changing the Display Font Size of a Message .....64 Prepending a Phone Number From a Message .....64 Moving a Message Into Another Folder .....64 Editing Folders.....65 Erasing a Folder.....65 Erasing Messages .....65...

## [Page 7: Getting To Know Your Phone](#)

Getting to Know Your Phone Front View of Phone 1. Earpiece 2. Signal Strength Indicator 17. Battery Strength Indicator 3. Main LCD (display) 4. Navigation Key 5. Softkey (left) 16. Softkey (right) 6. MENU/OK 15. BACK Key 7. Web Key 14.

## [Page 8: Key Functions](#)

Key Functions Earpiece lets you hear the caller and automated prompts. Main LCD (display) displays all the information needed to operate your phone. Navigation Key scrolls through the phone's menu options and acts as a shortcut key from standby mode. (Up to access Messaging, Down to access My Content, Right to access Contacts, and Left to access your own customized shortcut) Softkey (left) lets you select softkey actions or menu items corresponding to the bottom left line on the Main LCD.

## [Page 9: Viewing The Display Screen](#)

Viewing the Display Screen This list identifies some of the more common symbols you'll see on your phone's display screen. shows your current signal strength. The more lines you have, the stronger your signal. means your phone cannot find a signal. tells you a call is in progress.

## [Page 10: Turning Your Phone On And Off](#)

Softkeys You can select the menus, which are described at the bottom line of the display by pressing the corresponding softkeys (left/right). In this User Manual, the explanation for selecting such menus are as shown below: Press Memo (left softkey). (Press the left softkey corresponding to Memo.) Turning Your Phone On and Off Turning Your Phone On:...

## [Page 11: Using Your Phone's Battery](#)

Using Your Phone's Battery Installing the Battery Your phone comes with a Lithium Ion battery. Follow these steps to install it: 1. Insert the battery into the opening on the back of the phone and gently press down. 2. Place the battery cover into the position, and then slide it until you hear it snap into place. Removing the Battery To remove your battery, follow these easy steps: 1.

## [Page 12: Displaying Your Phone Number](#)

Displaying Your Phone Number To display your phone number: Press MENU/OK to display the main menu. Select Contacts and press MENU/OK. Select My Phone# and press MENU/OK. Note: To access the phone's main menu, press MENU/OK from standby mode. Menu items may be selected by highlighting them with the navigation key and pressing MENU/OK, or you can press

the number corresponding to the menu item on your keypad.

### [Page 13: Making And Answering Calls](#)

**Making and Answering Calls Making Calls** Make sure your phone is on. Enter a phone number from standby mode. (If you make a mistake while dialing, press BACK to erase one digit at a time. Press and hold BACK to erase the entire number.) Press TALK or SPEAKER.

### [Page 14: Answering Calls](#)

**Answering Calls** Make sure your phone is on. If your phone is off, incoming calls go to voicemail. When your phone rings, press TALK or SPEAKER. To disconnect the call, press END/. Your phone notifies you of incoming calls in the following ways: The phone rings and/or vibrates.

### [Page 15: Changing The Ringer Volume](#)

**Changing the Ringer Volume** To change the ringer volume, press the Side Volume key when the phone is open and in standby mode. Note: To change the ringer volume from the main menu, see "Adjusting the Phone's Volume Settings" on page 22. **Adjusting Volume During a Conversation** When you need to adjust the receiver volume during a conversation, use the Side Volume key, or press the navigation key up or down while a call is in progress.

### [Page 16: In-Call Options](#)

**In-Call Options** During a call, your phone displays menu options by pressing Options (right softkey). To select an option, highlight it and press MENU/OK. Flash to answer an incoming Call Waiting call or to connect a third party during Three-Way Calling. Mute or Unmute to mute or reactivate your phone's microphone.

### [Page 17: Saving A Phone Number](#)

**Saving a Phone Number** Your phone can store up to 500 phone numbers in up to 300 Contacts entries. Each entry's name can contain 16 characters. Your phone automatically sorts the Contacts entries alphabetically. To save a number from standby mode: Enter a phone number.

### [Page 18: Abbreviated Dialing](#)

**Abbreviated Dialing** Abbreviated Dialing is another form of speed dialing. It allows you to dial a number by entering the last 3-6 digits of any number in your Contacts directory. This feature becomes available when you enable Abbreviated Dialing and enter the appropriate digits of a phone number. To make a call using Abbreviated Dialing: Enter the last 3-6 digits of a contact's phone number.

### [Page 19: Entering Text](#)

**Entering Text Selecting a Character Input Mode** Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry and when using Picture Mail and SMS Text Messaging). To change the character input mode: 1.

### [Page 20: Entering Characters By Using Alphabet Mode](#)

**Entering Characters by Using Alphabet Mode** To enter characters using Alphabet mode (See "Selecting a Character Input Mode" on page 18). Press the corresponding keys until the desired letter appears. By default, the first letter of an entry is capitalized and following letters are lowercased. Characters scroll in the following order: English Sequence Upper Case...

### [Page 21: Entering Numbers, Symbols, Smileys And Preset Messages](#)

**Entering Numbers, Symbols, Smileys and Preset Messages Entering NUMBERS** To enter numbers: 1. In a text entry field, press Mode (right softkey). 2. Select NUMBER and press MENU/OK. 3. Press the corresponding numeric key to enter the number. Shortcut: Press and hold the corresponding number key to enter the number directory in alphabet mode or T9 mode.

### [Page 22: Controlling Your Phone's Settings](#)

**Controlling Your Phone's Settings Reminder:** To access the phone's main menu, press MENU/OK from standby mode. Menu items may be selected by highlighting them with the navigation key and pressing MENU/OK. **Sound Settings Ringer Types** Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls

and types of messages.

### [Page 23: Selecting Ringer Types For Voicemail Or Calendar/Alarm](#)

Selecting Ringer Types for Voicemail or Calendar/Alarm To select a ringer type for voicemail or calendar/alarm: 1. Press MENU/OK to access the main menu. Select Settings and press MENU/OK. Select Sounds and press MENU/OK. Select Ringer Type and press MENU/OK. 5.

### [Page 24: Alert Notification](#)

Alert Notification Your phone comes with several different options to keep you aware of what's going on by sounding the alert or ringer. Service sets an alert to notify you of network services parameter changes. Ready Link sets an alert to notify you of Ready Link calls. Voicemail sets an alert to notify you of voice messages.

### [Page 25: Display Settings](#)

Display Settings Changing the Text Greeting The text greeting can be up to 15 characters and is displayed on your phone's screen in standby mode. You may choose to keep the phone's default greeting, or enter your own custom greeting. To display or change your greeting: 1.

### [Page 26: Changing The Display Screen Animation](#)

Changing the Display Screen Animation Your new phone offers options for what you see on the display screen during various phone functions. To assign the animation: 1. Press MENU/OK to access the main menu. 2. Select Settings and press MENU/OK. 3.

### [Page 27: Changing The Background](#)

Default returns the standby display to its default setting. 6. Press MENU/OK to save the setting to follow each system prompt or when confirming the preview display. Changing the Background You can customize your phone display's appearance by selecting a color scheme to reflect your personality.

### [Page 28: Location Settings](#)

Location Settings To enable your phone's Location feature: 1. Press MENU/OK to access the main menu. 2. Select Settings and press MENU/OK. 3. Select Location and press MENU/OK. 4. Read the disclaimer and press MENU/OK. 5. Select On and press MENU/OK. To deactivate this feature, select Off during step 5 above.

### [Page 29: Phone Setup Options](#)

Phone Setup Options My Favorites You can arrange your own shortcut menu. 1. Press the navigation key left. 2. Select an unassigned number and press Add (right softkey). 3. Select your desired menu and press Set (right softkey). Auto-Answer Mode You may set your phone to automatically pick up incoming calls when connected to an optional hands-free car kit or a headset.

### [Page 30: Setting Any Key Answer](#)

Setting Any Key Answer This feature allows you to answer incoming calls by pressing any key (except END, BACK, softkeys, and side keys). To activate this feature: 1. Press MENU/OK to access the main menu. 2. Select Settings and press MENU/OK. 3.

### [Page 31: Setting Headset Mode](#)

To set your prepend number: 1. Follow steps 1-4 above. 2. Select Prepend and press MENU/OK. 3. Select Enable and press MENU/OK. 4. Select Prepend# and press MENU/OK. 5. Enter a five-or-six-digit number and press MENU/OK or OK (left softkey). To deactivate this feature, select Disable during step 3 above.

### [Page 32: Editing Preset Messages](#)

Editing Preset Messages Your phone is loaded with 20 preset messages to help make sending text messages faster and easier. These messages can be customized or deleted to suit your needs. You can even add your own preset messages to the list. To edit a preset messages: 1.



## [Page 33: Setting Your Phone's Security](#)

Setting Your Phone's Security Accessing the Security Menu You must enter your lock code to view the Security menu. To access the Security menu: 1. Press MENU/OK to access the main menu. 2. Select Settings and press MENU/OK. 3. Select Security and press MENU/OK. 4.

## [Page 34: Calling In Lock Mode](#)

Calling in Lock Mode You can place calls to 911 and to your special numbers when in lock mode. To place an outgoing call in lock mode: To call an emergency number or special number, enter the phone number and press TALK or SPEAKER.

## [Page 35: Erasing My Content](#)

Erasing My Content To erase all downloads: 1. From the Security menu (See "Accessing the Security Menu" on page 32), select Erase Content and press MENU/OK. 2. If you're sure you want to erase all of your downloaded data, press OK (left softkey), and then select Yes.

## [Page 36: Controlling Your Roaming Experience](#)

Controlling Your Roaming Experience Understanding Roaming Recognizing the Roaming Icon on the Display Screen Your phone's display screen always lets you know when you're off the Nationwide PCS Network and whether your phone is operating in analog or digital mode. The following chart indicates what you'll see depending on where you're using your phone.

## [Page 37: Setting Your Phone's Roam Mode](#)

Note: If you're on a call when you leave the Nationwide PCS Network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think PCS Service is available, turn your phone off and on again to reconnect to the Nationwide PCS Network.

[Page 38](#) To place roaming calls with Call Guard on: Press any key to erase the pop-up message, press Options (right softkey), highlight Roam Call, or Roam:Speaker On and press MENU/OK. - or - 1. From standby mode, dial 1 + area code + the seven-digit number. (You can also initiate a call from the Contacts directory, Call History, or Messaging.) 2.

## [Page 39: Navigating Through Phone Menus](#)

Navigating Through Phone Menus Menu Navigation The navigation key on your PCS Phone allows you to scroll through menus quickly and easily. To scroll bar at the right of the menu keeps track of your position in the menu at all times. To navigate through a menu, simply press the navigation key up or down.

## [Page 40: Managing Call History](#)

Managing Call History Viewing History You'll find the Call History feature very helpful. It is a list of the last 20 phone numbers or Contacts entries for calls you placed, accepted or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

## [Page 41: Saving A Phone Number From Call History](#)

Note: You cannot make calls from Call History to entries identified as No ID or Restricted. Saving a Phone Number From Call History Your phone can store up to 500 phone numbers in up to 300 Contacts entries. An entry may contain up to seven numbers.

## [Page 42: Using Contacts](#)

Using Contacts Adding a New Contacts Entry Your phone can store up to 500 phone number in up to 300 Contacts entries. An entry may contain up to seven numbers. Each entry's name can contain 16 characters. To add a new entry: 1.

## [Page 43: Contacts Entry Options](#)

Contacts Entry Options To access a Contacts entry's options, display the Contacts list, highlight an entry and press MENU/OK. Then select a phone number and press Options (right softkey). To select an option, highlight it and press MENU/OK. Edit to edit the selected entry. Call to dial the

selected number.

### [Page 44: Editing A Contacts Entry](#)

Editing a Contacts Entry To make changes to an entry: 1. Press the navigation key right. 2. Select the entry you wish to edit and press MENU/OK. 3. Select a phone number, press Options (right softkey), highlight Edit and press MENU/OK. -or- Select an email address or Web address, then press Edit (right softkey).

### [Page 45: Selecting A Ringer Type For An Entry](#)

Selecting a Ringer Type for an Entry You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. To select a ringer type for an entry: 1. Press the navigation key right. 2.

### [Page 46: Using The Phone's Calendar And Tools](#)

Using the Phone's Calendar and Tools Using Your Phone's Calendar To display your calendar: 1. Press MENU/OK. 2. Select Calendar and press MENU/OK. Setting the Time/Date In a no-service area or an Analog service area, it's necessary to set the actual time and date to use the Calendar function.

### [Page 47: Adding An Event To The Calendar](#)

Adding an Event to the Calendar Your Calendar helps organize your time and reminds you of important events. To add an event: 1. Press MENU/OK to access the main menu. 2. Select Calendar and press MENU/OK. 3. Select the day you want to add an event to and press Options (right softkey). 4.

### [Page 48: Viewing Events](#)

Viewing Events To view your scheduled events: 1. Press MENU/OK to access the main menu. 2. Select Calendar and press MENU/OK. 3. Select the day for which you want to view events and press MENU/OK .The event list appears. Editing an Event 1.

### [Page 49: Call Alarm Menu](#)

Call Alarm Menu When your phone is turned on and you have scheduled a call alarm, your phone alerts you and displays the name or phone number you wish to call. To respond to a call alarm: 1. Press MENU/OK to silence the alarm and see the unchecked event list. Highlight the unchecked event and press MENU/OK to see the event details or press Options (right softkey) for the following options.

### [Page 50: Adding To Do List Items](#)

Adding To Do List Items Your phone can store and manage up to 20 To Do List items. To add an item to your To Do List: From the Calendar display, press Options (right softkey). 2. Highlight To Do List and press MENU/OK. 3.

### [Page 51: Deleting Items From The To Do List](#)

Deleting Items from the To Do List 1. From To Do List display, highlight the item you want to erase and press Options (right softkey). 2. Select your Erase Item, Erase Selections or Erase All and press MENU/OK. Erase Item erases an item from the To Do List. Erase Selection erases the selected To Do item at one time.

### [Page 52: Finding Icon Definitions](#)

Finding Icon Definitions To view an explanation of icons that appear on the display: 1. Press MENU/OK to display the main menu. 2. Select Settings and press MENU/OK. 3. Select Phone Info and press MENU/OK. 4. Select Help and press MENU/OK. 5.

### [Page 53: Using The Calculator](#)

To stop the alarm: Press any key to stop the alarm. Using the Calculator Your phone comes with a built-in calculator. To use the calculator: 1. Press MENU/OK to display the main menu. 2. Select Tools, and press MENU/OK. 3. Select Calculator, and press MENU/OK. 4.

## [Page 54: Using Your Phone's Voice Services](#)

**Using Your Phone's Voice Services**  
**Managing Voice Memos** You can use your phone's Voice Services to record brief memos during a call. **Recording Voice Memos** To record the other party's voice during a phone call: 1. During a call, press Options (right softkey) to display the options. 2.

## [Page 55: Erasing Voice Memos](#)

**Erasing Voice Memos** To erase an individual voice memo: 1. Press MENU/OK to access the main menu. 2. Select Voice Services and press MENU/OK. 3. Select Voice Memo and press MENU/OK. 4. Select Play or Play:Speaker and press MENU/OK. 5. Display the memo list, highlight the memo you want to erase, and press Options (right softkey).

## [Page 56: Selecting An Announcement For Screen Call](#)

**Selecting an Announcement for Screen Call** To select a Screen Call announcement: 1. Press MENU/OK to access the main menu. 2. Select Voice Services and press MENU/OK. 3. Select Screen Call and press MENU/OK. 4. Select Announcement and press MENU/OK. 5.

## [Page 57: Erasing An Announcement](#)

**Erasing an Announcement** To erase an announcement: 1. Follow the steps 1 - 5 above. 2. Select Erase Name to erase the name for a pre-recorded announcement and press MENU/OK. - or - Select Erase to erase the message for a custom announcement and press MENU/OK. 3.

## [Page 58: Using Voicemail](#)

**Using Voicemail**  
**Setting Up Your Voicemail** All unanswered calls to your phone are automatically transferred to you voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated. To set up your voicemail: 1.

## [Page 59: Retrieving Your Voicemail Messages](#)

**Retrieving Your Voicemail Messages** You can review your messages directly from your wireless phone or from any other touch-tone phone. To dial from your wireless phone, you can either speed dial your voicemail box or use the menu keys. **Using One-Touch Message Access** Press and hold 1 .

**Page 60** **PCS Callback** Return a call after listening to a message without disconnecting from voicemail. 1. After listening to a message, press 8 . 2. Once the call is complete, you're returned to the voicemail main menu. **Voice Mail-to-Voice Mail Message Record** and send a voice message to other PCS Voicemail users. 1.

## [Page 61: Using Caller Id](#)

**Clearing the Message Icon** Your phone may temporarily continue to display the message icon after you have checked your voice and text messages. To clear the icon from the display screen: Press MENU/OK to access the main menu. Select Messaging and press MENU/OK. Select Voicemail and press MENU/OK.

## [Page 62: Making A Three-Way Call](#)

**Making a Three-Way Call** With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls. To make a Three-Way Call: 1. Enter a number you wish to call and press TALK or SPEAKER. 2.

## [Page 63: Using Sms Text Messaging](#)

**Using SMS Text Messaging** With SMS Text Messaging, you can use other people's wireless phone numbers to send instant text messages from your phone to their messaging-ready phones - and they can send messages to you. In addition, SMS Text Messaging includes a variety of preset messages, such as "Can't talk right now."

**Page 64** **Message List Options:** From the message list display, press Options (right softkey). To select an option, highlight it and press Menu/OK. Reply to reply to the message. (Inbox and your defined folder only.) Forward to forward the message. (Inbox, your defined folder, and Sent only.) Edit to edit a message.

## [Page 65: Displaying An Sms Text Message](#)

Displaying an SMS Text Message To display an SMS Text message from the message notification alert, see "New Messages" on page 62. To display an SMS text message from the main menu: Press Menu/OK to access the main menu. Select Messaging and press Menu/OK. Select Text Msgs and press Menu/OK.

## [Page 66: Editing Folders](#)

Editing Folders To edit a folder: 1. From the folder list display, highlight a folder you have defined. 2. Press Options (right softkey). Select Edit Folder and press Menu/OK. Select the box you wish to edit and press Menu/OK. Folder Name to edit the folder name. Auto Filing to set auto filing to on or off.

[Page 67](#) To erase selected messages: 1. From the folder list display, press Options (right softkey). 2. Select Erase Messages and press Menu/OK. 3. Select Read, Unread, and/or Sent, and press Menu/OK to check the appropriate box(es). 4. After selecting the box(es), press Done (left softkey). 5.

## [Page 68: Safety](#)

Safety General Precautions There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service. Hold the phone with the antenna raised, fully-extended, and over your shoulder. Try not to hold, bend, or twist the phone's antenna. Don't use the phone if the antenna is damaged.

## [Page 69: Using Your Phone With A Hearing Aid Device](#)

Phones that are rated will have the rating on the box. Your SCP-7000 by Sanyo has an M3 rating. Note: Phones rated M3 or M4 meet FCC requirements and may generate less interference to hearing...

[Page 70](#) Guarantee you may return the phone within 14 days of purchase for a full refund. Getting the Best Hearing Device Experience With Your SCP-7000 by Sanyo One way to minimize interference is to set the phone's Display and Keypad backlight settings to ensure the minimum time interval.

## [Page 71: Caring For The Battery](#)

Caring for the Battery Protecting Your Battery The guidelines listed below help you get the most out of your battery's performance. In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C). Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.

[Page 72](#) 0.782...

[Page 73](#) determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.