



Toshiba CD328BT Instruction Manual

Portable stereo radio cd/mp3/usb/sd card/bluetooth player

1
2
3
4
5
6
7
8
9
10
11
12
13
Table Of Contents
14

--

•

[Table of Contents](#)

•

Bookmarks


--

Quick Links

- [1 Important Notes](#)
- [2 Location of Controls](#)
- [3 Basic Function](#)
- [4 Power Source](#)
- [5 Radio Operation](#)
- [6 Playing a Disc](#)

7 Bluetooth Operation

[Download this manual](#)

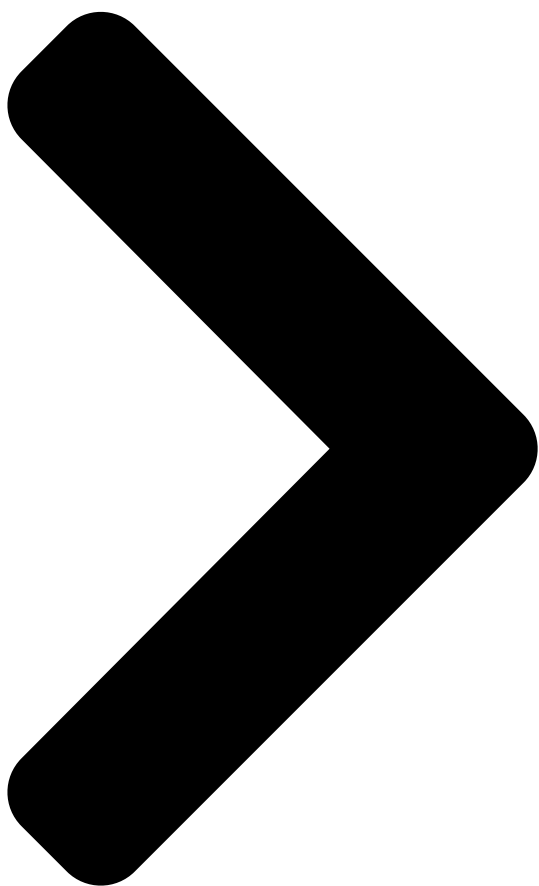

INSTRUCTION MANUAL
PORTABLE STEREO RADIO
CD/MP3/USB/SD
CARD/BLUETOOTH PLAYER
Model: CD328BT

IMPORTANT:

Please read before using and keep for future reference.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba CD328BT

[CD Player Toshiba SD-6915SU Instruction Manual](#)

5 disc dvd changer (21 pages)

[CD Player Toshiba SD-5915SC Owner's Manual](#)

Toshiba dvd video / cd / vcd 5 disc carousel changer owner's manual sd-5915su, sd-5915sc (52 pages)

[CD Player Toshiba BDX5500KU Symbio User Manual](#)

Streaming media and universal disc player (55 pages)

[CD Player Toshiba SD-5915 Specification Sheet](#)

Toshiba dvd changer specification sheet (2 pages)

[CD Player Toshiba SD-6915 Specifications](#)

Dvd changer, dvd-audio multi-channel playback (2 pages)

Summary of Contents for Toshiba CD328BT

[Page 1](#) INSTRUCTION MANUAL PORTABLE STEREO RADIO CD/MP3/USB/SD CARD/BLUETOOTH PLAYER Model: CD328BT IMPORTANT: Please read before using and keep for future reference.

[Page 2: Important Notes](#)

IMPORTANT NOTES CAUTION Use of controls or adjustment or performance of procedures other than those specified herein may result in hazardous radiation exposure. DANGER This Compact disc player is classified as a Class 1 LASER PRODUCT. THE CLASS 1 LASER PRODUCT label is located on the rear exterior.

[Page 3](#) Read these instructions. Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. Install in accordance with the manufacture's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

[Page 4](#) the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: ---Reorient or relocate the receiving antenna. ---Increase the separation between the equipment and receiver. ---Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

[Page 5: Location Of Controls](#)

LOCATION OF CONTROLS NAMES OF CONTROLS 1. DISPLAY 14. BACK/FAST BACKWARD/-10 2. SPEAKER DECORATION RING BUTTON 3. LEFT/RIGHT SPEAKERS 15. CD DOOR 4. PHONES JACK 16. NEXT/FAST FORWARD/+10 5. SD CARD SLOT BUTTON 6. USB PORT 17. STOP BUTTON 7. STANDBY/PAIR INDICATOR 18.

[Page 6: Remote Handset](#)

REMOTE HANDSET LOADING THE BATTERIES INTO THE REMOTE HANDSET □ Open the battery compartment cover. □ Insert two "AAA" batteries (not included) as indicated inside the battery compartment. □ Close the cover. Key Functions: 1. FUNCTION BUTTON 2. TUN.- 3. STOP BUTTON 4.

[Page 7: Power Source](#)

POWER SOURCE This unit is designed to be operated on AC/DC. AC OPERATION Plug the tail of supplied AC power cord into AC socket on unit and the plug into household AC outlet. The batteries will be automatically disconnected. This unit is designed in Switched-Mode Power

Source with voltage range from 100V to 240V.



[Page 8: Radio Operation](#)

RADIO OPERATION TUNING RADIO STATIONS Press the FUNC. button on unit or on remote control to select the TUNER FUNCTION, this unit is designed for FM ONLY. Tune to desired station by rotating the TUNING knob on unit or by pressing TUN+/ key on remote control, the display will show the band frequency.

[Page 9: Playing A Disc](#)





The display will show a flashing "READING", then the total number of tracks would be shown and the playback will start from track. 5. To remove the CD, press STOP button on unit or on remote control to turn off the unit, then press the PUSH TO OPEN button to open the CD compartment lid.

[Page 10: Repeat Play](#)

5  Press the /PAIR button on unit or key on remote control to start playback from the first programmed track. 6  Press the STOP button on unit or on remote control to stop program playback. To clear the program, you may press STOP button on unit or on remote control when the disc stopped and open the CD compartment lid, the program will be erased.

[Page 11: Sd Card Operation](#)

4. Press the STOP button on unit or on remote control to stop playing. The display will show total number of USB and STOP. 5. Proceed program play/repeat play (repeat 1- repeat folder - repeat all)/random play/intro play operation as the same described in above "CD/MP3 OPERATION". 6.

Page 12 COMPACT DISC MAINTENANCE 1. Always use a compact disc bearing the mark as shown. 2. Notes on handling discs  Removing the disc from its storage case and loading it.  Do not touch the reflective recorded surface.  Do not stick paper or write anything on the surface. ...

[Page 13: Specifications](#)

SPECIFICATIONS GENERAL Power Requirement AC100V-240V~60/50Hz DC
12V UM-1/D x 8pcs Power consumption 48 Watts Standby consumption
.....  0.5 Watts Dimensions.....21,0(D) x 49,2(W) x
19,8 (H) cm Operation temperature..... + 5°C - + 35° C BLUETOOTH: 3.0
VERSION RECEIVER SECTION Receiving Bands.....FM Frequency Range
.....