

TOSHIBA

Toshiba H9 ASD Simple Start Manual

1
2
3
4

--

•

Bookmarks

[Download this manual](#)

Quick Links



How do I obtain an Installation and Operation Manual with my ASD. How can I get one?

For more information, see the ASD Quick Start Guide.

How do I get more information from the Toshiba Customer Support Center or my local Toshiba distributor?

For training courses?

Training courses are offered at TI Headquarters in Houston, Texas. There are two types of training—maintenance and repair (nominal fee), and applications (free). Our instructors have years of experience in their respective fields and are continually being trained on new products. Students will gain valuable experience on the equipment and troubleshoot real faults that occur during normal ASD setup, operation, and maintenance. For a listing of upcoming training courses or to register, visit our website and click on the training tab.

How do I get additional information about Toshiba International Corporation (TIC) and TIC products?

For more information, see our website.

How do I get more information (3) 466-0277, or via fax at (713) 937-9349.

How do I get more information specific to my application?

How do I get more information about qualified personnel?

Qualified personnel is one who has the skills and knowledge about the construction, installation, operation, and maintenance of the equipment and has received safety training on the hazards of the equipment. Qualified personnel should be able to recognize and properly address hazards associated with the application of motor-driven equipment, and be retrained to safely energize, de-energize and lockout/tagout circuits and equipment, and clear faults in accordance with the applicable safety practices.

Why is my motor rotating in the wrong direction?

Qualified personnel should reverse any two of the three ASD output power leads (U/T1, V/T2, or W/T3) connected to the motor.

How do I get more information about application-specific reasons I need to remotely mount the ASD. How do I accomplish this?

Qualified personnel should mount the ASD at a location that is easily accessible by the user and mark the location of the screw holes. After drilling the screw holes, attach and secure the Electronic Operator Interface (EOI) to the mounting location. Connect the extension cable. For information on required hardware or for instructions on remote mounting using a Remote Mounting Kit, consult the Installation and Operation Manual.

How do I get more information about why my motor will not run. What now?

Qualified personnel should disconnect the input power to the ASD and check the voltage at R/L1, S/L2, and T/L3 are as specified for your unit. Ensure that the terminals of the terminal board are reconfigured for your application. Perform a Reset (to factory default settings). Ensure that the Local/Remote key is as required for your application and that you have provided a run command. If the ASD does not start, contact the Toshiba Customer Support Center.

How do I get more information about operation receive error messages that I don't understand. Where can I find information about trips/faults/alarms and troubleshooting?

Qualified personnel should refer to the LED and LCD screen displays, trip/fault/alarm descriptions and a list of possible causes of all trips/faults/alarms can be found in the ASD Quick Start Guide.

How do I get more information about the H9 ASD Simple Start Guide? Where can I find the instructions on installation and operating procedures only.

For additional information regarding your new H9 ASD, consult the

DO NOT

attempt to install or operate the H9 ASD until you have read and understood all of the user directions contained in this guide, and the product safety information and product labels contained in the Installation and Operation Manual.

Equipment warning labels provide useful information and indicate an imminently hazardous situation that may result in serious injury, severe property and equipment damage, or loss of life if safe procedures are not followed. Installation and operations shall be performed by qualified personnel only.

Buy: www.ValinOnline.com | Phone 844-385-3099 | Email: CustomerService@valin.com

Installation and Operation Manual
Downloaded from our website. To request a hard-copy of either document

contact TFC for additional information by writing to 13131 West Little York Rd., Houston, Texas, 77041, via email. If assistance is required, contact the Toshiba Customer Support Center.

H9 ASD Simple Start Guide

H9 ASD Installation and Operation Manual

Simple Start Guide

Installation and Operation Manual

H9 ASD Installation

H9 ASD

[Next Page](#)

1
2
3
4

Related Manuals for Toshiba H9 ASD

[Network Card Toshiba H9 ASD Installation And Operation Manual](#)

Adjustable low voltage heavy duty industrial speed drive (287 pages)

[DC Drives Toshiba ACE-tronics G9 ASD Installation And Operation Manual](#)

Adjustable speed drive (297 pages)

[Inverter Toshiba G9 ASD Quick Start Manual](#)

True torque control2 adjustable speed drive (91 pages)

[DC Drives Toshiba G9 ASD Quick Start Manual](#)

(4 pages)

[Inverter Toshiba G9 ASD Simple Start Manual](#)

(4 pages)

[Engine Toshiba HCV-1JBU Instruction Manual](#)

Vacuum contactor, 1.5kv - 600/720a (31 pages)

[Engine Toshiba EQP Global IEC Series Installation Instructions And Maintenance Manual](#)

Low voltage motors (34 pages)

[Engine Toshiba TEFC Series Installation & Maintenance Manual](#)

3-phase motor (18 pages)

[Engine Toshiba TB6605FTG Reference Manual](#)

Motor control closed-loop system (31 pages)

[Engine Toshiba 587 Frame Installation & Operation Manual](#)

Low voltage 50 & 60 hz motor (40 pages)

[Engine Toshiba Dura-Bull TX Brochure & Specs](#)

Medium voltage motors (6 pages)

[Engine Toshiba Low Voltage Motors EQP III-841 Brochure & Specs](#)

Low voltage motors (2 pages)

[Engine Toshiba EQP III-840 Product Brochure](#)

Toshiba low voltage motors product brochure (2 pages)

[Engine Toshiba Stainless Steel Washdown Duty Motor Toshwash SS Brochure & Specs](#)

Low voltage motors (2 pages)

[Engine Toshiba EQP III 300 Series Brochure & Specs](#)

Low voltage motors (2 pages)

[Engine Toshiba Low Voltage Motors VR Series Brochure & Specs](#)

Low voltage motors (2 pages)

Summary of Contents for Toshiba H9 ASD

[Page 1](#)requently Asked Questions eneral I did not receive an Installation and Operation Manual with my ASD. How can I get one? 9 ASD Quick Start Guide 9 ASD Installation and Operation Manual The...

[Page 2](#) 9 ASD Simple Start Guide 1. Receipt & Identification 3.

[Page 3](#) Programming Options: 4. Programming Electronic Operator Interface (EOI) The operating parameters displayed on the LCD are by Direct Access to Parameters...

[Page 4](#) 9 ASD Simple Start Guide 5. Run 6. Braking Local Command Frequency The motor may continue to rotate and coast to a stop after being shut off due to the inertia of the...

This manual is also suitable for:

[G9 asd](#)