



Toshiba RC-10NMFE Instruction Manual

Electric rice cooker/warmer

1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
Table Of Contents	
17	

--	--

•

[Table of Contents](#)

•

Bookmarks

--

Table of Contents

1 Safety Caution

2 Safety Warning

3 Part Names

4 Control Panel

5 How to Adjust the Clock

6 How to Cook


[7 Butter Cake](#)

[8 Maintenance](#)

[9 Specifications](#)

[10 Part Names and Functions](#)

[Download this manual](#)

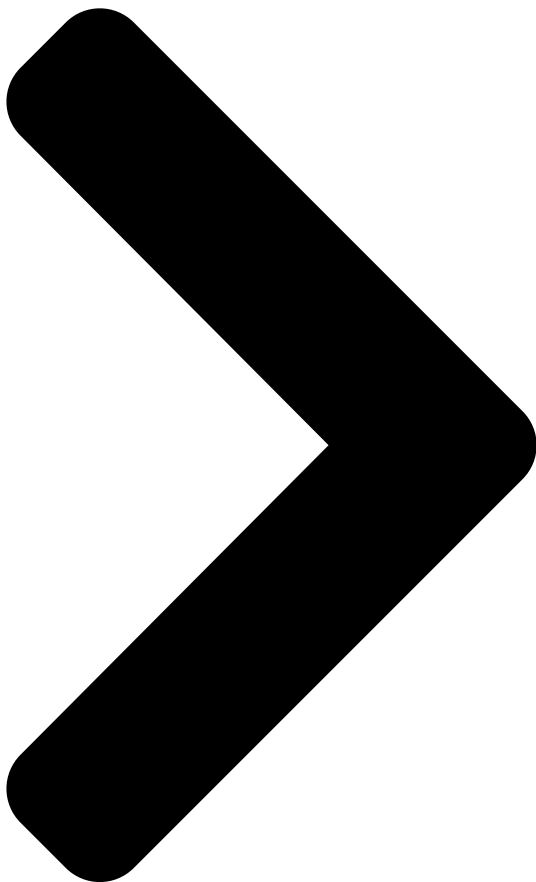

Toshiba Electric
Rice Cooker/Warmer

(For household use)

TOSHIBA
Instruction Manual

Model

RC-10NMF

RC-18NMF



RC-10NMFE
RC-18NMFE
TOSHIBA
RC-10NMFEIS
RC-18NMFEIS
RC-10NMFI
RC-18NMFI
RC-10NMFIAU
RC-18NMFIAU
RC-10MM
RC-18MM
RC-10MME
RC-18MME

NRNL10000000013_EN.indd 1
NRNL10000000013_EN.indd 1
8/27/18 10:49 AM
8/27/18 10:49 AM

[Table of Contents](#)



[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RC-10NMFE

[Toshiba RC-10NMF, RC-18NMF, RC-10NMF-E, RC-18NMF-E,
RC-10NMF-EIS, RC-18NMF-EIS - Toshiba Electric Rice Cooker/Warmer
Manual](#)

(article)

Rice Cooker Toshiba RC-10NMF Instruction Manual

Electric rice cooker/warmer (13 pages)

Rice Cooker Toshiba RC-10NMF Instruction Manual

Electric rice cooker/warmer (13 pages)

Rice Cooker Toshiba RC-10RHI Instruction Manual

Electric rice cooker/warmer (13 pages)

[Rice Cooker Toshiba RC-10JR1NP Instruction Manual](#)

Mechanical rice cooker / warmer, 1.0l/1.8l type (8 pages)

Rice Cooker Toshiba RC-18DR1NMY Instruction Manual

Electric rice cooker (23 pages)

[Toshiba RC-18DR1NMY, RC-10DH1NMY, RC-18DH1NMY - ELECTRIC RICE COOKER Manual](#)

(article)

Rice Cooker Toshiba RC-10JRNH Instruction Manual

Toshiba mechanical rice cooker / warmer (16 pages)

Rice Cooker Toshiba RC-10NAF Series Instruction Manual

Electric rice cooker/warmer (24 pages)

Rice Cooker Toshiba RC-10IRPH Instruction Manual

Microcomputer induction rice cooker (55 pages)

Rice Cooker Toshiba RC-10IRPMY Instruction Manual

(14 pages)

Toshiba RC-10IRPMY - 1.0L Microcomputer Induction Rice Cooker

Manual

(article)

Rice Cooker Toshiba RC-10ISSHK User Manual

Electric rice cooker (58 pages)

Rice Cooker Toshiba RC-10IH1TAU(N) User Manual

Electric rice cooker (23 pages)

Rice Cooker Toshiba RC-18DH1NP Instruction Manual

Electric rice cooker/warmer (20 pages)

Rice Cooker Toshiba RC-18ISPH Manual

(28 pages)

Summary of Contents for Toshiba RC-10NMFE

Page 1 Toshiba Electric Rice Cooker/Warmer (For household use) Instruction Manual Model
RC-10NMF RC-18NMF RC-10NMF E RC-18NMF E RC-10NMF EIS RC-18NMF EIS RC-10NMF I
RC-18NMF I RC-10NMF IAU RC-18NMF IAU RC-10MM RC-18MM RC-10MME RC-18MME
NRNL10000000013 EN.indd 1 NRNL10000000013 EN.indd 1 8/27/18 10:49 AM 8/27/18 10:49

AM...

[Page 2: Safety Caution](#)

Safety caution Caution Do not disassemble, repair or modify. Do not add ingredients, seasonings and water that exceed the water level scale of Do not immerse the appliance in water. the inner pot. Do not attempt to use the metal articles, e.g. a pin or a wire, into the hole.

[Page 3: Safety Warning](#)

Important Document on Safety Precaution Indicates the forbidden operation. Indicates the information which should be followed strictly. Safety Warning Do not disassemble, repair, fix, or modify the product (unless indicated in the operation manual). Do not pull or insert the electric plug and the magnetic plug with wet hands. Do not touch the product, cable, or electric plug with wet hands.

[Page 4: Part Names](#)

Part names Main Body Outer Lid Inner Lid (detachable) Inner Lid Packing Inner Pot Handle Hook Button Operation Panel Scoop Holder Hook Temperature Sensor Heating Plate Steam Vent Warning Label Plug insertion hole Power cord Power plug Power plug [power supply side] [main body side] Cord Accessories...

[Page 5: Control Panel](#)

CONGEE Congee 0.5-1 58-68 0.5-1.5 59-72 (MODEL : RC-10NMF, RC-18NMF, RC-10NMFI, RC-18NMFI, RC-10NMFE, RC-18NMFE, RC-10NMFEIS, RC-18NMFEIS) "Max" water level scale for boil water only. Please do not fill water over this level scale. NRNL10000000013_EN.indd 5 NRNL10000000013_EN.indd 5 8/27/18 10:49 AM...

[Page 6](#) How to install Earth lead wire (Model RC-10NMF, RC-18NMF, RC-10NMFE, RC-18NMFE, RC-10MM, RC-18MM, RC-10MME, RC-18MME) 1. Remove Screw. Spring washer and Flat washer on Earth connecting plate. Earth connecting plate Screw Spring washer Flat washer Screw 2. Set Earth lead wire on Earth connecting plate then put Flat washer and Spring washer respectively on Earth lead wire and fix...

[Page 7](#) Preparation Correct Incorrect Measure the rice with the measuring cup provided. • A flat-filled cup of rice is approx. 180 ml. ♦ Quickly rinse the rice until the water The rice can be rinsed in the inner pot. becomes clear. 1 Firstly, fill enough water and mix the rice and water and rinse the rice, then pour out the water immediately.

[Page 8: How To Adjust The Clock](#)

How to adjust the clock Example: To adjust the current time to 8:31 a.m. The clock display flashes. Hold down the Hrs button for more than 1 second. The clock display flashes. Press the Hrs button to adjust the Hour readings and press the Min button to adjust the Minute readings.

[Page 9](#) How to preset time Example: To set the timer for preset time to finish at 7:30 a.m. The TIMER indicator flashing. The last preset timer Press the TIMER button. flashing. TIMER The TIMER indicator flashing. The preset time in setting. Press the Hrs button and Min button to adjust the preset time.

[Page 10: How To Cook](#)

How to cook (White Rice, Mixed Rice, Quick Cook and Congee) NOTE ■ For rapid cook only. • Rapid cook refers to the cooking method that first shortens the cooking time. Generally, the rice cooked by this method tastes firmer and has a little water on its surface. •...

[Page 11](#) How to cook (Fermentation, Baking/Soup, Boiling Egg and Warming Soup) Example : Ferment cooking • Select cooking menu by MENU button. Select (Fermentation) press button • COOK indicator will flashing. • During press button MENU, screen displays menu () running change will occur.

[Page 12](#) How to keep warm Cooked rice will run into warming automatically. Start warming Press button to warming • The keep warm and reheat indicator will light up. • Screen displays running time. : hour) Stop warming Press button to cancel keep warm function. •...

[Page 13](#) Simple Round Bread Ingredient • Wheat flour100 g • Dry yeast2

g • Sugar 5 g • Salt2 g • Milk 60 ml • Butter 10 g
How to cooking Put the ingredients are gathered in the bowl. Take out the dough, round it again and put in the inner pot with a few vegetable oil.

[Page 14: Butter Cake](#)

Butter Cake Ingredient • Butter Cake flour mix 400 g •6 eggs • Milk 60 ml • Butter220 g
How to cooking Put the ingredients are gathered in the bowl. After the dough is mixed put Butter Cake flour mixed about 200 ml in the inner pot with a few Beating with the vegetable oil.

[Page 15: Maintenance](#)

Width Depth Height RC-10NMFI 25.5 32.8 21.5 RC-10NMFIAU 220- 240 V ~ 50-60 Hz RC-18NMFI 28.0 35.2 24.9 RC-18NMFIAU RC-10NMF RC-10NMFE 25.5 32.8 21.5 RC-10MM RC-10MME 220 V ~ 50 Hz RC-18NMF RC-18NMFE 28.0 35.2 24.9 RC-18MM RC-18MME RC-10NMFEIS 25.5 32.9...

[Page 16: Part Names And Functions](#)

Part names and Functions (Model RC-10NMFI, RC-18NMFI, RC-10NMFIAU, RC-18NMFIAU, RC-10NMFEIS, RC-18NMFEIS) Outer Lid Inner Lid Inner Lid Packing Inner Pot Handle Hook Button Control Panel Scoop Holder Hook Temperature Sensor Heating Plate Steam Vent Warning Label Plug insertion hole Power cord Power plug Power plug [power supply side]...

This manual is also suitable for:

[Rc-10nmfeis](#)[Rc-18nmfe](#)[Rc-10nmfi](#)[Rc-18nmfi](#)[Rc-10nmfiau](#)[Rc-18nmfeis](#) ... [Show all](#)