



Whirlpool WD 142 Instructions For Use Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
Table Of Contents
17

--	--

•

[Table of Contents](#)

•

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Mounting the Appliance](#)

[Download this manual](#)



INSTRUCTION FOR USE

WD 142

WD 150



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool WD 142

[Warming Drawer Whirlpool WD 142 IX Instrucciones De Uso](#)

Built-in plate-warmer drawer wd 142 ix (109 pages)

[Warming Drawer Whirlpool WD 142 IX Instructions For Use Manual](#)

Built-in plate-warmer drawer wd 142 ix (53 pages)

[Warming Drawer Whirlpool WD 141 IX Operating Instructions Manual](#)

(9 pages)

[Warming Drawer Whirlpool GBW3050TS Use & Care Manual](#)

Indoor warming drawer (16 pages)

[Warming Drawer Whirlpool GBW3050TS Use & Care Manual](#)

Indoor warming drawer (16 pages)

Summary of Contents for Whirlpool WD 142

[Page 1](#) INSTRUCTION FOR USE WD 142 WD 150...

[Page 2: Mounting The Appliance](#)

IMPORTANT INFORMATION MOUNTING THE APPLIANCE shall only be used when it is HE APPLIANCE built-in (mounted) properly. separate mounting in- OLLOW THE SUPPLIED structions when installing the appliance.) of this appliance in places NSTALLING MOUNTING that are not permanent such as ships, caravans, busses and so on, may only be carried out by a professional if it is ensured that the conditions on the place permit a safe use of the appliance.

[Page 3: Prior To Connecting](#)

IMPORTANT INFORMATION PRIOR TO CONNECTING if it has a damaged on the rating plate corre- HECK THAT THE VOLTAGE O NOT OPERATE THIS DRAWER mains cord or plug, if it is not working proper- sponds to the voltage in your home. ly, or if it has been damaged or dropped.

[Page 4](#) IMPORTANT INFORMATION BEFORE FIRST USE □ with a damp cloth, then wipe dry. LEAN THE SURFACE □ for at least 2 hours: turn REHEAT THE EMPTY DRAWER the temperature knob to the max. position to se- lect max. temperature, in order to eliminate any manufacturing residuals (grease, oil or resins) which could cause unpleasant odors during first use.

[Page 5: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE in or to use the appliance under NLY ALLOW CHILDREN O NOT HEAT OR USE FLAMMABLE MATERIALS near the drawer. adult supervision and after adequate instructions have been given, so that the child is able to use F MATERIAL INSIDE OUTSIDE THE DRAWER SHOULD the appliance in a safe way and understands the...

[Page 6: Important Precautions](#)

IMPORTANT PRECAUTIONS directly in the drawer. HIS APPLIANCE IS DESIGNED FOR DOMESTIC USE ONLY EVER POUR WATER for any storage purposes. O NOT USE THE DRAWER , do not drag dishes on the O AVOID SCRATCHING bottom of the warming drawer. PEN THE APPLIANCE DOOR CAREFULLY OT AIR MAY ESCAPE QUICKLY to prevent burns,...

[Page 7: Appliance Features](#)

APPLIANCE FEATURES ABINET ONTROL PANEL NDICATOR LIGHT NTISLIP FELT ASTENING HOLES CONTROL PANEL ULTIFUNCTION KNOB NDICATOR LIGHT...

[Page 8: Drawer Operation](#)

DRAWER OPERATION DRAWER OPERATION PUSH - PUSH OPENING turning the temper- out (open) if pushed in the HE DRAWER IS OPERATED BY HE DRAWER WILL SLIDE ature knob. It is easily accessed by center area. Sim- opening the drawer. ply push it back again until the locking mecha- nism is engaged to...

[Page 9: Load Capacity](#)

DRAWER OPERATION LOAD CAPACITY on the height of the o on eight HE LOAD CAPACITY DEPENDS LOAD CAP APAC ACIT DEPE PEND appliance and the size of the dishes. The total weight should not exceed 25 Kg. GUIDING EXAMPLES: DISHES FOR A 6 PERSON DINNER WARMING OF DIFFERENT ITEMS Ø...

[Page 10: Maintenance And Cleaning](#)

MAINTENANCE & CLEANING GENERAL : detergents containing soda, normally re- DO NOT USE LEANING IS THE ONLY MAINTENANCE acids or chlorides, abrasive detergents (in pow- quired. der or lotion), abrasive sponges (e.g. steel in a clean condi- AILURE TO MAINTAIN THE DRAWER wool) or sponges containing residuals of abra- tion could lead to deterioration of the surface sive detergents, descaling detergents, dish-...

[Page 11](#) MAINTENANCE & CLEANING REMOVING THE DRAWER the drawer fully. the 2 front screws. NSCREW the front of the drawer gently upwards and slide out until the back safety hooks are released. the drawer and set aside. Do not sub- EMOVE merse it in water.

[Page 12: Troubleshooting Guide](#)

TROUBLE SHOOTING GUIDE , do not make a service call until you have F THE DRAWER DOES NOT WORK made the checks in the table below. unnecessary calls for which you will be charged. HIS IS TO AVOID When calling for Service, please give the serial number and type number of the drawer (see Service label on the underside of the drawer).

[Page 13: Environmental Hints](#)

TROUBLE SHOOTING GUIDE ERVICE ONLY TO BE CARRIED OUT BY it should be re- F THE MAINS CORD NEEDS REPLACING . It is A TRAINED SERVICE TECHNICIAN placed by the original mains cord, which is hazardous for anyone other than available via our service organization.

[Page 16: Technical Specification](#)

UPPLY OLTAGE 350 - 450 W ATED OWER NPUT 10 A UTER DIMENSIONS NNER DIMENSIONS 4 6 1 9 - 6 9 4 - 7 8 0 8 1 © Whirlpool Sweden AB 2009. All rights reserved. Made in Sweden.

This manual is also suitable for: