

Remote Control - Sanyo DC-T44 Instruction Manual

New interior component system

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

 
14

15

16

17


18
19
20
21
22
23
24
25
26
27
28



•

•

Bookmarks

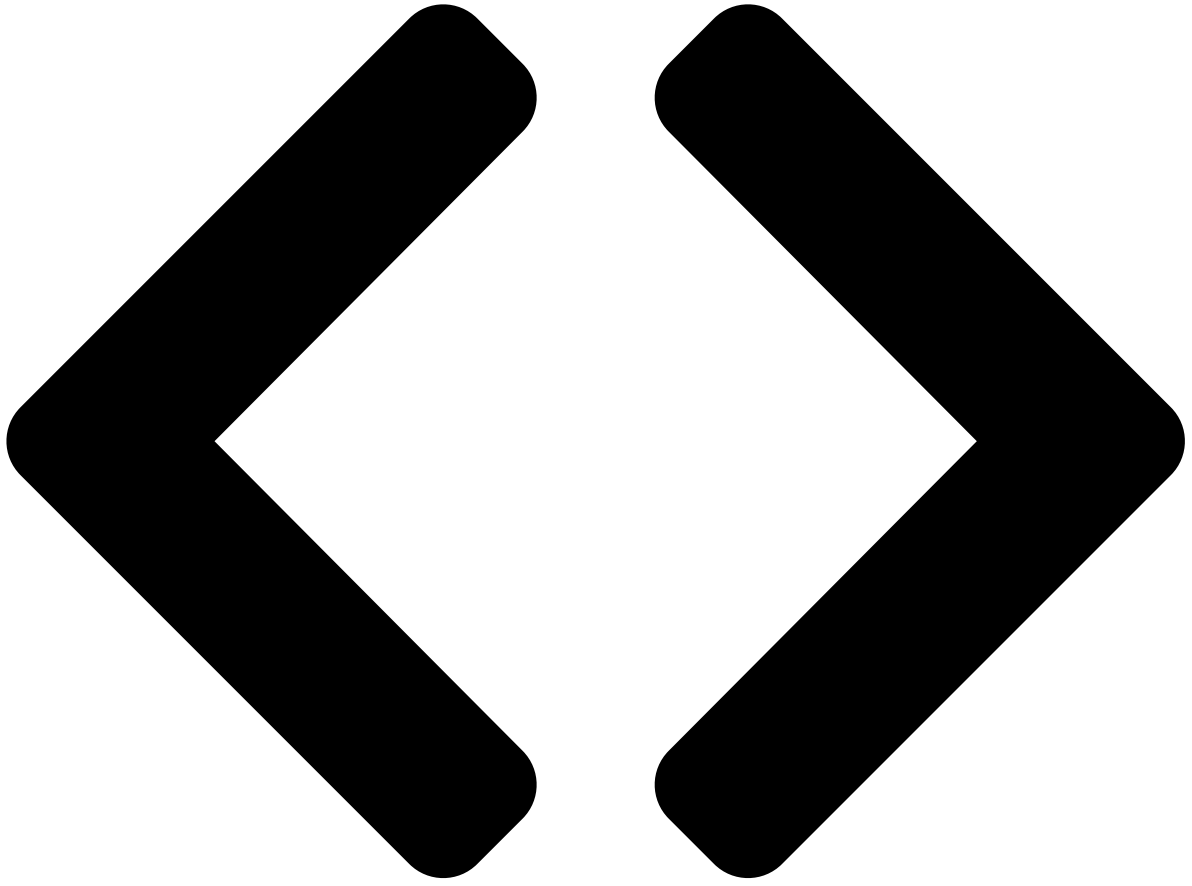

REMOTE CONTROL

Controls

1

4

5

9

14

13

12

11

15

 
16

2

"3

"6

Controls

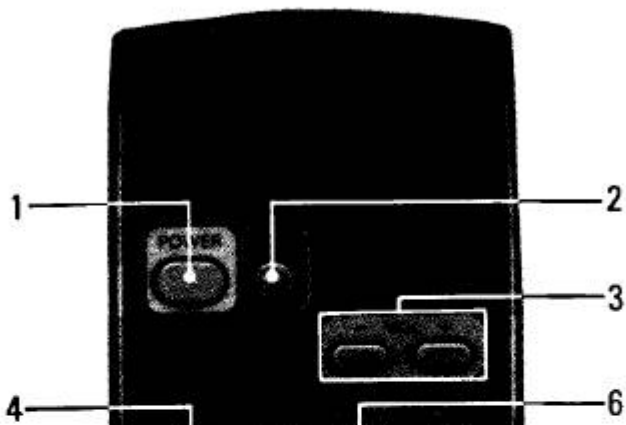

REMOTE CONTROL

1. Power switch (POWER)
2. Sound on/off switch (S)
3. Volume controls (VOL)
4. Sound style switch (SC
5. Surround switch (SURF
6. Phono function switch
7. AV function switch (AV)
8. Sleep timer switch (SLE
9. CD player controls

▲ : Disc tray open/clos

▶/|| : Play/Pause switc

 
■ : Stop/Clear switch

◀▶ : Skip/Search sw

REMOTE CONTROL

Controls

- 7
- 8
- 10
- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.
- 12.
- 13.
- 14.
- 15.
- 16.
- Power switch (POWER)
- Sound on/off switch (SOUND ON/OFF)
- Volume controls (VOL)
- Sound style switch (SOUND SME)
- Surround switch (SURROUND)
- Phono function switch (PHONO)
- AV function switch (AV)
- Sleep timer switch (SLEEP)
- CD player controls
- 4: Disc tray open/close switch
- /M: Play/Pause switch
- : Stop/Clear switch
- 144H: Skip/Search switches
- MEMORY Memory switch
- TIME: Time display switch
- INTRO: Intros can switch
- RANDOM: Random play switch
- REPEAT Repeat play switch
- CD 10KEY CD 10-key switch
- CD player/Tuner controls
- 0-9, +1 0: Number switches for CD player
- 0-
- @: Number switches for tuner
- Tuner function switch (TUNER)
- Band select switch (BAND)
- Scan switch (SCAN)
- FM mode switch (MODE)
- Deck 1 controls
- <: Reverse play switch
- >: Forward play switch

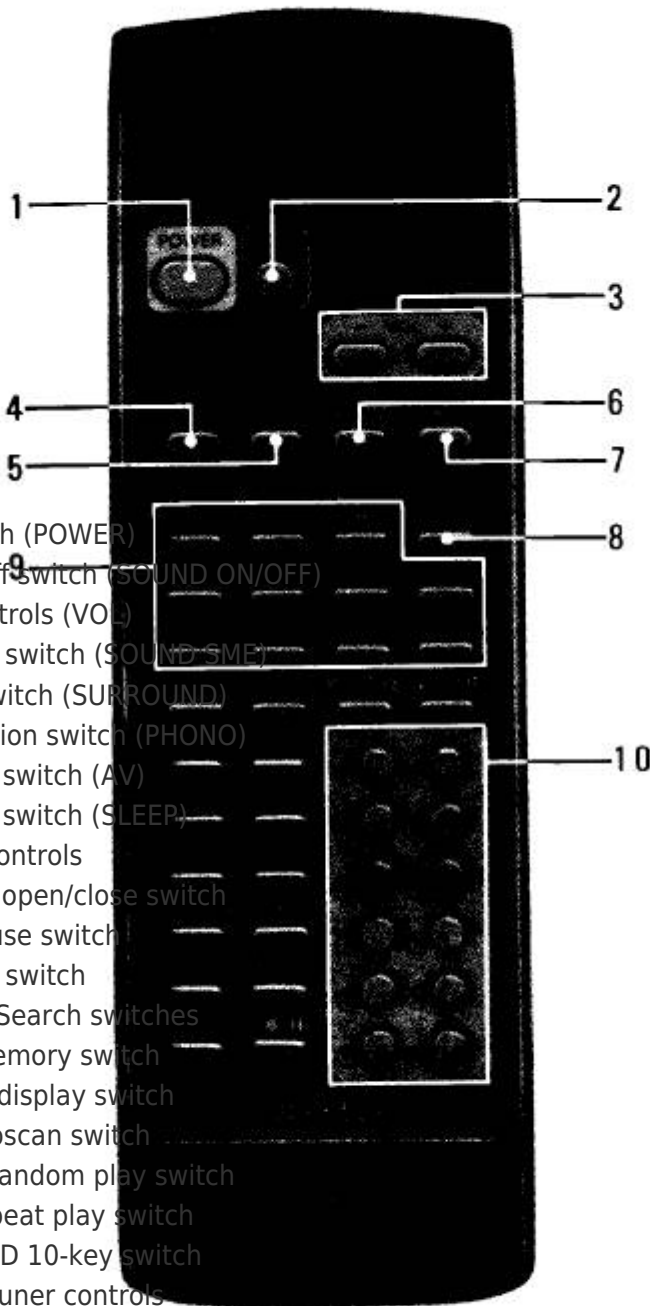

- 1. Power switch (POWER)
- 2. Sound on/off switch (SOUND ON/OFF)
- 3. Volume controls (VOL)
- 4. Sound style switch (SOUND SME)
- 5. Surround switch (SURROUND)
- 6. Phono function switch (PHONO)
- 7. AV function switch (AV)
- 8. Sleep timer switch (SLEEP)
- 9. CD player controls
 - ▲ : Disc tray open/close
 - ▶/|| : Play/Pause switch
 - : Stop/Clear switch
 - ◀▶ : Skip/Search switches
 - MEMORY: Memory switch
 - TIME: Time display switch
 - INTRO: Intros can switch
 - RANDOM: Random play switch
 - REPEAT: Repeat play switch
 - CD 10KEY: CD 10-key switch
- 10. CD player/Tuner controls
 - 0 - 9, +10: Number switches for CD player
 - ① - ⑩ : Number switches for tuner
- 11. Tuner function switch (TUNER)
- 12. Band select switch (BAND)
- 13. Scan switch (SCAN)
- 14. FM mode switch (MODE)
- 15. Deck 1 controls
 - ◀ : Reverse play switch
 - ▶ : Forward play switch
 - ◀▶ : Fast forward and reverse
 - : Stop switch
- 16. Deck 2 controls
 - : Stop switch
 - ◀ : Reverse play switch
 - ▶ : Forward play switch
 - ◀▶ : Fast forward and reverse
 - REC MUTE: Record mute
 - /|| : Record/Record

Number switches (0 - 9, +10)
 All these switches are used to select preset radio stations.
 If the CD 10KEY switch is used, it selects CD track numbers.
 If the TUNER or BAND switch is used, it selects preset radio stations.

REMOTE CONTROL

M: Fast forward and rewind/AMSS switches

: Stop switch

Deck 2 controls

Stop Switch

<: Reverse play switch

h: Forward play switch

~ w: Fast forward and rewind/AMSS switches

REC MUTE: Record muting switch

/II: Record/Record pause switch

Number switches (0-9 and ~)

@

)

All these switches

are

used to select both

CD tracks and

preset radio stations.

If the CD 10KEY switch is pressed then the switches

 
select CD track numbers.

If the TUNER or BAND switch is pressed, the switches

select preset radio stations.

-

-9-

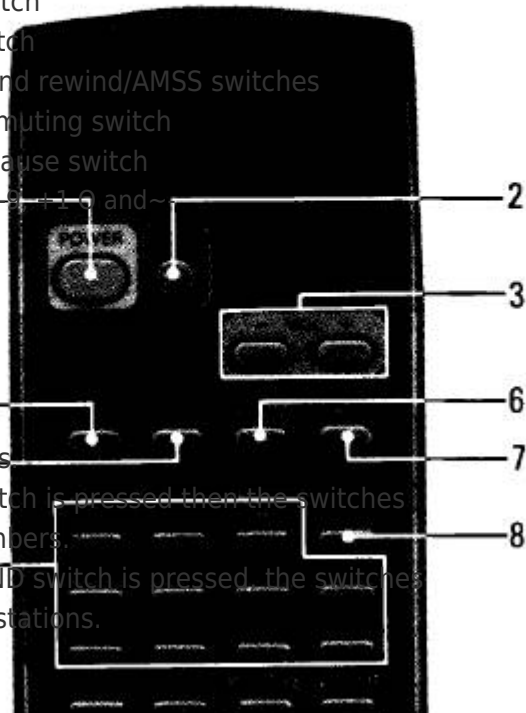

1. Power switch (POWER)
2. Sound on/off switch (SOUND)
3. Volume controls (VOL)
4. Sound style switch (SC)
5. Surround switch (SURF)
6. Phono function switch (PHONO)
7. AV function switch (AV)
8. Sleep timer switch (SLEEP)
9. CD player controls
 - ▲ : Disc tray open/close
 - ▶/|| : Play/Pause switch
 - : Stop/Clear switch
 - ◀▶ : Skip/Search switch
10. CD player/Tuner controls
 - MEMORY: Memory switch
 - TIME: Time display switch
 - INTRO: Introscan switch
 - RANDOM: Random play switch
 - REPEAT: Repeat play switch
 - CD 10KEY: CD 10-key switch

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
7
8
9
10
11
12
13
14

Related Manuals for Sanyo DC-T44

[Speaker System Sanyo DC-T44 Service Manual](#)

(47 pages)

[Stereo System Sanyo DC-DA1250M Service Manual](#)

(22 pages)

[Stereo System Sanyo DC-DA1100 Instruction Manual](#)

Micro component system (12 pages)

[Stereo System Sanyo DC-MM5000 \(XE\) Service Manual](#)

(26 pages)

[Stereo System Sanyo DC-DA170 Service Manual](#)

(32 pages)

[Stereo System Sanyo DC-BM500 Service Manual](#)

(41 pages)

[Stereo System Sanyo DC-BM500 Service Manual](#)

(24 pages)

[Stereo System Sanyo DC-UB1475M Instruction Manual](#)

Micro component system (28 pages)

[Stereo System Sanyo DC-D5 Service Manual](#)

(38 pages)

[Stereo System Sanyo DC-007C Service Manual](#)

Separate (33 pages)

[Stereo System Sanyo DC-007C Manual](#)

(6 pages)

[Stereo System Sanyo DC-DA180 Instruction Manual](#)

Micro component system (9 pages)

[Stereo System Sanyo DC-S800 Service Manual](#)

(40 pages)

[Stereo System Sanyo DC-D37 Service Manual](#)

(44 pages)

[Stereo System Sanyo DC-DA1160 Service Manual](#)

(12 pages)

[Stereo System Sanyo DC-E200/AU Service Manual](#)

Mini component sound system (29 pages)

Related Content for Sanyo DC-T44

[DC-F450 Remote Control](#)

Sanyo DC-F450

[DC-X850 Remote Control](#)

Sanyo DC-X850

[DC-MP9500 Remote Control](#)

Sanyo DC-MP9500

[DC-D8 Remote Control](#)

Sanyo DC-D8

[DC-DA900 Remote Control](#)

Sanyo DC-DA900

[DC-MCR60 Remote Control](#)

Sanyo DC-MCR60

[DC-AX20 Remote Control](#)

Sanyo DC-AX20

[DC-DA2000 Remote Control](#)

Sanyo DC-DA2000