 


Beforeoperation - Sanyo DC-T44 Instruction Manual

New interior component system

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17


18
19
20
21
22
23
24
25
26
27
28



•

•

Bookmarks

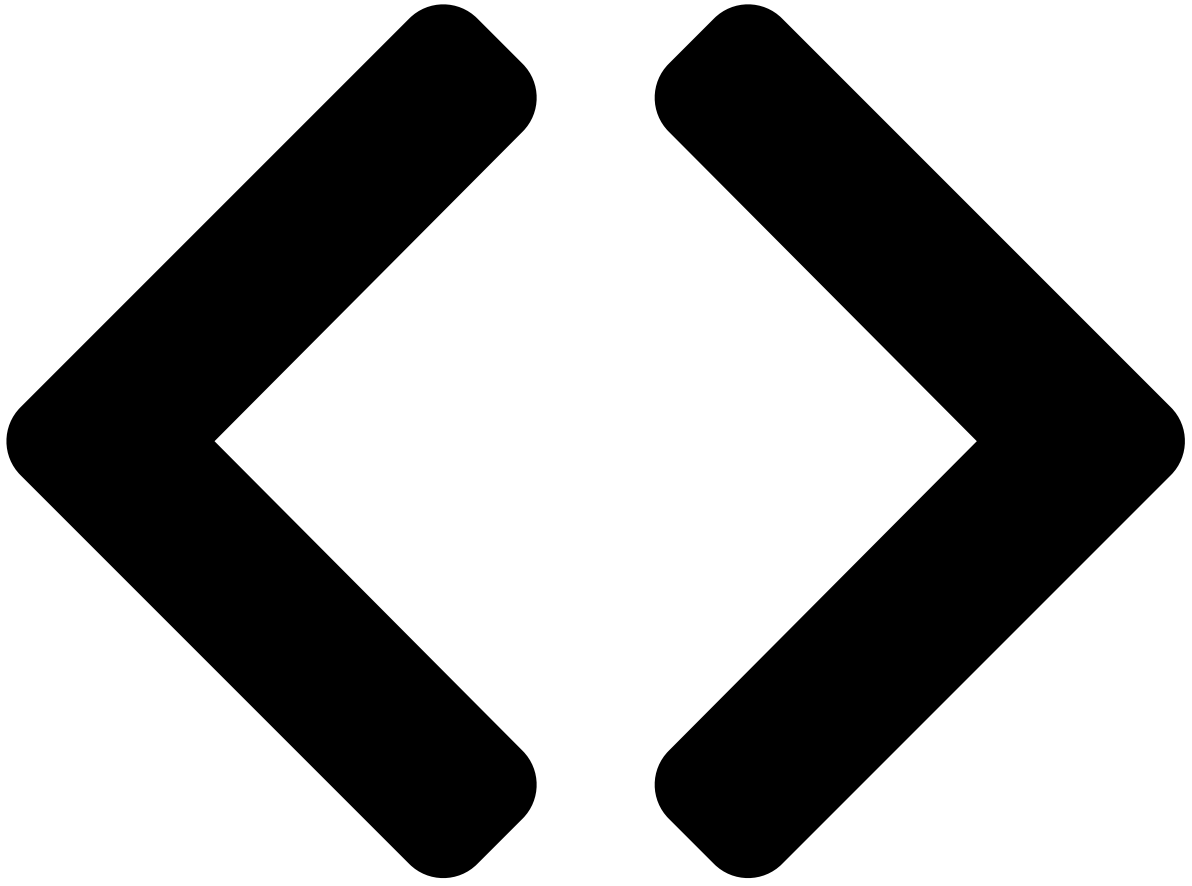

BEFORE OPERATION

Turn down the VOLUME control so that the sound will not suddenly be delivered at a high level.

Press the POWER switch.

To turn off the power, press it again. The clock display

and

POWER

indicator remain lit.

While the SOUND ON/OFF indicator is lighting, no

sound is obtained from the speakers or headphones.

Turn it off by pressing the SOUND ON/OFF switch.

When the power is switched ON:

Tuner:

"Frequency display" appears on the display.

Amplifier:

BEFORE OPERATION

Adjusting the left/right speaker

Use the BALANCE control to balance. Normally, it is kept

Selecting the function

The function is automatically selected when tape playback is started, or

switches on the tuner have been pressed.

- When the function selector is pressed, the function selected is automatically switched to tape playback is automatic tape dubbing.)
- Press the PHONO or AV function selector to select compatible audio/video e

Amplifier

The VOLUME indicator, one of the function indicators and display light.

CD player

If the function is "CD", "no disc" appears on the display. If a disc has been placed on the disc tray, its total number of tracks and total play time appear. With any other function, "Cd OFF" appears.

Adjusting the volume
Turn the VOLUME control or press the "+" or "-" VOL switch on the remote control.

OR

To mute the sound temporarily
Press the SOUND ON/OFF switch. The SOUND ON/OFF indicator lights. Press the SOUND ON/OFF switch again to restore the previous sound level.

Adjusting the left/right speaker balance
Use the BALANCE control to adjust the left/right speaker balance. When the function is "CD", "no disc" appears on the display. If a disc has been placed on the disc tray, its total number of tracks and total play time appear. With any other function, "Cd OFF" appears.

Selecting the function

The function is automatically selected when CD play or tape playback is started, or when any of the function switches on the tuner have been operated.

OR

When the function select tape playback is automatic tape dubbing.)
- Press the PHONO or AV function switch for turntable or compatible audio/video equipment operation.

OR

Surround sound system
Press the SURROUND switch. The SURROUND indicator lights and a "Wide" effect is activated. (except during listening to monaural sound.)
- The surround effect cannot be activated while you are listening to monaural sound.

OR

Base expander system
Press the BASSXPANDER switch to enhance the bass sound. The BASSXPANDER indicator lights.

Spectrum analyzer
Indicates the input level and peak value of each sound range. General input level and peak value are indicated on LEVEL.

WHAT TO DO IF ...
If the operation of the unit or display is not normal, turn off the POWER switch on the main unit and then turn it on

POWER

switch on the main unit and then turn it on

BEFORE OPERATION

Adjusting the left/right speaker balance.
Use the BALANCE control to balance. Normally, it is kept

Selecting the function

The function is automatically selected when CD play or tape playback is started, or when any of the function switches on the tuner have been operated.

- When the function select tape playback is automatic tape dubbing.)
- Press the PHONO or AV function switch for turntable or compatible audio/video equipment operation.

Surround sound system

Press the SURROUND switch. The SURROUND indicator lights and a "Wide" effect is activated.

- The surround effect cannot be activated while you are listening to monaural sound.

Bass expander system

Press the BASSXPANDER switch to enhance the bass sound. The BASSXPANDER indicator lights.

Spectrum analyzer

Indicates the input level and peak value of each sound range.

General input level and peak value are indicated on LEVEL.

WHAT TO DO IF ...

If the operation of the unit or display is not normal, turn off the POWER switch on the main unit and then turn it on again.

If the power is not turned off, disconnect the mains lead from the switch, disconnect the mains lead to the AC connection. In this case, reset the clock.

1. Turn down the VOLUME control so that the sound will not suddenly be delivered at a high level.

2. Press the POWER switch.

To turn off the power, press it again. The clock display and POWER indicator remain lit.

While the SOUND ON/OFF indicator is lighting, no sound is obtained from the speakers or headphones.

Turn it off by pressing the SOUND ON/OFF switch.

When the power is switched ON:

Press the SOUND ON/OFF switch, the SOUND ON/OFF indicator lights.

Press the SOUND ON/OFF switch again to restore the previous sound level.

Tuner:

Press the SOUND ON/OFF switch again to restore the previous sound level.

Amplifier:

Press the SOUND ON/OFF switch again to restore the previous sound level.

Adjusting the left/right speaker balance

Use the BALANCE control to adjust the left/right speaker balance.


OR

When the function select tape playback is automatic tape dubbing.)

Press the PHONO or AV function switch for turntable or compatible audio/video equipment operation.



OR

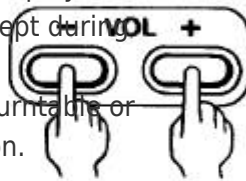

again.

If the power is not turned off even by pressing the POWER switch, disconnect the mains lead from the AC outlet. Then connect the lead to the AC outlet and resume the operation. In this case, reset the clock and memory contents.

-11-

BEFORE OPERATION

1. Turn down the VOLUME control so that the sound will not suddenly be delivered at a high level.

Adjusting the left/right speaker balance
Use the BALANCE control to

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
9
10
11
12
13
14
15
16

Related Manuals for Sanyo DC-T44

[Speaker System Sanyo DC-T44 Service Manual](#)

(47 pages)

[Stereo System Sanyo DC-DA1250M Service Manual](#)

(22 pages)

[Stereo System Sanyo DC-DA1100 Instruction Manual](#)

Micro component system (12 pages)

[Stereo System Sanyo DC-MM5000 \(XE\) Service Manual](#)

(26 pages)

[Stereo System Sanyo DC-DA170 Service Manual](#)

(32 pages)

[Stereo System Sanyo DC-BM500 Service Manual](#)

(41 pages)

[Stereo System Sanyo DC-BM500 Service Manual](#)

(24 pages)

[Stereo System Sanyo DC-UB1475M Instruction Manual](#)

Micro component system (28 pages)

[Stereo System Sanyo DC-D5 Service Manual](#)

(38 pages)

[Stereo System Sanyo DC-007C Service Manual](#)

Separate (33 pages)

[Stereo System Sanyo DC-007C Manual](#)

(6 pages)

[Stereo System Sanyo DC-DA180 Instruction Manual](#)

Micro component system (9 pages)

[Stereo System Sanyo DC-S800 Service Manual](#)

(40 pages)

[Stereo System Sanyo DC-D37 Service Manual](#)

(44 pages)

[Stereo System Sanyo DC-DA1160 Service Manual](#)

(12 pages)

[Stereo System Sanyo DC-E200/AU Service Manual](#)

Mini component sound system (29 pages)

Related Products for Sanyo DC-T44

[Sanyo DC-F380](#)

[Sanyo DC-F380U](#)

[Sanyo DC-DA380](#)

[Sanyo DC F200](#)

[Sanyo DC-TS760](#)

[Sanyo DC-TS750](#)

[Sanyo DC-TS780](#)

[Sanyo DC-TS750AU](#)

[Sanyo DC-TS765KR](#)

[Sanyo DC-TS730](#)

[SANYO DC-TS960WL](#)

[Sanyo DC-TS3000](#)

[Sanyo DC-TS3000XE](#)

[Sanyo DC-TS830WL](#)

[Sanyo DC-DA300](#)

[Sanyo DC-DA150](#)