 


Maintenance - Sanyo DC-T44 Instruction Manual

New interior component system

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17


18
19
20
21
22
23
24
25
26
27
28



•

•

Bookmarks

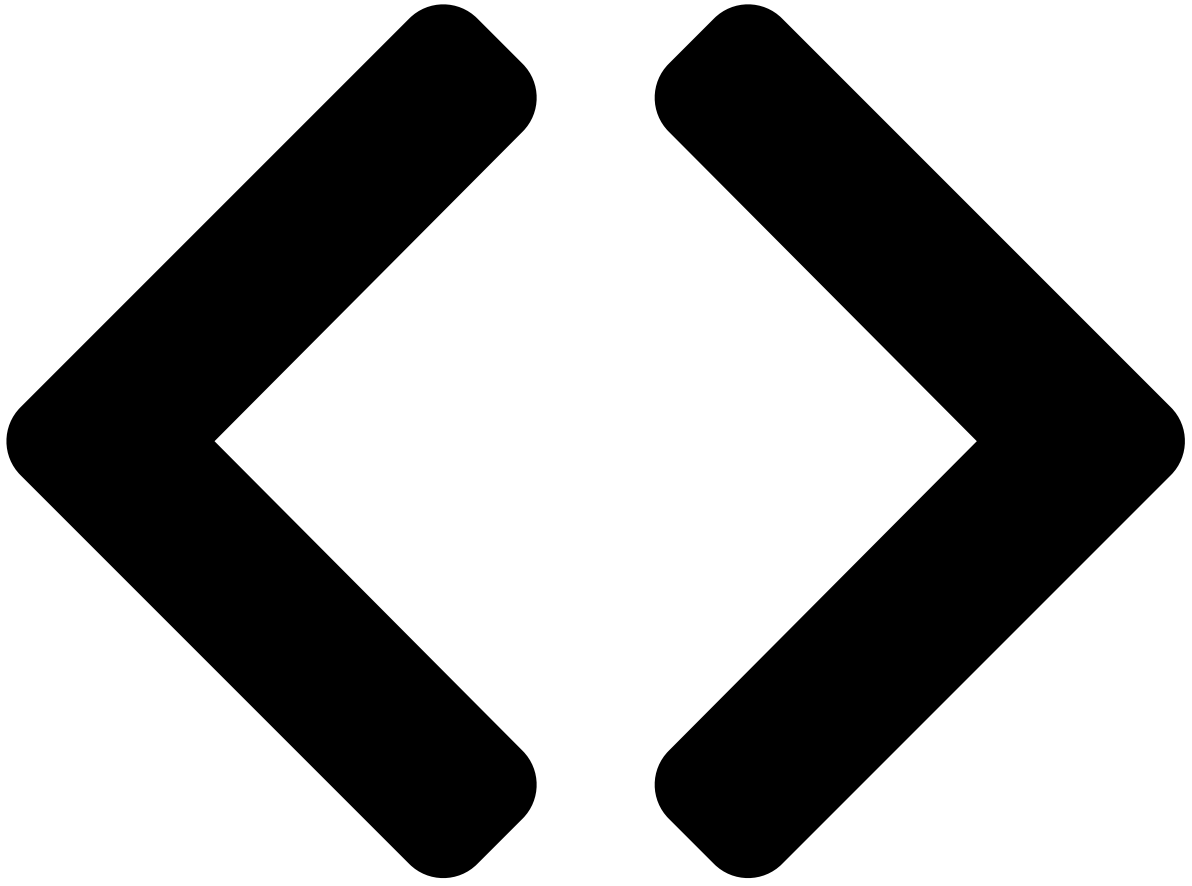

USING THE SLEEP TIMER

This timer automatically switches off the power after a preset time has elapsed. There are 7 time periods available: 90, 60, 50, 40, 30, 20 and 10 minutes.

1. Press the SLEEP switch.

SLEEP
90

USING THE SLEEP TIMER

This timer automatically switches off the power after a preset time has elapsed. There are 7 time periods available: 90, 60, 50, 40, 30, 20 and 10 minutes.

1. Press the SLEEP switch.



 
The "SLEEP" and previous sleep time setting blink.

2. Press the SLEEP switch within 5 seconds to select the desired sleep time.

The "SLEEP" and previous sleep time setting blink.

2. Press the SLEEP switch within

5



If the SLEEP switch is pressed, the original display

To check the remaining
Press the SLEEP switch. T
After several seconds, the

To release the SLEEP ti
Press the SLEEP switch, ti
released if the power is sv

Timer priorities

- The ON/OFF timer set time reaches the ON timer operation.
- During ON/OFF timer will not operate, but retained.

 
seconds to select the desired sleep time.

USING THE SLEEP TIMER

This timer automatically switches off the power after a preset time has elapsed. There are 7 time periods available: 90, 60, 50, 40, 30, 20 and 10 minutes.

1. Press the SLEEP switch.
3. Press the SET switch or allow 5 seconds to elapse.

The original display returns and the SLEEP timer starts, "SLEEP" remains lit.



When using the SLEEP timer with a CD, the volume will gradually be reduced (fade-out) during the 30-second period before the unit turns off.

2. Press the SLEEP switch within 5 seconds to select the desired sleep time.

To check the remaining sleep time: 90 → 60 → 50 → 40 → 30 → 20 → 10 → (released)

Press the SLEEP switch. The remaining time is displayed. After several seconds, the original display returns.

If the CLEAR switch is pressed, the original display returns and the SLEEP timer setting mode is released.

3. Press the SET switch or allow 5 seconds to elapse. The original display returns and the SLEEP timer starts. "SLEEP" remains lit.

When using the SLEEP timer with a CD, the volume will gradually be reduced (fade-out) during the 30-second period before the unit turns off.

During ON/OFF timer operation, the WAKE UP timer will not operate, but the WAKE UP timer setting is retained.

The SLEEP timer has priority over the ON/OFF and WAKE UP timers. The power is switched off by the SLEEP timer. The ON/OFF timer setting is released, but the WAKE UP timer setting is retained.

MAINTENANCE

Cleaning the decks 1 and 2 heads.

To ensure playback and recording with good-quality sound, use cotton swab to clean the heads, pinch rollers and capstans of the decks after about every 10 hours of use.

If the dirt persists, soak the swab in a little methylated spirit or head cleaning fluid and then clean.

decks
Main unit
after about every 10 hours of use.

If the dirt persists, soak the swab in a little methylated spirit.

or head cleaning fluid and then clean.
Main unit
Use a soft cloth to remove dirt on the main unit.

Use a soft cloth to remove dirt on the main unit.

Do not use benzene, thinners or alcohol since they will mar the finish of the surfaces.

If the dirt persists, dip a soft cloth into a diluted solution of neutral detergent, wring it out, wipe away the dirt, and then take up any moisture with a dry cloth.

Do not use benzene, thinners or alcohol since they will mar

To check the remaining
Press the SLEEP switch. T
After several seconds, the

To release the SLEEP ti
Press the SLEEP switch, t
released if the power is sv

Timer priorities

- The ON/OFF timer set time reaches the ON timer operation.
- During ON/OFF timer will not operate, but retained.
- The SLEEP timer has WAKE UP timers. The SLEEP timer. The ON, but the WAKE UP tim

MAINTENANCE

Erase head in DECK 2

Capstan



Pinch roller

Record/F

the finish of the surfaces.

Record/Play head (Play head in DECK 1)

-23-

USING THE SLEEP TIMER

To check the remaining

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
21
22
23
24
25
26
27
28

Related Manuals for Sanyo DC-T44

[Speaker System Sanyo DC-T44 Service Manual](#)

(47 pages)

[Stereo System Sanyo DC-DA1250M Service Manual](#)

(22 pages)

[Stereo System Sanyo DC-DA1100 Instruction Manual](#)

Micro component system (12 pages)

[Stereo System Sanyo DC-MM5000 \(XE\) Service Manual](#)

(26 pages)

[Stereo System Sanyo DC-DA170 Service Manual](#)

(32 pages)

[Stereo System Sanyo DC-BM500 Service Manual](#)

(41 pages)

[Stereo System Sanyo DC-BM500 Service Manual](#)

(24 pages)

[Stereo System Sanyo DC-UB1475M Instruction Manual](#)

Micro component system (28 pages)

[Stereo System Sanyo DC-D5 Service Manual](#)

(38 pages)

[Stereo System Sanyo DC-007C Service Manual](#)

Separate (33 pages)

[Stereo System Sanyo DC-007C Manual](#)

(6 pages)

[Stereo System Sanyo DC-DA180 Instruction Manual](#)

Micro component system (9 pages)

[Stereo System Sanyo DC-S800 Service Manual](#)

(40 pages)

[Stereo System Sanyo DC-D37 Service Manual](#)

(44 pages)

[Stereo System Sanyo DC-DA1160 Service Manual](#)

(12 pages)

[Stereo System Sanyo DC-E200/AU Service Manual](#)

Mini component sound system (29 pages)

Related Content for Sanyo DC-T44

[DC-007C Cd Pick-Up Maintenance](#)

[Sanyo DC-007C](#)

[GCD 1500 Maintenance](#)

[Sanyo GCD 1500](#)

[DC-F430AV Maintenance](#)

Sanyo DC-F430AV

[DC-DA100 Maintenance](#)

[DC-D27 Maintenance](#)

Sanyo DC-D27

[DC D30 Maintenance](#)

Sanyo DC D30

[DC-BM300 Maintenance](#)

Sanyo DC-BM300

[GCD 2000 Maintenance](#)

Sanyo GCD 2000