



# Toshiba TWD-BH90W4H Owner's Manual

Front loading washer dryer



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32

--

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks




## Quick Links

- [1 Product Description](#)
- [2 Quick Start](#)
- [3 Detergent Dispenser](#)
- [4 Control Panel](#)
- [5 Programmes](#)
- [6 Cleaning and Care](#)

[7 Trouble Shooting](#)

[8 Technical Specifications](#)

[Download this manual](#)

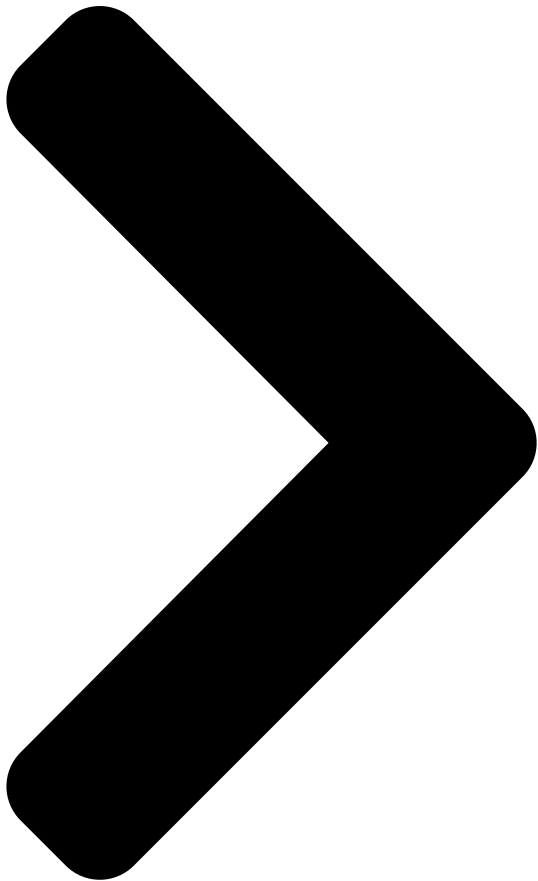

FRONT LOADING  
**TOSHIBA**  
WASHER DRYER

OWNER'S MANUAL

MODEL

TWD-BH90W4H

Read This Manual

**TOSHIBA**

Use all instructions and explanations of the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the application is sold or passed on then ensure that the new owner always receives those operation instructions.

**CAUTION: HOT SURFACE !**

**CAUTION: RISK OF FIRE !**

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba TWD-BH90W4H

[Washer/Dryer Toshiba TW-G520L User Manual](#)

(6 pages)

[Washer/Dryer Toshiba TWD-BH90W4M Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BH90W4PH Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BM105GF4 Series Owner's Manual](#)

(36 pages)

[Washer/Dryer Toshiba TWD-BK90S2H Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BL160D4 Series Owner's Manual](#)

Dual drum washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-BJ120M4M Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BK90S2 Series Owner's Manual](#)

(29 pages)

[Washer/Dryer Toshiba TWD-BN90GF4H Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU105MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T27BZP115MW Series Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWM Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWT Owner's Manual](#)

Front loading washer dryer (36 pages)

## Summary of Contents for Toshiba TWD-BH90W4H

[Page 1](#) FRONT LOADING WASHER DRYER OWNER'S MANUAL MODEL TWD-BH90W4H Read This Manual Use all instructions and explanations of the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the application is sold or passed on then ensure that the new owner always receives those operation instructions.

### [Page 2: Table Of Contents](#)

CONTENTS SAFETY INSTRUCTIONS Safety Instructions ..... 2 INSTALLATION Product Description .....10 Installation ..... 11 OPERATIONS Quick Start ..... 15 Before Each Washing .....17 Detergent Dispenser .....18 Control Panel ..... 19 Option .....20 Other Functions .....23 Programmes.

### [Page 3: Safety Instructions](#)

SAFETY INSTRUCTIONS Safety Instructions • This appliance is not intended for use by persons(including children) with reduced physical,sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning

use of the appliance by a person responsible for their safety. •...

[Page 4](#) SAFETY INSTRUCTIONS Safety Instructions For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury or loss of life. Explanation of the symbols: □ Warning! This combination of symbol and signal word indicates a potentially dangerous situation which may result in...

[Page 5](#) SAFETY INSTRUCTIONS • The new hose-sets supplied with the appliance must be used and the old hose-sets must not be used. • Before maintenance, unplug the appliance. • Always unplug the machine and turn off the water supply after use. The standard inlet water pressure: 0.05MPa~1MPa.

[Page 6](#) SAFETY INSTRUCTIONS • Pull out its plug from the power socket before cleaning or maintenance. • Do not use any socket with rated current less than that of appliance. Never pull out power plug with wet hand. • Please remember to disconnect water and power supply immediately after the clothes are washed.

[Page 7](#) SAFETY INSTRUCTIONS Risk of explosion! • Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances( such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) This may result in fire or explosion.

[Page 8](#) SAFETY INSTRUCTIONS • Remove all packages and transport bolts before using the appliance. Otherwise, serious damage may result. Risk of damaging appliance! • Your product is only for home use and is only designed for the textiles suitable for machine washing. •...

[Page 9](#) SAFETY INSTRUCTIONS • Make sure that all pockets are emptied. Sharp and rigid items such as coin, brooch, nail, screw or stone etc. may cause serious damages to this machine. • Please check whether the water inside the drum has been drained before opening its door. Please do not open the door if there is any water visible.

[Page 10](#) SAFETY INSTRUCTIONS • Fabric softeners, or similar products, should be used as specified by the fabric softener instructions. • The machine whose lid can be opened during water extraction, that it takes 15s or more for complete stop of water extracting chamber tub. •...

## [Page 11: Installation](#)

INSTALLATION Product Description Top cover Water supply hose Control panel Power supply cord Detergent dispenser Drum Door Drain pump filter Drain hose Note! • The product line chart is for reference only, please refer to real product as standard. Accessories Transport Owner's manual Rat resistance...

## [Page 12: Installation](#)

INSTALLATION Installation Installation area □ Warning! • Stability is important to prevent the product from wandering! • Make sure that the product should not stand on the power cord. W>20mm Before installing the machine, the location characterized as follows shall be selected: 1. Rigid, dry, and level surface 2. Avoid direct sunlight 3. Sufficient ventilation...

[Page 13](#) INSTALLATION Levelling the washing machine Warning! □ • Check with the gradienter if the machine placement is balanced and steady. • If there is no gradienter, check the balance as per the following method. If it's balanced from left to right •...

[Page 14](#) INSTALLATION Levelling the washing machine Warning! □ • The lock nuts on all four feet must be screwed tightly against the housing. Check if the legs are closely attached to the cabinet. If not, please turn them to their original positions tighten the nuts. Loosen the lock nut turn the feet until it closely contacts with the floor.

[Page 15](#) INSTALLATION Connect the other end of inlet pipe to the inlet valve at the backside of product and fasten the pipe tightly clockwise. water supply hose water Inlet valve Drain Hose Warning! Warning! □ □ • Do not kink or protract the drain hose. •...



## [Page 16: Operations](#)

OPERATIONS Quick Start Caution! • Before washing, please make sure it's installed properly. • Before washing at first time, the washing machine shall be operated in one round of the whole procedures without clothes in as follows. The suggested program is "DRUM CLEAN". 1.

[Page 17](#) OPERATIONS Select func on or default • TEMP./ SPIN/ RINSE/SENSEDOSE Press the bu on (TEMP./ SPIN/ RINSE/SENSEDOSE) to adjust the parameter. • DELAY END/ FAST WASH/ DRYING Step1: Press the bu on( DELAY END/ FAST WASH/ DRYING) Step2: Slide and touch OK to select different level as you need.

## [Page 18: Before Each Washing](#)

OPERATIONS Before Each Washing • The working condition of the washer should be (0- 40)°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is placed under condition of 0°C or less, then it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose are not frozen before use.

## [Page 19: Detergent Dispenser](#)

OPERATIONS Detergent Dispenser Liquid detergent (MAX:≈810ml) Softener (MAX:≈ 440ml) If you want to use powder detergent, you can add it directly into the drum with clothes by using the container. Please put the container on the top of the load to make powder well dissolved. Don't choose "Auto" or "...

## [Page 20: Control Panel](#)

OPERATIONS Control Panel 1:18 COLORALIVE COTTON ECO MEMORY COTTON Cotton Fabric Washing Program SYNTHETIC 45' TO WEAR Note! • The chart is for reference only, Please refer to real product as standard. Start/Pause On/Off Press the button to start or pause the Product is switched on or off.

[Page 21](#) OPERATIONS Op on RINSE The laundry will undergo extra rinse once a er you select it. FAST WASH The func on can decrease the washing me. DRYING It is suitable for different level of drying (from LESS to EXTRA) The default level is STANDARD, would increase washing time when choose extra drying level.

## [Page 22: Option](#)

OPERATIONS DELAY END Set the Delay function: 1. Select a programme 2. Press the DELAY END button to choose the time (the delaying time is 1-24 H.) 3. Press [START/PAUSE] to commence the delay operation DELAY Setting time Start ON/OFF Choose the Programme Cancel the Delay function: Press the [DELAY END] button, Use SLIDER to select CANCEL. It should be pressed before starting the programme.

[Page 23](#) OPERATIONS CHILD LOCK To avoid mis operation by children. SPIN Press [SPIN] 3 sec. ON/OFF START/PAUSE Slide the bar till buzzer beep. Caution! • Press the [SPIN] 3 sec. to cancel the function. • The "CHILD LOCK" will lock all buttons except [ ON/OFF ]. • ...

## [Page 24: Other Functions](#)

OPERATIONS Other Functions SENSEDOSE SENSEDOSE This operation can be executed to decide the way of detergent/softener delivery. "Auto" means putting both detergent and softener " " means only putting detergent " " means only putting softener automatically. None icons lighten means putting neither detergent nor softener automatically. PREWASH The PREWASH function can get an extra wash before main wash, it is suitable for washing the dust rises to surface of the clothe.

## [Page 25: Programmes](#)

OPERATIONS Programmes Programmes are available according to the laundry type. Hard-wearing textiles, heat-resistant textiles made of cotton or linen. COTTON Wash synthetic articles, for example: shirts, coats, blending. SYNTHETIC While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.

## [Page 26: Washing Programmes Table](#)

OPERATIONS Washing Programmes Table °C Programme Load(kg) Default Temp. Default Time  
DOWN JACKET 1:27 SPORTSWEAR 0:45 ANTI-ALLERGY 4:31 WOOL 0:59 DELICATE 0:50 COLOR

ALIVE Cold 1:03 COTTON ECO 0:55 COTTON 1:18 SYNTHETIC 1:03 1:10 45' TO WEAR Cold 0:45  
10' SUPER FAST Cold 0:10 BEDLINEN...

### [Page 27: Maintenances](#)

MAINTENANCES Cleaning And Care Warning! ⚠ • Before your maintenance starts, please unplug the machine and close the tap. Cleaning The Cabinet Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary.

[Page 28](#) MAINTENANCES Cleaning The Inlet Filter Note! • Inlet filter must be cleaned if there is less water. Washing the filter in the water supply hose 1.Close the tap. 2.Remove the water supply hose from the tap. 3.clean the filter. 4.Reconnect the water supply hose. Washing the filter in washing machine: Step:1 &...

[Page 29](#) MAINTENANCES Cleaning The Drain Pump Filter Warning! ⚠ • Be careful of the hot water! • Allow the water to cool down. • Unplug the machine to avoid electrical shock before maintenance. • Drain pump filter can filter the lints and small foreign matters from the washing.

### [Page 30: Trouble Shooting](#)

MAINTENANCES Trouble Shooting The start of the appliance does not work or it stops during operation. First try to find a solution to the problem, If not, contact the service centre.  
Description Reason Solution Washing machine Restart after the door is closed Door is not closed properly cannot start up Check if the clothes is stuck...

### [Page 31: Technical Specifications](#)

595\* 635\*850 595\*597\*850 Includes door frame, knob and the curving part of the front panel.  
2. Images are for reference only. Please refer to the actual product.

[Page 32](#) V1.0 1613810000XXX PM01...