

Option - Toshiba TWD-BH90W4H Owner's Manual

Front loading washer dryer

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32

--

•

[Table of Contents](#)

-

Troubleshooting

•


Bookmarks



OPERATIONS

DELAY END

Set the Delay function:

1. Select a programme
2. Press the  button to choose the time(the delaying time is 1-24 H.)
3. Press [START/PAUSE] to commence the delay operation

ON/OFF

Cancel the Delay function:

Press the [DELAY END] button, Use SLIDER to select CANCEL. It should be pressed before starting the programme. If the programme already started, should press the [ON/OFF] button to reset the programme.



Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, the machine will run the previous program automatically.
- While the machine is delaying, If there is any break in the power supply ,the machine can't start up operation automatically. You should set it again.

RELOAD

This operation can be executed during the washing process. When the drum is still rolling and there is large amount of water with high temperature in the drum.

The state is unsafe and the door cannot be opened forcefully. To press [START/PAUSE] for 3 sec. to reload, and small amount of clothes can be added during washing process. Please follow the steps as bellow:

1.Wait until the drum stops rotation.

The door lock is unlocked.

2.

Open the door , add clothes to the drum, and close the door. Then press the

3.

[START/PAUSE] button.

Press [START/PAUSE] 3sec.

Caution!

- Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.

MEMORY

Memorizes the frequently used program.

Select program and options and Press [TEMP.] 3 sec,then the display will show "Save success as Memory".The default is COTTON.The program after selection will cover the previous program.

Choose the Programme

DELAY

END

Setting time

Add clothes

2 1

Start

START/PAUSE

[Previous Page](#)
[Next Page](#)

1
...
19
20
21
22
23
24
25
26

Quick Links:

[Product Description](#)

[Quick Start](#)

[Detergent Dispenser](#)

[Control Panel](#)

[Programmes](#)

[Cleaning and Care](#)

[Trouble Shooting](#)

[Technical Specifications](#)

Related Manuals for Toshiba TWD-BH90W4H

[Washer/Dryer Toshiba TW-G520L User Manual](#)

(6 pages)

[Washer/Dryer Toshiba TWD-BH90W4M Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BH90W4PH Owner's Manual](#)

Front loading washer dryer (32 pages)

[Washer/Dryer Toshiba TWD-BM105GF4 Series Owner's Manual](#)

(36 pages)

[Washer/Dryer Toshiba TWD-BK90S2H Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BL160D4 Series Owner's Manual](#)

Dual drum washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-BJ120M4M Owner's Manual](#)

Front loading washer dryer (30 pages)

[Washer/Dryer Toshiba TWD-BK90S2 Series Owner's Manual](#)

(29 pages)

[Washer/Dryer Toshiba TWD-BN90GF4H Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU105MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T27BZP115MW Series Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWS Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWM Owner's Manual](#)

Front loading washer dryer (36 pages)

[Washer/Dryer Toshiba TWD-T25BZU115MWT Owner's Manual](#)

Front loading washer dryer (36 pages)

Related Products for Toshiba TWD-BH90W4H

[Toshiba TWD-BH90W4M](#)

[Toshiba TWD-BH90W4PH](#)

[Toshiba TWD-BK90S2H](#)

[Toshiba TWD-BL160D4 Series](#)

[Toshiba TWD-BJ120M4M](#)

[Toshiba TWD-BM105GF4 Series](#)

[Toshiba TWD-BM125GF4 Series](#)

[Toshiba TWD-BM135GF4 Series](#)

[Toshiba TWD-BM115GF4 Series](#)

[Toshiba TWD-BK90S2 Series](#)

[Toshiba TWD-BN90GF4H](#)

[Toshiba TWD-T25BZU105MWS](#)

[Toshiba TWD-T27BZP115MW Series](#)

[Toshiba TWD-T25BZU115MWS](#)

[Toshiba TWD-T25BZU115MWM](#)

[Toshiba TWD-T25BZU115MWT](#)

Save PDF