



Whirlpool 400011239758 Instructions For Use Manual

1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

-

Troubleshooting


•

Bookmarks

--

[Download this manual](#)

Quick Links

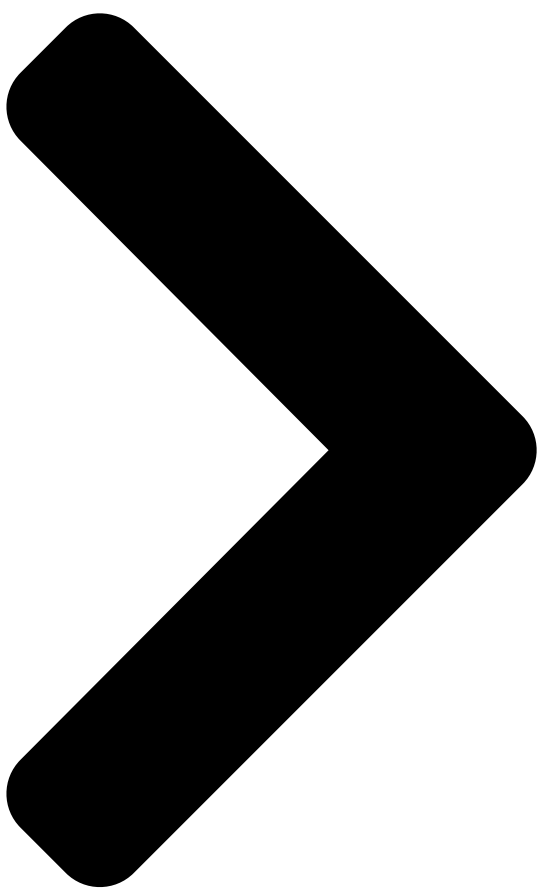

Instruction for Use



[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Troubleshooting

INTRODUCTION 15

TROUBLESHOOTING 32

Related Manuals for Whirlpool 400011239758

[Coffee Maker Whirlpool ACE 102 IX Instructions For Use Manual](#)

Fully-automatic 'bean to cup' built-in coffee machine, ace 102 ix (298 pages)

[Coffee Maker Whirlpool ACE 010 IX Installation](#)

Semi-automatic mini built-in coffee machine, ace 010 ix (4 pages)

[Coffee Maker Whirlpool W11 CM145 Instructions For Use Manual](#)

(36 pages)

[Coffee Maker Whirlpool ACE 100 IX Instructions For Use Manual](#)

Fully-automatic 'bean to cup' in-column coffee machine, ace 100 ix (18 pages)

[Coffee Maker Whirlpool ACE 102 IX Instructions For Use Manual](#)

(43 pages)

[Coffee Maker Whirlpool ACE 010 IX Instructions For Use Manual](#)

Semi-automatic mini built-in coffee machine, ace 010 ix (17 pages)

[Coffee Maker Whirlpool ACE 010 Installation, Quick Start](#)

(17 pages)

Summary of Contents for Whirlpool 400011239758

[Page 1](#) Instruction for Use...

[Page 3](#) FIG. 1 FIG. 2 x 28 FIG. 2A...

[Page 4](#) FIG. 3 FIG. 5 FIG. 4 FIG. 6 FIG. 7...

[Page 5](#) A16 A21 A13 A18...

[Page 6](#) 00:00 AROMA SELECT BEVERAGE PROFILE 1 QUANTITY QUANTITY LATTE LATTE
ESPRESSO ESPRESSO COFFEE COFFEE CAPPUCCINO CAPPUCCINO MACCHIATO MACCHIATO...

[Page 10: Table Of Contents](#)

CONTENTS SAFETY INSTRUCTIONS11 MAKING COFFEE19 Important to be read
and observed11 Selecting the coffee aroma 19 Safety warnings11 Selecting the
coffee quantity19 Permitted use 11 Making coffee using coffee beans 20
Installation

[Page 11: Safety Instructions](#)

Keep them nearby for once and power cord away from children future reference. These
instructions are under 8 years of age. also available on docs.whirlpool.eu WARNING: Accessible
parts may become These instructions and the appliance itself hot during use, young children
should be provide important safety warnings, to be kept away.

[Page 12: Installation](#)

This appliance is Not intended to be used make sure the appliance does not damage in similar
application such as: sta kitchen the power cable - risk of re or electrical areas in shops, o ces

and other working shock. Only activate the appliance when environments;...

[Page 13: Cleaning And Maintenance](#)

WARNING: Avoid any spillage on the con- SAFEGUARDING THE ENVIRONMENT Disposal of packaging materials nector and plug. The packaging material is 100% recyclable and is marked with the recycle symbol(). The various parts of the packaging Cleaning and maintenance must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal. WARNING: Ensure that the appliance

[Page 14: Built-In Installation](#)

BUILT-IN INSTALLATION Verify the minimum measurements required for correct installation of the appliance. The coffee machine must be installed in a column and the column must be firmly fixed to the wall with commercially available brackets. • Kitchen furniture in direct contact with the appliance must be heat resistant (65°C min).

[Page 15: Introduction](#)

INTRODUCTION Description of the homepage (main screen) (page 6 - B) Letters in brackets : menu to customise the beverages settings The letters in brackets refer to the legend in the Description of : appliance settings menu the appliance. B3. Selected aroma B4.

[Page 16: Turning The Appliance On](#)

TURNING THE APPLIANCE OFF appliance is pressed down (g. 2); 2. SELECT LANGUAGE : press (B10) or (B8) until the Whenever the coffee machine is turned on after being used to make coffee, it performs an automatic rinse cycle. The language corresponding to the required language appears on the display (B), then press the arrow;...

[Page 17: Beverages Settings](#)

- If the appliance is not used for more than 3-4 days, when make coffee immediately. switched on again, we strongly recommend performing 2/3 rinses before use; To enable this function, the time must already be set correctly
- After cleaning, it is normal for the grounds container (A4) to (see section "Set time").

[Page 18: Coffee Temperature](#)

with European regulations. Cup light To disable or enable "Energy Saving", proceed as follows: This function enables or disables the cup lights (A18). The lights 1. Press (B2) to enter the menu; come on each time coffee beverages or hot milk is delivered and 2.

[Page 19: Default Values](#)

completely, then press (g. 10); Statistics 3. (If the filter is installed) REMOVE WATER SOFTENER FILTER : This displays statistics relating to the machine. To display the remove the filter from the tank. Press statistics, proceed as follows: 4. INSERT WATER TANK, PRESS OK TO CONTINUE : insert the 1.

[Page 20: Making Coffee Using Coffee Beans](#)

Making coffee using coffee beans • Never use more than 1 level measure (C2) or it could dirty the inside of the coffee machine or block the funnel (A21). Do not use green, caramelised or candied coffee beans as they could stick to the coffee mill and make it unusable.

[Page 21: Tips For A Hotter Coffee](#)

coffee have been delivered. If this adjustment does not obtain Dial Description Recommended for the desired result, turn the dial another click. position No froth CAFFELATTE / Tips for a hotter coffee HOT MILK For hotter coffee, you should: •...

[Page 22: Cleaning The Milk Container After Use](#)

Cleaning the milk container after use "Customising the beverages" and "Memorising your personal profile"). WARNING When cleaning the internal tubes of the milk container, a little STEAM DELIVERY hot water and steam leak out of the frothed milk spout (D5). WARNING Avoid contact with splashes of water.

[Page 23: Customising The Beverages](#)

MEMORISING YOUR PERSONAL PROFILE 5. Wash all parts with warm water. 6. Insert the connection nozzle, then the cappuccino maker The appliance allows you to memorise 6 different profiles, each on the spout by pushing it upwards and turning it clockwise associated with a different icon.

[Page 24: Cleaning The Drip Tray](#)

appliance cannot be used to make coffee until you have cleaned If necessary, remove coffee deposits. the grounds container (A4). Even if not full, the empty grounds Cleaning the pre-ground coffee funnel container message is displayed 72 hours after the first coffee has been prepared. Check regularly (about once a month) that the pre-ground coffee has been prepared.

[Page 25: Cleaning The Hot Water/Steam Connection Nozzle](#)

hot water and light washing-up liquid. All components and litres under the hot water/steam spout (C4) and coffee container are dishwasher safe, placing them in the top spouts (A13) (fig. 8); basket of the dishwasher. WARNING Make sure there are no milk residues on the hollow and Hot water containing acid flows out of the hot water/steam groove under the dial (fig. 8).

[Page 26: Setting Water Hardness](#)

- If the descaling cycle is not completed correctly (e.g. no The machine is now reprogrammed with the new water hardness setting) we recommend repeating the cycle; setting.
- After descaling, it is normal for the grounds container (A4) TECHNICAL DATA to contain water.

[Page 27: Displayed Messages](#)

DISPLAYED MESSAGES DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY FILL TANK WITH FRESH Insufficient water in the tank (A12). Fill the tank with drinking water and/or insert it WATER correctly, pushing it as far as it will go until it clicks into place.

[Page 28](#) DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY ADD PRE-GROUND COFFEE The "pre-ground coffee" function has Place pre-ground coffee in the funnel (fig. 14) and MAXIMUM ONE MEASURE been selected without placing any pre-ground coffee in the funnel (A21). The pre-ground coffee funnel (A21) is Empty the funnel with the help of the brush (C3) as clogged.

[Page 29](#) DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY SELECT A Milder TASTE OR Too much coffee has been used. Select a milder taste by pressing AROMA (B6) or REDUCE PRE-GROUND COFFEE reduce the quantity of pre-ground coffee (maximum QUANTITY 1 measure). INSERT WATER SPOUT The hot water spout (C4) is not inserted or Insert the water spout as far as it will go.

[Page 30](#) DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY PRESS OK TO START CLEANING The milk container has been inserted To proceed with the CLEAN function, press PROCESS OR TURN MILK FROTH with the froth adjustment dial (D1) in the or turn the froth adjustment dial to one of the milk ADJUSTMENT DIAL CLEAN position.

[Page 31](#) DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY The appliance needs descaling. The descaling procedure described in section "Descale" needs to be performed and/or the filter needs replacing or removing as described in section "Water softener filter". The tubes inside the milk container (D) Turn the froth adjustment dial (D1) to CLEAN (fig. 8).

[Page 32: Troubleshooting](#)

TROUBLESHOOTING Below is a list of some of the possible malfunctions. If the problem cannot be resolved as described, contact Customer Services. PROBLEM POSSIBLE CAUSE REMEDY The coffee is not hot. The cups were not preheated. Warm the cups by rinsing them with hot water (Please note! you can use the hot water function).

[Page 33](#) PROBLEM POSSIBLE CAUSE REMEDY The milk contains large bubbles and The milk is not cold enough or is not Use skimmed or semi-skimmed milk at refrigerator temperature (about 5°C). If the result is not there is little froth as you wished, try changing brand of milk.

[Page 34](#) DOPPIO+ Origin Italy PROCESS Grinding Coffee powder 15gr Brewing Pre-infusion

reduced pre infusion Infusion higher pressure than espresso RESULT IN CUP Default Quantity ~ 120ml Cream thicker and darker than espresso Taste stronger than espresso OCCASION OF USE need for energy AMERICANO Origin...

[Page 35](#) CAPPUCCINOMIX Origin Italy PROCESS Co ee balanced (~ 80ml) Milk balanced (~ 70ml) Milk foam maximum level Delivery order co ee rst, milk afterwards RESULT IN CUP Visual uniformly brown milk drink Milk foam light brown with co ee taste OCCASION OF USE every moment of the day, people who loves melted milk and co ee tastes LATTE MACCHIATO...

[Page 36](#) 400011239758...