

Cleaning The Computer; Moving The Computer - Toshiba A200 Series User Manual

Toshiba portable personal computer user's manual

1
2
3
4
5
6
7
8
9


Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

 118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Cleaning the computer

To help ensure long, trouble-free operation, keep the computer free of dust and use care with liquids around the computer. Be careful not to spill liquids into the computer. If the computer does get wet, turn the power off immediately and let the computer dry completely before you turn it on again. Clean the computer using a slightly damp (with water) cloth. You can use glass cleaner on the display. Spray a small soft, clean cloth and wipe the screen gently with

soft, clean cloth and wipe the screen gently with the cloth.

Never spray cleaner directly onto the computer or let liquid run into any part of it. Never use harsh or caustic chemical products to clean the computer.

Cleaning the computer

To help ensure long, trouble-free operation, keep the computer and use care with liquids around the computer.

Moving the computer

The computer is designed for rugged durability. However, a few simple precautions taken when moving the computer will help ensure trouble-free operation.

- Be careful not to spill liquids into the computer. If wet, turn the power off immediately and let the computer dry before you turn it on again.

Make sure all disk activity has ended before moving the computer. Clean the computer using a slightly damp (with soft, clean cloth and wipe the screen gently with use glass cleaner on the display. Spray a small

- Clean the computer using a slightly damp (with soft, clean cloth and wipe the screen gently with use glass cleaner on the display. Spray a small

Check the Built-in Hard Disk Drive and optical disc drive indicators on the computer. If a disk is in the disk drive, remove it.



Never spray cleaner directly onto the computer or part of it. Never use harsh or caustic chemical products to clean the computer.

If a disc is in the optical disc drive, remove it. Also make sure the optical

Moving the computer

The computer is designed for rugged durability. However, a few simple precautions taken when moving the computer will help ensure trouble-free operation.

Make sure all disk activity has ended before moving the computer. Check the **Built-in Hard Disk Drive** and **optical disc drive** indicators on the computer.

- Make sure all disk activity has ended before moving the computer.
- Check the **Built-in Hard Disk Drive** and **optical disc drive** indicators on the computer.

Close the display. Do not pick up the computer by its display panel or

- If a disk is in the disk drive, remove it.

back (where the interface ports are located). Close the display. Do not pick up the computer by its display panel or back (where the interface ports are located).

- If a disc is in the optical disc drive, remove it. Also make sure the optical disc drive drawer is securely closed.

Close all port covers.

- Turn off the power to the computer.

Disconnect the AC adapter if it is connected.

- Disconnect all peripherals before moving the computer.

Close the display. Do not pick up the computer by its display panel or back (where the interface ports are located).

- Close the display. Do not pick up the computer by its display panel or back (where the interface ports are located).

Use the carrying case when transporting the computer.

- Close all port covers.

User's Manual

Operating Basics

4-26

- Disconnect the AC adapter if it is connected.

Use the carrying case when transporting the computer.

[Previous Page](#)
[Next Page](#)

1
...
71
72
73
74
75
76
77
78

Related Manuals for Toshiba A200 Series

[Laptop Toshiba PORTEGE A200 series Maintenance Manual](#)

Personal computer (342 pages)

[Laptop Toshiba A205-S5800 User Manual](#)

A205-s5800 user's guide (245 pages)

[Laptop Toshiba Satellite A205 Series User Manual](#)

(244 pages)

[Laptop Toshiba Satellite A200 User Manual](#)

Portable personal computer (232 pages)

[Laptop TOSHIBA Satellite A200 Series User Manual](#)

Toshiba notebook computer (227 pages)

[Laptop TOSHIBA Satellite A200 Series User Manual](#)

Toshiba satellite a200/satellite pro a200 series portable personal computer (222 pages)

[Laptop Toshiba A200 series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite A200 series User Manual](#)

(188 pages)

[Laptop Toshiba SATELLITE A200 Maintenance Manual](#)

Personal computer (186 pages)

[Laptop Toshiba A200 Series User Manual](#)

Portable personal computer (154 pages)

[Laptop Toshiba Satellite A205-S4577 Resource Manual](#)

Toshiba satellite a205-s4577: reference guide (56 pages)

[Laptop Toshiba Satellite A200-0MD00X Resource Manual](#)

Toshiba satellite a200-0md00x: reference guide (52 pages)

[Laptop Toshiba Satellite A200-ST2041 Series Specifications](#)

Toshiba satellite a200-st2041: specifications (8 pages)

[Desktop Toshiba Satellite A300 Maintenance Manual](#)

(263 pages)

[Desktop Toshiba Tecra A3 Maintenance Manual](#)

Personal computer (202 pages)

[Desktop Toshiba Satellite M45 Maintenance Manual](#)

Personal computer (284 pages)

Related Content for Toshiba A200 Series

[LX815-D1210 Cleaning The Computer](#)

Toshiba LX815-D1210

[DX1210-ST4N22 Cleaning The Computer](#)

Toshiba DX1210-ST4N22

[DX730-ST6N01 Cleaning The Computer](#)

Toshiba DX730-ST6N01

[EQUIUM M40 Figure 1- 2 The Computer Block Diagram](#)

Toshiba EQUIUM M40

[HX-10 Tuning Tv. To Your Computer](#)

Toshiba HX-10

[TECRA C50-C Series Disposing Of The Computer And The Computer's Batteries](#)

Toshiba TECRA C50-C Series

[PORTEGE R300 Figure 1-1 Front Of The Computer](#)

Toshiba PORTEGE R300

[Infinia 7130 Series Figure 1-1 Infinia™ Personal Computer](#)

Toshiba Infinia 7130 Series

This manual is also suitable for:

[Psaf4u-00I004Satellite a200-st2041](#)