

Charging The Batteries - Toshiba A200 Series User Manual

Toshiba portable personal computer user's manual

1
2
3
4
5
6
7
8
9


Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

 118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Note

1. Never remove the battery pack while the Wake-up on LAN function is enabled. Data will be lost. Before you remove a battery pack, disable the Wake-up on LAN function.
2. To ensure the battery pack maintains maximum capacity, operate the computer on battery power once a week until the battery pack is fully discharged. Refer to the section procedures. If the computer is continuously operated on AC power for an extended period, more than a week, the battery might fail to retain a charge. It might not function efficiently over the expected life of the battery pack and the Battery indicator might not indicate a low-battery

condition.

3. After the battery pack is charged, avoid leaving the AC adapter connected and the computer turned off for more than a few hours at a time. Continuing to charge a fully charged battery pack can damage the battery.

Charging the batteries

When the power in the battery pack becomes low, the Battery indicator flashes amber indicating that only a few minutes of battery power remain. If you continue to use the computer while the Battery indicator flashes, the computer enables Hibernation mode (so you don't lose data) and automatically turns off.

You must recharge a battery pack when it becomes discharged.

Procedures

To recharge a battery pack while it is installed in the computer, connect the AC adapter to the DC IN socket and plug the other end into a working outlet.

The Battery indicator glows amber when the battery is being charged. *Use only the computer connected to an AC power source to charge the battery pack. Do not attempt to charge the battery pack with any other charger.*

Time

The following table shows the time required to fully charge a discharged battery.

Charging time (hours)

Battery type

Battery pack

RTC battery

User's Manual

Extending battery life

Power on

about 12 or longer

about 24



Power and Power-Up Modes

in this chapter for

Power off

about 4 or longer

about 24 with AC or

Battery pack

6-7

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
84
85
86
87
88
89
90
91

Related Manuals for Toshiba A200 Series

[Laptop Toshiba PORTEGE A200 series Maintenance Manual](#)

Personal computer (342 pages)

[Laptop Toshiba A205-S5800 User Manual](#)

A205-s5800 user's guide (245 pages)

[Laptop Toshiba Satellite A205 Series User Manual](#)

(244 pages)

[Laptop Toshiba Satellite A200 User Manual](#)

Portable personal computer (232 pages)

[Laptop TOSHIBA Satellite A200 Series User Manual](#)

Toshiba notebook computer (227 pages)

[Laptop TOSHIBA Satellite A200 Series User Manual](#)

Toshiba satellite a200/satellite pro a200 series portable personal computer (222 pages)

[Laptop Toshiba A200 series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite A200 series User Manual](#)

(188 pages)

[Laptop Toshiba SATELLITE A200 Maintenance Manual](#)

Personal computer (186 pages)

[Laptop Toshiba A200 Series User Manual](#)

Portable personal computer (154 pages)

[Laptop Toshiba Satellite A205-S4577 Resource Manual](#)

Toshiba satellite a205-s4577: reference guide (56 pages)

[Laptop Toshiba Satellite A200-0MD00X Resource Manual](#)

Toshiba satellite a200-0md00x: reference guide (52 pages)

[Laptop Toshiba Satellite A200-ST2041 Series Specifications](#)

Toshiba satellite a200-st2041: specifications (8 pages)

[Desktop Toshiba Satellite A300 Maintenance Manual](#)

(263 pages)

[Desktop Toshiba Tecra A3 Maintenance Manual](#)

Personal computer (202 pages)

[Desktop Toshiba Satellite M45 Maintenance Manual](#)

Personal computer (284 pages)

Related Content for Toshiba A200 Series

[TECRA 9100 Series Batteries](#)

Toshiba TECRA 9100 Series

[Satellite 1400 Series Batteries](#)

Toshiba Satellite 1400 Series

[Satellite L830 Batteries](#)

Toshiba Satellite L830

[Satellite L650 Batteries](#)

Toshiba Satellite L650

[dynaEdge DE-100 Series Charging The Battery](#)

Toshiba dynaEdge DE-100 Series

[QOSMIO E10 Batteries](#)

TOSHIBA QOSMIO E10

[Portege 2000 Batteries](#)

Toshiba Portege 2000

[QOSMIO G10 Batteries](#)

Toshiba QOSMIO G10

This manual is also suitable for:

[Psaf4u-00l004Satellite a200-st2041](#)