



# Construction Views; Indoor Unit - Toshiba RAS-10SA-E Service Manual

Split wall type



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## 2-1. Indoor Unit

RAS-10SK-E

RAS-10SKX

Air inlet

Air outlet

Drain hose (0.54m)

Connecting pipe (0.39m)

65.5

Hanger


Minimum

distance

to wall

120 or more

76

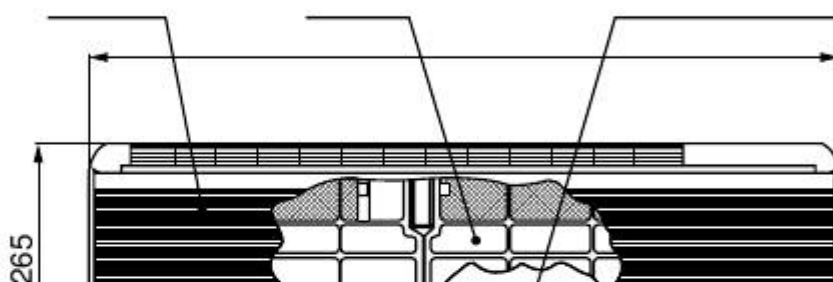


## 2. CONSTRUCTION VIEWS


Air filter  
790  
@@@@@@

@@@@@@  
@@@@@@

790  
232  
326  
Hanger  
321  
Hanger  
(Flare  $\varnothing 9.52$ )  
659  
450  
326  
66 or more  
Minimum  
distance  
to ceiling

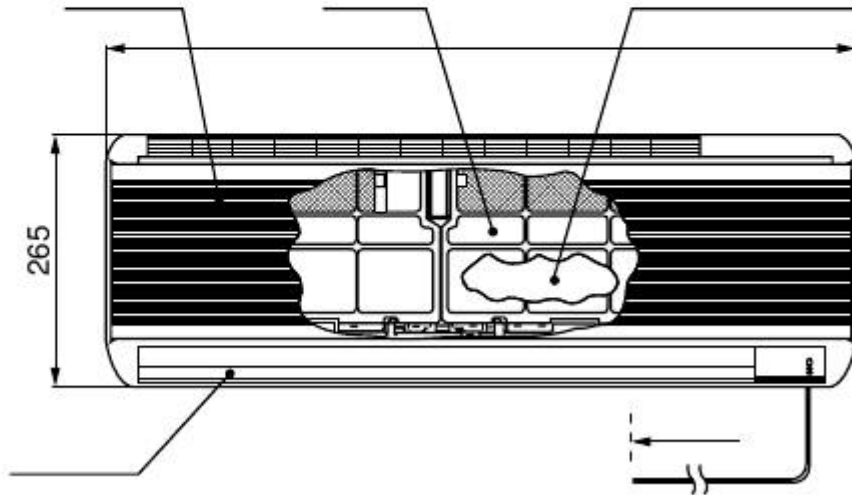

Hanger  
Center line  
319  
790

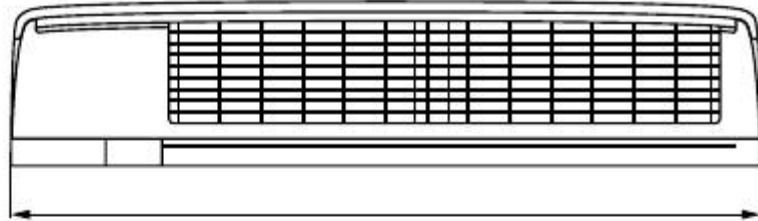


Heat exchanger  
10SK-E : Without power cord  
1800

10SKX : With power cord


232  
Connecting pipe (0.49m)  
(Flare  $\varnothing 6.35$ )

65.5  
Hanger  
For stud bolt  
( $\varnothing 8 \sim \varnothing 10$ )  
For stud bolt  
( $\varnothing 6$ )

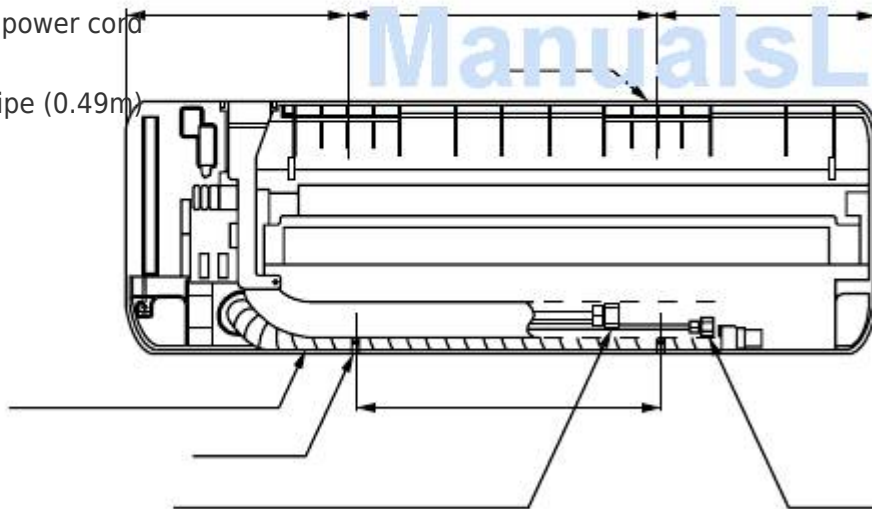


120 or more  
Hanger  
Installation  
plate outline

 60.5  
269  
126



Knock out system  
Front panel  
Back body  
47  
Knock out system  
Wireless  
remote  
control  
Minimum  
Remote  
distance to wall  
control  
holder  
174  
47  
55  
16  
59.6  
5

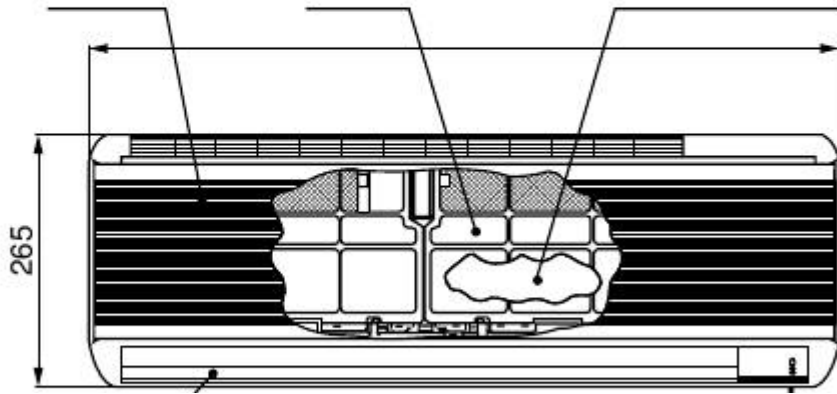

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
3  
4  
5  
**6**  
7  
8  
9  
10

Quick Links:

[Specifications](#)

[Indoor Unit](#)

[Indoor Unit](#)

## Troubleshooting

[TROUBLESHOOTING CHART](#) 32

[Troubleshooting Flowcharts](#) 38

### Related Manuals for Toshiba RAS-10SA-E

[Air Conditioner Toshiba RAS-10SA-E-1 Service Manual](#)

Air conditioner split wall type (56 pages)



[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-\(B\)10UFV Series Installation Manual](#)

Split type indoor unit outdoor unit (13 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

18ufv series, 18sav series (19 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Split type (3 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-10SKVP2-E Service Manual](#)

Split type indoor unit high wall, heat pump type outdoor unit heat pump type (111 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-10SA-E

[RAS-2M10G3AVG-E Construction Views](#)

Toshiba RAS-2M10G3AVG-E

[RAS-5M34G3AVG-E Construction Views](#)

Toshiba RAS-5M34G3AVG-E

[MMU-UP0031YHP-ETR Construction Views \(External Views\)](#)

Toshiba MMU-UP0031YHP-ETR

[RAV-GV1101AT8P-TR Construction Views \(External Views\)](#)

Toshiba RAV-GV1101AT8P-TR

[Carrier MMU-UP0151YHP-UL Construction Views \(External Views\)](#)

Toshiba Carrier MMU-UP0151YHP-UL

[MCY-MHP0806HT8-C Series Construction Views](#)

Toshiba MCY-MHP0806HT8-C Series

[Carrier TCB-IFDMR01UP-UL Construction Views \(External Views\)](#)

Toshiba Carrier TCB-IFDMR01UP-UL

[RAV-GM562ATP-TR Construction Views \(External Views\)](#)

Toshiba RAV-GM562ATP-TR

This manual is also suitable for:

[Ras-10sk-eRas-10saxRas-10skx](#)