

TOSHIBA

Toshiba Camileo H30 Using Manual

Toshiba remote control user manual


1
2

•

Bookmarks

Quick Links

[Download this manual](#) See also: [User Manual](#)

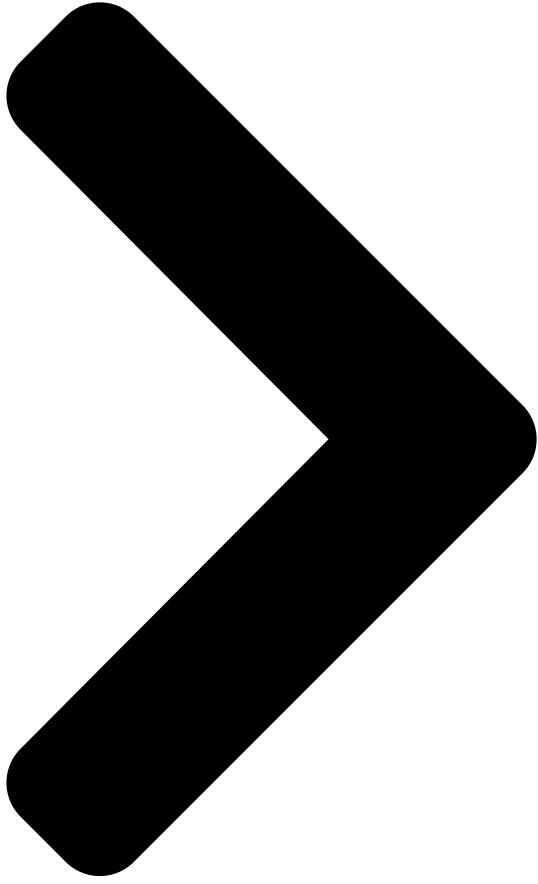

TOSHIBA

Using the CAMLEO Remote

Leading Innovation >>>

Control

Getting Started

Mode button

Playback button

Pre-Record/YouTube

Direct button



Menu button
Menu Rolling button

TOSHIBA

(Sample Illustration) Remote control
Leading Innovation >>>

Button functions

Direction Buttons:

Right Button

Turn the LCD Information ON/OFF.

Press to scroll to the right in the Record menu.

Press to advance to the next movie/picture in Playback mode.

Fast forward movies.

Left button

Turn OFF the Flash, Flash Auto, Red-Eye-Reduction, and Digital Light.

Press to scroll to the left in the Record menu.

Press to return to the previous movie/picture in Playback mode.

Fast rewind movies.

Up button


Press to scroll up in the Record menu.

TM

Zoom button

Direction buttons

Return button

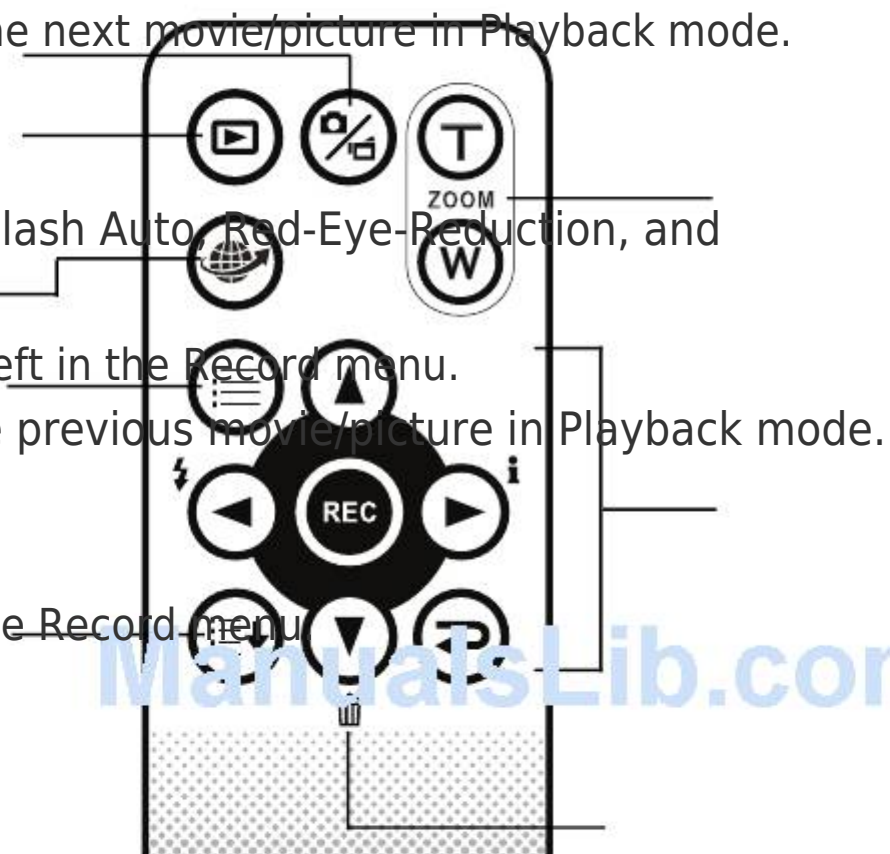

ManualsLib.com

[Next Page](#)

1

2

Related Manuals for Toshiba Camileo H30

[Camcorder Toshiba PA3791U-1CAM Camileo H30 User Manual](#)

Pa3791u-1cam camileo h30 user's guide (144 pages)

[Camcorder Toshiba PA3790U-1CAM User Manual](#)

10 mega pixel camcorder (52 pages)

[Camcorder Toshiba PA3791U-1CAM User Manual](#)

User manual (52 pages)

[Camcorder Toshiba CAMILEO H30 Quick Start Manual](#)

(29 pages)

[Camcorder Toshiba PA3791U-1CAM Camileo H30 Specifications](#)

Toshiba the camileo full-hd camcorder (2 pages)

[Camcorder Toshiba PA3790U-1CAM Camileo X100 User Manual](#)

Pa3790u-1cam camileo x100 user's guide (143 pages)

[Camcorder Toshiba Camileo GMAA00221011 Quick Start Manual](#)

Toshiba remote control quick start guide (29 pages)

[Camcorder Toshiba PA3790U-1CAM Camileo X100 Specifications](#)

Toshiba the camileo full-hd camcorder (2 pages)

[Remote Control Toshiba RBC-AMT32E Operation Manual](#)

Wired remote controller (5 pages)

[Remote Control Toshiba RBC-AS41E Owner's Manual](#)

Air conditioner remote controller (2 pages)

[Remote Control Toshiba TCB-SC642TLE Owner's Manual](#)

Central remote controller for split system air conditione (65 pages)

[Remote Control Toshiba CT-8002 At-A-Glance Reference Manual](#)

(2 pages)

[Remote Control Toshiba RBC-AMS51E-EN Owner's Manual](#)

Lite-vision plus remote controller (42 pages)

[Remote Control TOSHIBA VCR remote Programming Manual](#)

(5 pages)

[Remote Control Toshiba RBC-AMS51E-ES Installation Manual](#)

Lite-vision plus remote controller (30 pages)

[Remote Control Toshiba RBC-AMS54E Installation Manual](#)

Wired remote controller (32 pages)

Summary of Contents for Toshiba Camileo H30

[Page 1: Getting Started](#)

Using the CAMILEO Remote Control Getting Started Mode button Playback button Pre-Record/YouTube Direct button Menu button Menu Rolling button (Sample Illustration) Remote control Button functions Direction Buttons: Right Button Turn the LCD Information ON/OFF. Press to scroll to the right in the Record menu. Press to advance to the next movie/picture in Playback mode.

[Page 2](#) Using the CAMILEO Remote Control Press to increase the volume while playing movies. Down button Delete the current movie/picture or all movies/pictures. Press to scroll down in the Record menu. Press to decrease the volume while playing movies. Record button: In Movie Record mode, press to record movies, press again to stop recording.

This manual is also suitable for:

Camileo x100 Camileo gmaa00228010 Camileo pa3790u-1cam Camileo pa3791u-1cam Camileo