

Sound System Problems - Toshiba PORTEGE R700 SERIES User Manual

Toshiba computer drive user manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
28
Table Of Contents
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246



•

[Table of Contents](#)

•

Bookmarks



190

If Something Goes Wrong

Sound system problems

You press the disc eject button, but the drive tray does not slide out.

Make sure the computer is connected to a power source and turned on. The optical disc drive eject mechanism requires power to

operate.

Make sure a program is not accessing the drive and preventing it from ejecting.

If you need to remove a disc and cannot turn on the computer (for example, if the battery is completely discharged), use a narrow object, such as a straightened paper clip, to press the manual eject button. This button is in the small hole next to the optical disc drive eject button on the face of the optical disc drive tray.

Some discs run correctly but others do not.

Check that the type of disc you are using is compatible with your optical disc drive. For more information regarding supported optical media formats, refer to the complete detail specifications for

your computer at pcsupport.toshiba.com.

If the problem is with an optical data disc, refer to the software's documentation and check that the hardware configuration meets the

program's needs.

CAUTION

The disc will not come out of the drive when you click the eject button on the screen.

Press the button on the optical disc drive itself. For additional information see

[does not slide out.](#) on page

ManualsLib.com

Sound system problems

No sound is coming from the computer's speakers.

Adjust the volume control.

Try pressing

Check that the volume control on the computer is turned up.

If you are using external headphones or speakers, check that they are securely connected to your computer.

Never use a pencil to press the manual eject button. Pencil lead can break off inside the computer and damage it.

["You press the disc eject button, but the drive tray](#)

Fn + Esc

to see if volume mute is disabled.

190.

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1

...

189

190

191

192

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba PORTEGE R700 SERIES

[Laptop Toshiba PORTÉGÉ R700 Series Maintenance Manual](#)

Personal computer (474 pages)

[Laptop Toshiba TECRA R700 User Manual](#)

(198 pages)

[Laptop Toshiba Portege R700 User Manual](#)

Toshiba laptop user manual (191 pages)

[Laptop Toshiba PSLD8U-01601E User Manual](#)

User manual (165 pages)

[Laptop Toshiba Portege R700-S1320 Specifications](#)

Toshiba portege r700-s1320: specifications (4 pages)

[Laptop Toshiba Portege R700-S1321 Specifications](#)

Toshiba portege r700-s1321: specifications (4 pages)

[Laptop Toshiba Portege R700-S1322 Specifications](#)

Toshiba portege r700-s1322: specifications (4 pages)

[Laptop Toshiba Portege R700-S1332 Specifications](#)

Toshiba portege r700-s1332: specifications (4 pages)

[Laptop Toshiba Portege R700-ST1303 Specifications](#)

Toshiba portege r700-st1303: specifications (4 pages)

[Laptop Toshiba Portege R705-P35 Specifications](#)

Toshiba portege r705-p35: specifications (4 pages)

[Laptop Toshiba Portege R705-ST2N03 Specifications](#)

Toshiba portege r705-st2n03: specifications (4 pages)

[Laptop Toshiba Portege R705-ST2N04 Specifications](#)

Toshiba portege r705-st2n04: specifications (4 pages)

[Laptop Toshiba Portege R700-S1310 Specifications](#)

Toshiba portege r700-s1310: specifications (4 pages)

[Laptop Toshiba Portege R700-S1311 Specifications](#)

Toshiba portege r700-s1311: specifications (4 pages)

[Laptop Toshiba Portege R700-S1312 Specifications](#)

Toshiba portege r700-s1312: specifications (4 pages)

[Laptop Toshiba Portege R705-P42 Specifications](#)

Toshiba portege r705-p42: specifications (3 pages)

Related Content for Toshiba PORTEGE R700 SERIES

[Portege 2010 Sound System Problems](#)

Toshiba Portege 2010

[Satellite A35 Series Sound System Problems](#)

Toshiba Satellite A35 Series

[Qosmio X70-A series Sound System Problems](#)

Toshiba Qosmio X70-A series

[Satellite L550 Series Sound System Problems](#)

Toshiba Satellite L550 Series

[TECRA A50 series Sound System Problems](#)

Toshiba TECRA A50 series

[Satellite T210 Series Sound System Problems](#)

Toshiba Satellite T210 Series

[Satellite P200 Series Sound System Problems](#)

Toshiba Satellite P200 Series

[Qosmio X300 Series Sound System Problems](#)

Toshiba Qosmio X300 Series

This manual is also suitable for:

[R700-s1310R700-s1311R700-s1312R700-s1320R700-s1321R700-s1322](#) ... [Show all](#)