

 


Toshiba 15VL33 Owner's Manual

Toshiba stasia owner's manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27



•

•

Bookmarks

Quick Links

[1 Connecting External Equipment](#)

[Download this manual](#)



Owner's manual
Bedienungsanleitung
Manuel de l'utilisateur
Gebruiksaanwijzing

TOSHIBA



Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 15VL33

[Monitor Toshiba 14DL74 Specifications](#)

14" diagonal 4:3 lcd monitor (2 pages)

[Monitor Toshiba TD-E433 Owner's Manual](#)

(31 pages)

[Monitor Toshiba 65H84 Brochure](#)

65" diagonal hd monitor (2 pages)

[Monitor Toshiba 50HP82 Owner's Manual](#)

Wide plasma display (52 pages)

[Monitor Toshiba 26HLC56 Owner's Manual](#)

Toshiba lcd tv monitor owner's manual (46 pages)

[Monitor Toshiba RMTI-EMD-HT Brochure & Specs](#)

Environmental monitoring management (2 pages)

[Monitor Toshiba PA3923U-1LC3 USB Monitor User Manual](#)

Mobile lcd monitor (40 pages)

[Monitor Toshiba TD-E501 Owner's Manual](#)

(23 pages)

[Monitor Toshiba TD-E651 Owner's Manual](#)

(23 pages)

[Monitor Toshiba Full Color Led Display System TR 2010E Specifications](#)

10mm indoor/outdoor led display (2 pages)

[Monitor Toshiba PA5022U-1LC3 User Manual](#)

15.6" mobile led monitor (42 pages)

[Monitor Toshiba TD-E432 User Manual](#)

(77 pages)

[Monitor Toshiba TD-E432 User Manual](#)

(77 pages)

[Monitor Toshiba 42WP27B Service Manual](#)

(154 pages)

[Monitor Toshiba 51HC85 Service Manual](#)

Projection monitor (107 pages)

Summary of Contents for Toshiba 15VL33

[Page 1](#) Owner's manual Bedienungsanleitung Manuel de l'utilisateur Gebruiksaanwijzing...

[Page 2: Table Of Contents](#)

List of contents Special features ...2 Safety instructions ...3 Getting started ...4 Aerial connection...4 Switching on...4 Battery fitting...4 Control unit...5 Front and rear panel...5 External connections table...6 Remote control ...6 Using the TV ...7 Tuning the TV ...8 Automatic tuning ...8 Manual tuning...9 Program organising ...10 TV setup ...11...

[Page 3: Special Features](#)

Television Thank you for buying this television which is designed to give you many years of satisfactory service. You may already be familiar with using a television but do please take time to read these instructions. They are designed to familiarise you with the unit's many new

features and to ensure you get the very best out of your purchase.

[Page 4: Safety Instructions](#)

Safety is Important Your safety and the safety of others is important. Please, therefore, ensure you read the Safety instructions before you operate this television. Safety instructions Read all the safety instructions before first use of your TV. • Position the television so that direct light does not fall on the screen.

[Page 5: Getting Started](#)

Getting started Remove your Television carefully from the box. You may wish to store the packaging for future use. In the box Inside the cartoon box you should have: • Accessories box • Power cord • Adapter • Remote control •...

[Page 6: Control Unit](#)

Control Unit AUDIO OUT VIDEO Stand-by Power on / off Remote control Menu button Volume up Volume down Program up Program down Speaker Audio RCA (R) Please note • See the external connections table on next page for available connections. •...

[Page 7: External Connections Table](#)

External connections table Picture tube 15" size/type AV1 Scart STD. Headphone STD. socket Audio/Video STD. S-Video STD. socket Back audio STD. Remote control Mute Index page (Text) Reveal info (Text) Double height (Text) Stop button Sub page button (Text) TV mode button (Text) Text mode button TV/Teletext Volume down...

[Page 8: Using The Tv](#)

Using the TV Turning on for the first time and Tuning TV controls Stand-By mode When your TV is working on, press the red "STAND-BY" button on the right upper corner of your remote control to switch off and the Stand- By indicator (Led) will be brighter.

[Page 9: Tuning The Tv](#)

Press the Mute button again to restore the sound. The symbol will disappear. Pressing Volume up buttons will also restore the sound. But pressing the Volume down button will decrease the volume without restoring. Personal preference. Press the PP button to revert to the default settings for the TV.

[Page 10: Manual Tuning](#)

Please note The system will be displayed automatically on SYSTEM row i.e.BG, L, I or DK depending the receiving broadcasting system of your country. In some countries the broadcasting system can be both in BG/DK or BG/LL'. Only the TV sets produced with Pal Secam BG/DK or Pal Secam BG/LL'...

[Page 11](#) Tuning with channel numbers Enter the SETUP menu by pressing the blue button. Press OK button when CHANNEL row is blue. Use OK button to select "S" for cable channels and "C" for terrestrial broadcast. Enter the channel number using the Numeric buttons or use the Volume up/down buttons to tune channels.

[Page 12: Program Organising](#)

Program organising Once you have tuned in all the channels you want, you can change their programme number, if required, and name them. To enter the PROGRAM TABLE menu press the Menu button and select PROGRAM TABLE and press the OK button or press directly the Yellow button.

[Page 13: Tv Setup](#)

TV set up The TV set up is accessed through a menu system. Once you have stored your set up, this is the set up the TV will default to when you switch it on. To enter the MAIN menu press the Menu button.

[Page 14: Picture Menu](#)

Sound mode You can select NORMAL or SPATIAL Volume up/down buttons. SPATIAL sound is an 'expanded stereo'. It gives the impression that the two speakers in the TV are further apart than

they really are. TV transmitters have different sound levels. AVL (automatic volume limiting) maintains the same sound level as you switch from program to program.

[Page 15](#) Picture menu (Green button) PICTURE BRIGHTNESS CONTRAST COLOUR SHARPNESS SMART CONTROL USER NOISE REDUCTION The picture menu allows you to set up the following: BRIGHTNESS CONTRAST COLOUR SHARPNESS SMART CONTROL and NOISE REDUCTION To change, for example, the colour, select it using Program up and down buttons.

[Page 16](#) Child Lock: Using the Child Lock, you can lock any Program you want so that adult channels can not be watched by children. You can cancel child lock any time you want. To cancel Child Lock, select Child Lock as OFF when you are watching that program.

[Page 17: Using Teletext](#)

Using Teletext Teletext is an information system that displays text on your TV screen. Using the teletext control buttons you can view pages of information that are listed in the teletext index. Please Note No on screen display is available in text mode. The contrast, brightness and colour cannot be changed but the volume control is still available.

[Page 18](#) Page Stop If the page of text you have selected contains sub pages, these sub pages HOLD will automatically be displayed in order with a delay to allow you to read the page. To stop the move to the next sub page press the STOP button.

[Page 19: Connecting External Equipment](#)

Connecting external equipment You can connect a wide range of audio and video equipment to your TV. Connecting a video recorder Via SCART Make sure the TV and video recorder are both switched off. Plug one end of the SCART lead (not supplied) into the back of the video recorder and the other end into one of the SCART sockets on the back of the TV.

[Page 20](#) Via aerial socket Make sure the TV and video recorder are both switched off. Unplug the aerial lead from the TV and plug it into the aerial socket on the video recorder (if fitted). Plug a coaxial plug into the RF out socket on the rear of the video recorder and plug the other end into the aerial socket of the TV.

[Page 21: Connecting A Dvd Player](#)

Connecting a DVD player Via SCART Make sure the TV and DVD player are both switched off. Plug one end of the SCART lead (not supplied) into the back of the DVD player and the other end into the SCART socket on the back of the TV.

[Page 22: Connecting A Decoder](#)

Connecting a decoder Via SCART Make sure the TV and decoder are both switched off. Plug one end of the SCART lead (not supplied) into the back of the decoder and the other end into the SCART on the back of the TV. Switch on the decoder and the TV.

[Page 23](#) INTRODUCTION Because your 15"LCD-TV equipment is provided with VGA inputs, it may be used as a PC monitor as well. (Pug&Play) HOLD UPDATE TV/PC < To browse in the menus, you may use the "PR "/"PR " buttons and Vol+ or Vol- buttons to select the type of adjustment you wish to make.

[Page 24](#) AUTO CONFIG : Allows the entry of optimum geometrical adjustments based on the input mode INFORMATION : Displays the input mode information on the screen. MISCELLANEOUS You may enter the factory default settings, Menu position and duration on the screen, resolution settings etc.

[Page 25](#) Connecting TV with video and satellite/digital receiver Satellite/digital receiver Aerial out Scart socket Aerial in Connecting TV with camcorder Camcorder Connecting TV games and computer Video Aerial out Video Scart socket Scart socket Aerial in Rear of TV Scart 1 Aerial socket S-Video In...

[Page 26: Help And Service Tips](#)

Help and service tips The TV does not work Make sure it is plugged into the mains supply and switched on. Poor picture • Is the aerial plugged in? • If you are using a set top aerial is it

properly aligned for the best signal.

[Page 27: Technical Specifications Table](#)

Technical specifications table Picture tube 15" size/typee Screen size 38 cm Visible 304,15 (H) x 228,1 (V)mm screen size Sound Output 2x2 W (%10 THD) Power 45W (max) consumption Stand by 2,5 W Power consumption General technical specifications Power Supply DC: ...