

TOSHIBA

Toshiba 27WL46 Series Owner's Manual

Toshiba monitor owner's manual


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29

•

[Download this manual](#)

Quick Links

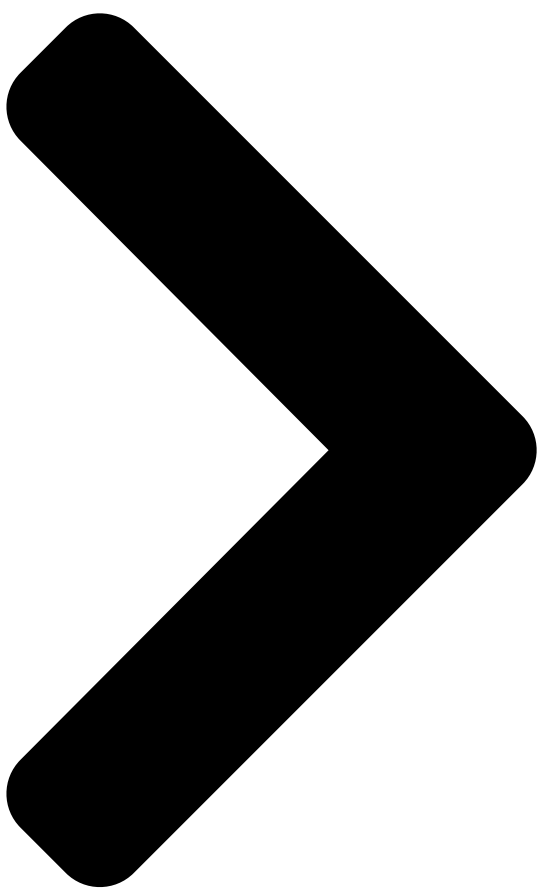



TOSHIBA



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 27WL46 Series

[TV Toshiba 30WL46 Service Manual](#)

(43 pages)

[Monitor Toshiba 20DL74 Specifications](#)

20" diagonal 4:3 lcd monitor (2 pages)

[Monitor Toshiba TheaterWide 20HL85 Specifications](#)

20" diagonal theaterwide lcd hd monitor (2 pages)

[Monitor Toshiba TheaterWide 23HL84 Specifications](#)

23" diagonal theaterwide lcd hd monitor (2 pages)

[Monitor Toshiba 26HLC56 Owner's Manual](#)

Toshiba lcd tv monitor owner's manual (46 pages)

[Monitor Toshiba COLORSTREAM HD 26HLC56 Owner's Manual](#)

(46 pages)

[Monitor Toshiba 27WL55A Schematic Diagrams](#)

(52 pages)

[Monitor Toshiba LED TV Series Owner's Manual](#)

(22 pages)

[Monitor Toshiba 15VL33 Owner's Manual](#)

Toshiba stasia owner's manual (27 pages)

[Monitor Toshiba RMTI-EMD-HT Brochure & Specs](#)

Environmental monitoring management (2 pages)

[Monitor Toshiba PA3923U-1LC3 USB Monitor User Manual](#)

Mobile lcd monitor (40 pages)

[Monitor Toshiba TD-E501 Owner's Manual](#)

(23 pages)

[Monitor Toshiba TD-E651 Owner's Manual](#)

(23 pages)

[Monitor Toshiba Full Color Led Display System TR 2010E Specifications](#)

10mm indoor/outdoor led display (2 pages)

[Monitor Toshiba PA5022U-1LC3 User Manual](#)

15.6" mobile led monitor (42 pages)

[Monitor Toshiba TD-E432 User Manual](#)

(77 pages)

Summary of Contents for Toshiba 27WL46 Series

[Page 1](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 1...

[Page 2](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 2 sorting ENGLISH -3-...

[Page 3](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 3 ENGLISH -4-...

[Page 4](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 4 will 2X10 W PAP (Picture and Picture) Feature DVI-D socket ENGLISH -5-...

[Page 5](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 5 Safety Instructions - For Your Safety T O F U L L Y D I S C O N N E C T T H E T V , THE MAINS PLUG IS USED AS A DISCONNECTING DEVICE AND THEREFORE SHALL BE READILY OPERABLE.

[Page 6: Where To Install](#)

ingilizce-1.FH11 6/7/05 12:13 PM Page 6 Where to install Locate the television away from direct sunlight and strong lights, soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen. Place on a sturdy platform, the mounting surface should be flat and steady It should then be secured to the wall with a sturdy tie using the clip on the back of the television, or secured to the platform.

[Page 7](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 7 Note: Scart, DVI,VGA and RCA leads are not supplied. Connect the power cord plug to the mains socket. Connect the input socket of the power cord to the power socket at the back panel of the LCD TV When not in use disconnect the mains plug from the mains supply.

[Page 8](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 8 ANT IN Video AV-4 Headphone jack Scart (EXT1) Scart (EXT2) Scart (EXT3) Power Input Source Select Video PC-DVI AUDIO IN AV OUT Menu • Phono Phono Connector (L) Phono Connector (R) output Phono Audio RCA output (L) Audio RCA output (R) S-VHS PC sound input...

[Page 9](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 9 Mix /TV ENGLISH -10- Size)

[Page 10](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 10 – Return to Selected Button Program (SWAP) If you wish to return to the previous program that you were watching then you have the ability to return with a single function, by pressing the SWAP button.

[Page 11: Tuning The Tv](#)

ingilizce-1.FH11 6/7/05 12:13 PM Page 11 External Device The television has 3 SCART connections. After every time you press the AV button, the input settings change as follows. 1. EXT1 when using SCART socket 1 (with RGB support) 2. EXT2 when using SCART socket 2 (with RGB support) 3.

[Page 12: Manual Tuning](#)

ingilizce-1.FH11 6/7/05 12:13 PM Page 12 Manual Tuning By pressing the MENU and (buttons of your remote control, you will bring up the SET UP menu on your television screen. Using the down button (control, highlight the Manual Tuning bar in yellow and press “OK”...

[Page 13](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 13 Fine Tuning If the current channel requires fine tuning, skip the Manual Fine Tuning bar using the right () button on the Manual Tuning menu. Using the up () movement (- remote control, adjust the program on the screen to the quality you wish.

[Page 14](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 14 Programme Sorting In the Setup menu use the down (button to select the Programme Sorting line and press “OK” or the left/right) button. – The Programme Sorting menu will be shown on screen.

[Page 15](#) ingilizce-1.FH11 6/7/05 12:13 PM Page 15 Volume Correction Television transmitters have different sound levels. This can be noticed from the different volume levels that can be heard while switching from one program to another. Using the right/left movement) buttons switch to Open. The AVL –...

[Page 16: Widescreen Viewing](#)

ingilizce-2.FH11 6/7/05 12:14 PM Page 1 Widescreen viewing AUTO: Automatic format selection dependant on transmission. ENGLISH -17-...

[Page 17](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 2 Features Automatic Size Some channels broadcast with the program also size information. If you choose Open for the Automatic Size feature the TV will adjust to the size information broadcasted. To detect Automatic Size, the screen setting needs to be at Auto Mode.

[Page 18](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 3 If any of the Timers is activated, the Green

coloured light on the front side will flash. Please note: If you turn your television off from the main power supply switch then the sleep timer modes selected will be reset and cancelled.

[Page 19](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 4 PIP Size This feature enables you to resize your PIP window. Press the right/left (/) buttons after you yellow highlighted the PIP Size selection. After you resized your PIP window you can exit the menu by pressing the EXIT button of the remote control.

[Page 20](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 5 Introduction Because your 27" - 30" LCD-TV equipment is provided with VGA inputs, it may be used as a PC monitor as well. (Plug&Play) Transition to the PC mode To change your LCD-TV into monitor (PC) mode you have to press 6 times the "..."

[Page 21](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 6 On Screen Display adjustment twice. This will ENGLISH -22-...

[Page 22](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 7 Press the remove the displayed time. ENGLISH -23- button again to...

[Page 23](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 8 EXT1, EXT2 EXT3 ENGLISH -24-...

[Page 24](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 9 Audio In (R) Audio In (L) Video In S-Video In Audio In (R) Audio In (L) ENGLISH -25-...

[Page 25](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 10 Audio In (R) Audio In (L) Video In ENGLISH -26-...

[Page 26](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 11 EXT1. Audio In (R) Audio In (L) Video In Connecting DVI-D Your TV has DVI-D input socket. You can connect any device such as PC etc. which has DVI digital out using the proper cable. At the same time you can listen to the sound from the connected device.

[Page 27](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 12 ENGLISH -28-...

[Page 28](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 13 ENGLISH -29-...

[Page 29](#) ingilizce-2.FH11 6/7/05 12:14 PM Page 14 27" 16:9 active matrix TFT 2X10 W 120 W < 4 W Following information is only for EU-member states: The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling...

This manual is also suitable for:

30wl46 seriesTigerstick