

 
TOSHIBA

Toshiba 19A20 Owner's Manual

Toshiba owner's manual color television 19a20

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20



•

Table of Contents

•

Bookmarks

Quick Links

[1 Installing Your Tv Set](#)

[2 Specifications](#)

[Download this manual](#)

[See also: Service Manual](#)



O **TOSHIBA**

M

OWNER'S

ANUAL

Color Television **TOSHIBA** 19A20

© TOSHIBA CORPORATION, 2000

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 19A20

[TV Toshiba 19A20 Service Manual](#)

Color television (28 pages)

[CRT TV Toshiba 13A24 Owner's Manual](#)

Toshiba owner's manual color television 13a24 (47 pages)

[TV Toshiba 13A24 Owner's Manual](#)

(47 pages)

[TV Toshiba 13A24 Service Manual](#)

(32 pages)

[CRT TV Toshiba 13A26C Owner's Manual](#)

Toshiba color television owner's manual 13a26c, 19a26c (29 pages)

[CRT TV Toshiba 19A26 Specifications](#)

19" (measured diagonally) color tv (2 pages)

[CRT TV Toshiba 19A26 Service Manual](#)

Toshiba 19a26 color television service manual (34 pages)

[CRT TV Toshiba 19A25 Owner's Manual](#)

Toshiba color television owner's manual 19a25 (15 pages)

[CRT TV Toshiba 19W330DB Owner's Manual](#)

Toshiba color television owner's manual (35 pages)

[CRT TV Toshiba 19W330DG Owner's Manual](#)

Toshiba color television owner's manual (35 pages)

[CRT TV Toshiba 13a23 Service Manual](#)

(31 pages)

[CRT TV Toshiba 13A23 Owner's Manual](#)

Toshiba owner's manual color television 13a23,13a23w (18 pages)

[CRT TV Toshiba 13A25 Owner's Manual](#)

Toshiba tv 13a25 owner's manual (15 pages)

[CRT TV Toshiba 14AF43 Owner's Manual](#)

Toshiba tv user's manual (36 pages)

[CRT TV Toshiba 14AF45 Owner's Manual](#)

Toshiba color television owner's manual 14af45, 20af45 (32 pages)

[CRT TV Toshiba 14AF44 Service Manual](#)

(39 pages)

Summary of Contents for Toshiba 19A20

[Page 1](#) WNER'S ANUAL Color Television 19A20 © TOSHIBA CORPORATION, 2000...

[Page 2: Safety Precautions](#)

You will find the model number and serial number on the back of your TV set. Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product. Model Number Serial Number...

[Page 3: Table Of Contents](#)

Table of Contents Set Up Installing Your TV Set ... 3 Antenna/Cable TV Connection ... 4 Basic

Operation of Controls (TV Set) ... 5 Operation of Controls (Remote Control) ... 6 Menu Function (General Instructions) ... 7 Programming Channel Memory ... 8 Convenient Remote Functions ...

[Page 4: Antenna/Cable Tv Connection](#)

Antenna/Cable TV Connection You can use either an indoor or outdoor antenna to receive VHF and/or UHF channels. Channels 2 - 13 are VHF channels, and channels 14 - 69 are UHF channels. We recommend using an outdoor antenna for better picture quality. You can receive Cable TV by connecting a cable supplied by your local cable company.

[Page 5: Operation Of Controls \(Tv Set\)](#)

Operation of Controls (TV Set) Front view MENU VOLUME CHANNEL First-Time Operation Turn on TV and place channels in memory. See page 8. POWER button Press to turn on the TV. Press again to turn off the TV. CHANNEL t t t t t / s s s s buttons Press s to select next higher channel.

[Page 6: Operation Of Controls \(Remote Control\)](#)

Operation of Controls (Remote Control) This Remote Control allows you to control the functions of your TV set from 16 feet (5m) away. Before attempting to operate the Remote Control, install the batteries according to "Installing and replacing batteries" below. For specific use of each control, consult the corresponding page numbers in brackets.

[Page 7: Menu Function \(General Instructions\)](#)

Menu Function (General Instructions) We suggest you familiarize yourself with the procedure before using the Menu function. To adjust any TV feature, the use of the Menu function is required. The adjustments that can be made to the TV appear on the screen.

[Page 8: Programming Channel Memory](#)

Programming Channel Memory The channel memory is the list of TV channel numbers your TV will stop on when you press the CHANNEL s or t button. First, use the TV/CABLE and CH PROGRAM functions to preset all active channels in your area. If necessary, arrange the preset channels with the ADD/ERASE functions so that you can tune into only desired channels.

[Page 9](#) ADD/ERASE function After performing the CH PROGRAM function, you can add or erase specific channels. Select the channel you want to erase using the CHANNEL s or t button, or select the channel you want to add using the Channel Number buttons. Press MENU (then s or t on Remote) repeatedly until "ADD/ERASE"...

[Page 10: Convenient Remote Functions](#)

Convenient Remote Functions Number buttons POWER TV/VIDEO VIDEO CH RTN CH RTN RECALL MUTE RECALL MUTE MENU EXIT To select VCR channel Press TV/VIDEO once to select channel 3 (VCR channel). Use this button to watch a video tape playing. To restore the channel, press TV/VIDEO again.

[Page 11: Setting The Off-Timer \(Sleep Timer\)](#)

Setting the Off-Timer (Sleep Timer) With the off-timer, you can set the TV to turn off automatically after a pre-determined period of time (up to 180 minutes in 10 minute units). POWER MENU VOLUME CHANNEL MENU < / > POWER POWER TV/VIDEO CH RTN...

[Page 12: Adjusting The Picture](#)

Adjusting the Picture You can adjust the picture quality (CONTRAST, BRIGHTNESS, SHARPNESS, COLOR and TINT) to suit your personal preference. POWER MENU VOLUME CHANNEL MENU < / > POWER TV/VIDEO CH RTN RECALL MUTE T / S MENU MENU EXIT To adjust the picture quality Press MENU (then s or t on Remote) repeatedly until the selection in the Picture...

[Page 13: Operating Closed Caption Feature](#)

Operating Closed Caption Feature You have two options with the closed caption feature: captions or text. A caption is a printed version of the dialogue, narration and/or sound effect of a TV program. Text is information not related to the program that appears on the lower half of the TV screen. POWER MENU VOLUME...

[Page 14: Using V-Chip Control](#)

Using V-CHIP Control Some TV programs and movies includes signals that classify the content of the program (violence, sex, dialog, language). The V-CHIP Control feature in this TV detects then signals and blocks the programs according to selections. To use this feature, perform the following setup. POWER TV/VIDEO Number...

[Page 15: To Adjust The V-Chip Control Menu](#)

V-CHIP CONTROL menu ENABLE BLOCKING : SET RATING SET BLOCKING OPTIONS NEW PIN CODE BLOCK CHANNEL MOVE[s t] SELECT[T S] To select each item, Press t or s. About Rating The rating of the TV programs you are now watching can be confirmed by pressing the RECALL button.

[Page 16](#) Using V-CHIP Control (continued) V-CHIP CONTROL menu ENABLE BLOCKING SET RATING SET BLOCKING OPTIONS NEW PIN CODE BLOCK CHANNEL MOVE[s t] START[T S] To select each item, Press t or s. POWER TV/VIDEO CH RTN RECALL MUTE MENU MENU EXIT NOTE:...

[Page 17: To Temporarily Unblock Programs](#)

To temporarily unblock programs If you try to watch a TV program that exceeds the rating limits you set, the TV will enter into the program block mode. THIS PROGRAM HAS BEEN BLOCKED! TV-PG EXCEEDS SET LIMITS PUSH MUTE TO ENTER PIN If you want to watch the blocked program temporarily, press MUTE.

[Page 18: Cleaning And Care](#)

Cleaning and Care WARNING: TV sets use High Voltage. Do not try to remove the cabinet back. Refer servicing to qualified service personnel. To clean the TV screen: 1. First remove the plug from the power outlet to avoid possible shock hazard. 2.

[Page 19: Limited United States Warranty](#)

Limited United States Warranty Toshiba America Consumer Products, Inc. ("TACP") and Toshiba Hawaii Inc. ("THI") make the following limited warranties. These limited warranties extend to the original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

[Page 20: Specifications](#)

Design and specifications are subject to change without notice TOSHIBA AMERICA CONSUMER PRODUCTS, INC. HEAD OFFICE/82 TOTOWA ROAD, WAYNE, NEW JERSEY 07470 FACTORY SERVICE CENTER 1420B TOSHIBA DRIVE, LEBANON, TENNESSEE 37087 TOSHIBA HAWAII, INC. HEAD OFFICE/327 KAMAKEE STREET, HONOLULU, HAWAII 96814, U.S.A.

This manual is also suitable for:

13a24