



Toshiba 24AF45 Owner's Manual

Toshiba owner's manual color tv 24af45

1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Exploring Your New Tv](#)

[2 Connecting a DVD Player with Colorstream \(Component Video\) and a Vcr](#)


[3 Watching Video Input](#)

[4 Adjusting the Picture Quality](#)

[5 Specifications](#)

[Download this manual](#)

See also: [Service Manual](#)

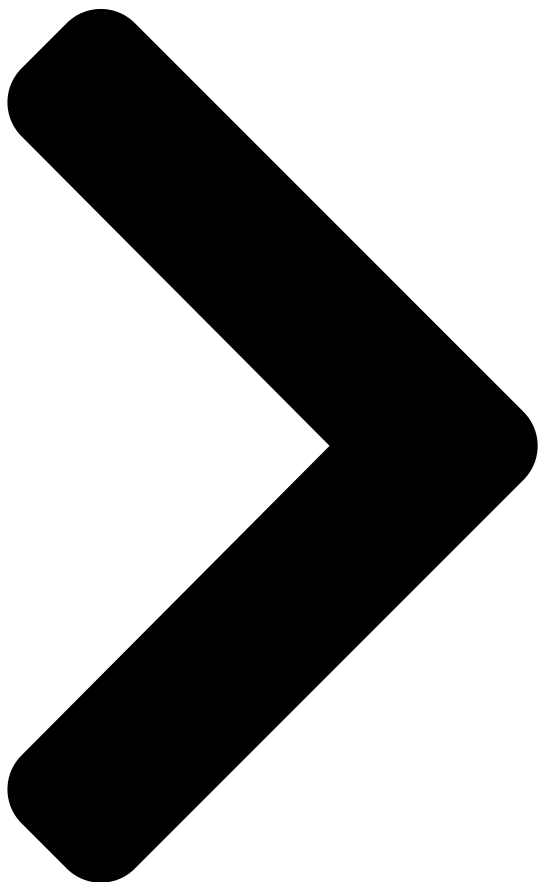

24AF45



J3M60821C(E)_COVER
1
4/20/05, 11:22 AM

TOSHIBA

COM

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 24AF45

[TV Toshiba 27AF45 Service Manual](#)

Color television (55 pages)

[CRT TV Toshiba 14AF43 Owner's Manual](#)

Toshiba tv user's manual (36 pages)

[CRT TV Toshiba 20AF43 Owner's Manual](#)

Color television (72 pages)

[CRT TV Toshiba 24AF44 Specifications](#)

Toshiba flat panel television product brochure (2 pages)

[CRT TV Toshiba 20AF44 Owner's Manual](#)

Toshiba color television owner's manual 20af44, 24af44 (36 pages)

[CRT TV Toshiba 24AF46 Owner's Manual](#)

Toshiba 24af46 tv user guide (64 pages)

[CRT TV Toshiba 24AF46 Specifications](#)

24" (measured diagonally) color tv (2 pages)

[CRT TV Toshiba COLORSTREAM 20AF41 Owner's Manual](#)

Fstpure colorstream color television (32 pages)

[CRT TV Toshiba 20A43 Owner's Manual](#)

Toshiba crt direct view tv owner's manual 20a43 (37 pages)

[CRT TV Toshiba 27A34 Owner's Manual](#)

Toshiba color television owner's manual 27a34 (64 pages)

[CRT TV Toshiba 27A50 Owner's Manual](#)

Colorstream color television (38 pages)

[CRT TV Toshiba 27AF44 Owner's Manual](#)

Fstpure colorstream color television (36 pages)

[CRT TV Toshiba 27AF53 Owner's Manual](#)

Fstpure colorstream color television (76 pages)

[CRT TV Toshiba 26AF45C Owner's Manual](#)

Toshiba owner manual color television 26af45c (36 pages)

[CRT TV Toshiba 27AF62 Owner's Manual](#)

Colorstream color television (41 pages)

[CRT TV Toshiba 29VH36/37 Owner's Manual](#)

Toshiba crt television user manual (16 pages)

Summary of Contents for Toshiba 24AF45

[Page 1](#) 24AF45 J3M60821C(E)_COVER 4/20/05, 11:22 AM...

[Page 2: Important Safety Information](#)

Dear Customer, Thank you for purchasing this Toshiba TV. This manual will help you use the many exciting features of your new TV. Before operating the TV, please read this manual completely, and keep it nearby for future reference. Safety Precautions...

[Page 3: Important Safety Instructions](#)

Important Safety Instructions 1) Read these instructions. 2) Keep these instructions. 3) Heed all

warnings. 4) Follow all instructions. 5) Do not use this apparatus near water. 6) Clean only with a dry cloth. 7) Do not block any ventilation openings.

[Page 4](#) Care For better performance and safer operation of your TOSHIBA TV, follow these recommendations and precautions: 27) Always sit approximately 10–25 feet away from the TV and as directly in front of it as possible. The picture can appear dull if you sit too far to the left or right of the TV, or if sunlight or room lights reflect on the screen.

[Page 5: Table Of Contents](#)

Important Safety Information ... 2-4 Welcome to Toshiba... 6 Exploring your new TV ... 6
Selecting a location for the TV ... 6 Connecting your TV ... 7 Connecting a VCR ... 7 Connecting a
cable converter box ... 8 Connecting a DVD player/satellite receiver and a VCR ...

[Page 6: Welcome To Toshiba](#)

Congratulations! You have purchased one of the finest color TVs on the market. The goal of this manual is to guide you through setting up and operating your Toshiba TV as quickly as possible. You may need to purchase other audio or video cables to connect your equipment.

[Page 7: Connecting Your Tv](#)

Connecting your TV • A coaxial cable is the standard cable that comes in from your antenna or cable converter box. Coaxial cables use “F” connectors. • Standard A/V (audio/video) cables are usually color coded according to use: yellow for video and red and white for audio. The red audio cable is for the stereo right channel, and the white audio cable is for the stereo left (or mono) channel.

[Page 8: Connecting A Cable Converter Box](#)

Connecting a cable converter box This television has an extended tuning range and can tune most cable channels without using a cable company supplied converter box. Some cable companies offer “premium pay channels” in which the signal is scrambled. Descrambling these signals for normal viewing requires the use of a descrambler device, which is generally provided by the cable company.

[Page 9: Connecting A Dvd Player/Satellite Receiver And A Vcr](#)

Your TV is capable of using ColorStream (component video). Connecting your TV to a component video compatible DVD player, such as a Toshiba DVD player with ColorStream greatly enhance picture quality and performance. DVD player with ColorStream...

[Page 10: Connecting Two Vcrs](#)

Connecting two VCRs This connection allows you to record (dub/edit) from one VCR to another VCR. You will also be able to record from one TV channel while watching another channel. Stereo VCR / Playback To antenna IN from ANT OUT to TV CH 3 CH 4...

[Page 11: Using The Remote Control](#)

With the remote control, you can operate your TV, most VCR and DVD player models, and cable TV converters together, even if they are different brands. If you will be using your TV with a Toshiba VCR or DVD player, your remote control is already programmed and ready to use.

[Page 12: Programming The Remote Control To Operate Your Other Devices](#)

This remote control is pre-programmed to operate Toshiba VCRs and DVD players. To control VCRs, DVD players, or cable converters other than Toshiba models, you must follow the steps below to program your remote control. 1. While holding down the CODE button, press the button for the device you want to control (VCR, DVD, or CABLE).

[Page 13: Vcr, Dvd Player, And Cable Tv Converter Codes](#)

08, 14, 16, 19, 31, 49 Sony 17, 32, 37 Sylvania 07, 14, 27 Symphonic Tashiko Tatung Teac 02, 31 Teknika Toshiba 05, 15 XR1000 Vector Research 04, 18 Yamaha 02, 18 Zenith 01, 24, 25, 29, 37 01,06 Saba...

[Page 14: Learning About The Remote Control](#)

Learning about the remote control POWER turns the TV on and off SLEEP programs the TV to turn off at a set time (page 28) TV/VIDEO selects the video input source (page 27) CH + / - cycles through programmed channels (page 16) TV/VCR/CABLE/DVD select TV, VCR, Cable, or DVD mode (page 11) CHANNEL NUMBERS...

[Page 15: Setting Up Your Tv](#)

Setting up your TV After you have installed the batteries and programmed the remote control, you need to set some preferences on the TV using the menu system. You can access the menu system with the buttons on the remote control. •...

[Page 16: Adding Channels To The Tv's Memory](#)

Adding channels to the TV's memory Your TV will stop on specific channels that are stored in the TV's channel memory when you press Channel + or -. Use the steps below to set all active channels in your area automatically. Programming channels automatically Your TV can automatically detect all active channels and store them in its memory.

[Page 17: Using The Tv's Features](#)

Using the TV's features Adjusting the channel settings Switching between two channels You can switch between two channels without entering an actual channel number each time. To switch between two channels: 1. Select the first channel you want to view. 2.

[Page 18: Using Thev-Chip \(Parental Control\) Feature \(U.s. V-Chip System Only\)](#)

To clear your favorite channels: 1. Select a channel you want to clear. 2. Press MENU, then press 3. Press L or M to highlight FAVORITE CH. 4. Press to display the FAVORITE CH menu. SET/CLEAR will be highlighted. PICTURE AUDIO SETUP OPTION FAVORITE CH : CH 012...

[Page 19: Blocking Programs By Ratings](#)

3. Press to display the V-CHIP menu. PICTURE AUDIO SETUP OPTION V-CHIP BLOCKING RESET PIN CODE SELECT [0-9] ENTER EXIT 4. Use the Channel Number buttons (0-9) to enter your PIN code. If you are accessing the V-Chip menus for the first time, select a four-digit number to be your PIN code.

[Page 20: Mpaas Ratings](#)

MPAA Ratings For adults only. NC17 Not intended for anyone 17 or under. Restricted. Under 17 requires an accompanying parent or adult guardian. PG13 Parents strongly cautioned. Some material may be inappropriate for children under 13. Parental guidance suggested. Some material may not be appropriate for children.

[Page 21](#) To use the V-Chip to block programs by rating: 1. Press MENU, then press 2. Press L or M to highlight V-CHIP. 3. Press to display the V-CHIP menu. 4. Use the Channel Number buttons (0-9) to enter your PIN code. If you are accessing the V-Chip menus for the first time, select a four-digit number to be your PIN code.

[Page 22: Blocking Unrated Movies Or Programs](#)

Blocking unrated movies or programs Some movies and programs are not rated. You can block these movies and programs using the V-Chip. To block unrated movies or programs: 1. Press MENU, then press 2. Press L or M to highlight V-CHIP. 3.

[Page 23: Locking Video Input](#)

To unlock channels: 1. Press MENU, then press 2. Press L or M to highlight LOCK and then press the LOCK menu. 3. Use the Channel Number buttons (0-9) to enter your PIN code, then press ENTER. The LOCK menu appears. 4.

[Page 24: Labeling Channels](#)

Labeling channels Channel labels appear over the channel number display each time you turn on the TV, select a channel, or press the Recall button. You can choose any four characters to identify a channel. To create channel labels: 1. Select a channel you want to label. 2.

[Page 25: Setting The Clock](#)

Setting the clock You must set the clock before you can program the ON/OFF timer. To set the clock: (Example: 8:30 AM) 1. Press MENU, then press 2. Press L or M to highlight ON/OFF TIMER. PICTURE AUDIO SETUP OPTION LANGUAGE ENGLISH CH LABEL...

[Page 26: Setting The Off Timer](#)

5. Press L or M to set the desired hour, then press PICTURE AUDIO SETUP OPTION ON/OFF TIMER CLOCK 12:00 AM ON TIMER 7:00 AM CH 001 CLEAR OFF TIMER 12:00 AM CLEAR SELECT ADJUST EXIT 6. Set the desired minutes and channel, as in step 5. 7.

[Page 27: Adjusting The Picture Quality](#)

Adjusting the picture quality You can adjust the picture quality to your personal preferences, including the contrast, brightness, color, tint, and sharpness. The qualities you choose will be stored automatically in your TV's memory so you can recall them at any time. To adjust the picture quality: 1.

[Page 28: Setting The Sleep Timer](#)

Setting the sleep timer You can set the TV so it turns off automatically. To set the sleep timer: Repeatedly press SLEEP on the remote control to set the length of time until the TV turns off. The clock will count down 10 minutes for each press of the SLEEP button (120, 110, ...10, 0).

[Page 29: Adjusting The Sound](#)

Adjusting the sound Muting the sound Press MUTE to temporarily turn off the sound. While the sound is off, the screen will display the word MUTE in the lower right-hand corner. To restore the sound, press MUTE again. Selecting stereo/SAP broadcasts You can listen to high-fidelity stereo sound with the Multi-channel TV Sound (MTS) feature.

[Page 30: Adjusting The Sound Quality](#)

Adjusting the sound quality You can change the sound quality of your TV by adjusting the bass, treble, and balance. To adjust the sound quality: 1. Press MENU, then press PICTURE AUDIO SETUP OPTION BASS TREBLE BALANCE SURROUND STABLE SOUND SELECT ADJUST 2.

[Page 31: Using The Surround Sound Feature](#)

Using the surround sound feature The surround sound feature expands the audio listening field wider and deeper to create exceptional sound quality from the TV's speakers. The feature uses stereo signals from a TV broadcast or video input. To turn on the surround sound feature: 1.

[Page 32: Appendix](#)

Appendix Troubleshooting Before calling a service technician, please check the following table for a possible cause of the problem and some solutions. Problem TV will not turn on No picture, no sound No sound, picture OK Poor sound, picture OK Poor picture, sound OK Poor reception of broadcast channels Cannot receive above channel 13...

[Page 33: Specifications](#)

Specifications • This model complies with the specifications below. • Design and specifications are subject to change without notice. • This model may not be compatible with features and/or specifications that may be added in the future. Picture Tube 24 Inch (600 mm diagonal) (Screen size is approximate.) Television system NTSC standard Channel coverage...

[Page 34: Limited United States Warranty](#)

For 24" FST PURE Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS TELEVISION AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

[Page 35](#) MEMO J3M60821B(E)_P29-BACK 02/02/2005, 8:38 AM...

[Page 36](#) National Service Division ColorStream ® , FST Pure ® and StableSound ® are registered trademarks of Toshiba America Consumer Products, L.L.C. GameTimer is a trademark

of Toshiba America Consumer Products, L.L.C. PRINTED IN THAILAND J3M60821B(E)_P29-BACK
02/02/2005, 8:38 AM...