Important Safety Instructions -Toshiba 32HF72 Owner's Manual

Colorstream color television

```
2
3
Table Of Contents
5
6
7
8
9
10
11
12
13
14
15
16
17
```

Table of Contents









Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with

the manufacturer's instructions.

8) Do not install near any heat

sources such as radiators,

heat registers, stoves, or other apparatus (including amplifiers)







that produce heat.

9) Do not defeat the safety purpose of the polarized or

grounding type plug. A polarized plug has two blades

with one wider than the other. A grounding type plug has

two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



CAUTION: To reduce the risk of electric shock, do not

use the polarized plug with an extension cord, receptacle, or other outlet unless the blades can be inserted completely to prevent blade exposure.

10) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and

 
the point where it exits the apparatus.



12) Use only with the cart, stand, tripod,

bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during



14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has

been spilled or objects have fallen into

the apparatus, the apparat exposed to rain or moisture, does not operate normally, or has been dropped.



Installation

Follow these recommendations and precautions and heed all warnings when installing your TV:

15) Never modify this equipment. Changes or modifications may void: a) the warranty, and b) the user's authority to operate this equipment under the rules of the Federal Communications Commission.

16)

an unstable cart, stand, or table. The TV may fall, causing serious personal injury, death, or serious damage to the TV. 17) Never place or store the TV in direct sunlight; hot, humid areas; areas subject to excessive dust or vibration; or locations with temperatures at or below 41°F (5°C).













18) Always place the TV on the floor or a sturdy, level, stable surface that Wide plug can support the weight of the unit. 19) Never place items such as vases,

 
- 19) Never place items such as vases, aquariums, or candles on top of the TV.
- 20) Never block or cover the slots or openings in the TV cabinet back, bottom, and sides. Never place the TV:
- on a bed, sof<u>a, rug, or similar</u> surface;
- too close to drapes, curtains, or walls; or
- in a confined space such as a bookcase, built-in cabinet, or any other place with poor ventilation.

The slots and openings are provided to protect the TV from overheating and to help maintain reliable operation of the TV.

21) Never allow anything to rest on or roll over the power cord, and never place the TV where the power cord is subject to wear or abuse.

22) Never overload wall outlets and extension cords.

QUALIFIED SERVICE TECHNICIAN 05/02.2











Previous Page Next Page

Quick Links:					
Exploring Your New Tv					
Introduction					
Connecting Your Tv					
Connecting a DVD Player with Colorstream					
Specifications					
Troubleshooting					

Related Manuals for Toshiba 32HF72

TV Toshiba 32HF72 Service Manual

N2ps chassis (111 pages)

CRT TV Toshiba N2PS CHASSIS 32HF72 Service Manual

Toshiba crt television user manual (111 pages)

TV Toshiba 32HF72 Owner's Manual

(55 pages)

TV Toshiba 36HF72 Owner's Manual

(47 pages)

TV Toshiba 36HFX72 Service Manual

(109 pages)

CRT TV Toshiba 32HF73 Owner's Manual

Colorstream color television (59 pages)

CRT TV Toshiba 32HF73 36HF73 Owner's Manual

Toshiba owner's manual color television 32hf73 36hf73 (59 pages)

CRT TV Toshiba 32AF53 Owner's Manual

Colorstream color television (48 pages)

CRT TV Toshiba 27AF41 Owner's Manual

Colorstream color television (38 pages)

CRT TV Toshiba 27AF62 Owner's Manual

Colorstream color television (41 pages)

CRT TV Toshiba 32A14 Owner's Manual

Colorstream color television (72 pages)

CRT TV Toshiba 32A41 Owner's Manual

Colorstream color television (35 pages)

CRT TV Toshiba 32A43 Owner's Manual

Colorstream color television (36 pages)

CRT TV Toshiba 32AF45 Owner's Manual

Fstpure colorstream color television (36 pages)

CRT TV Toshiba 32AX60 Owner's Manual

Toshiba owner's manual color television 32ax60, 36ax60 (44 pages)

CRT TV Toshiba 32DF46 Owner's Manual

Fstpure colorstream color television (76 pages)

Related Content for Toshiba 32HF72

34HFX85 Important Safety Instructions

Toshiba 34HFX85

34HF85C Important Safety Instructions

Toshiba 34HF85C

34HF83 Important Safety Instructions

Toshiba 34HF83

34HF85 Important Safety Instructions

Toshiba 34HF85

32HF73 Important Safety Instructions

Toshiba 32HF73

32DF46 Important Safety Instructions

Toshiba 32DF46

32AFX62 Important Safety Instructions

Toshiba 32AFX62

32AX60 Important Safety Instructions

Toshiba 32AX60

This manual is also suitable for:

36hf72