



# Warnings And Messages Displayed On Lcd Monitor - Toshiba PDR PDR- M4 Instruction Manual

Digital still camera



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217  
218



219  
220  
221  
222



•

[Table of Contents](#)


- 

Troubleshooting

•

## Bookmarks

Available languages

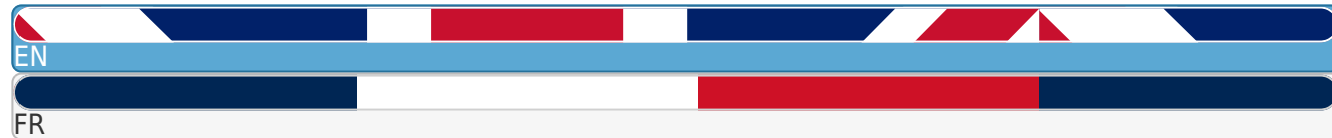





# Warnings and Messages Displayed on LCD Monitor

The following warnings, messages and icons are displayed on the LCD monitor and the status display.

LCD monitor

NO CARD			
CARD FULL			
NO IMAGE			
LID OPEN			
PLEASE CLOSE LID			
CARD NOT INITIALIZED			
CARD ERROR			
PROTECTED CARD			
FRAME ERROR			
UNMATCHED DATA			
FILE number FULL			
PROTECTI			
AF			
Display			
Status display			
/			
(Flashing)			
Flashing (photography mode)			
Nothing displayed (playback mode)			
Flashing (photography mode)			
Number of image display 0			
- 103 -			
Meaning			
Remaining battery power half or less			
No battery power left			
No SmartMedia is loaded			
SmartMedia is loaded incorrectly			
No more space on the SmartMedia.			
Recording is not possible.			
Nothing is recorded to the SmartMedia.			
The SmartMedia cover is open.			
The SmartMedia cover must be closed.			
The SmartMedia is not formatted. (A message prompting you to format the SmartMedia is displayed.)			
The SmartMedia is damaged.			
The SmartMedia format is incorrect.			
The SmartMedia is write-protected.			
An attempt was made to playback incorrectly recorded data.			
An attempt was made to playback a frame not recorded on this camera.			

The frame number has reached 99-9999.

Poor lighting conditions. Image will be vulnerable to vibrations.

An attempt was made to erase a protected image.

The AF (auto focus) cannot work effectively.

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)



1  
...  
104  
105  
106  
107

## Chapters

English 6

Français 116

## Related Manuals for Toshiba PDR PDR-M4

### [Digital Camera Toshiba PDR-M4 Software Manual](#)

Digital still camera (82 pages)

### [Digital Camera Toshiba PDR-T10 Instruction Manual](#)

Toshiba pdr-t10 digital still camera instruction manual (58 pages)

### [Digital Camera Toshiba PDR-T10 Instruction Manual](#)

(58 pages)

### [Digital Camera Toshiba PDR-T20 Instruction Manual](#)

Digital still camera (70 pages)

### [Digital Camera Toshiba PDR-3300 Software Manual](#)

Toshiba pdr-3300: software manual (29 pages)

### [Digital Camera Toshiba PDR-4300 Software Manual](#)

Toshiba pdr-4300: software manual (30 pages)

### [Digital Camera Toshiba PDR-4300 Instruction Manual](#)

Toshiba pdr-4300: owners manual (137 pages)

### [Digital Camera Toshiba PDR-M25 Instruction Manual](#)

Toshiba pdr-m25: software manual (38 pages)

### [Digital Camera Toshiba PDR PDR-M70 Instruction Manual](#)

Digital still camera (142 pages)

### [Digital Camera Toshiba PDR-M60 Instruction Manual](#)

Toshiba digital still camera pdr-m60 instruction manual (316 pages)

### [Digital Camera Toshiba PDR-M60 Service Manual](#)

(24 pages)

### [Digital Camera Toshiba PDR-M81 Instruction Manual](#)

Digital still camera (142 pages)

### [Digital Camera Toshiba PDR-M81 Software Manual](#)

Toshiba pdr-m81: software manual (50 pages)

### [Digital Camera Toshiba PDR-5 Instruction Manual](#)

Toshiba pdr-5: owner manual (44 pages)

### [Digital Camera Toshiba PDR-T30 Instruction Manual](#)

Toshiba pdr-t30: owner manual (72 pages)

### [Digital Camera Toshiba PDR-M25 Service Manual](#)

Digital still camera (25 pages)

## Related Content for Toshiba PDR PDR-M4

### [PDR-M11 Warnings And Messages Displayed On Lcd Monitor](#)

Toshiba PDR-M11

### [PDR-M61 Warnings And Messages Displayed On Lcd Monitor](#)

Toshiba PDR-M61

### [PDR-M5 Warnings And Messages Displayed On Lcd Monitor](#)

Toshiba PDR-M5

[PDR PDR-M70 Warnings And Messages Displayed On Lcd Monitor](#)

Toshiba PDR PDR-M70

[PDR-2300 Messages Displayed On The Lcd Monitor](#)

Toshiba PDR-2300

[PDR-3310 Lcd Monitor Information](#)

Toshiba PDR-3310

[PDR-T30 Lcd Monitor](#)

Toshiba PDR-T30

[PDR-M1 Adjusting The Lcd Monitor Brightness](#)

Toshiba PDR-M1

This manual is also suitable for:

[Pdr-m4](#)