TOSHIBA

Toshiba E-2-15 ESE-R Owner's Manual

Toshiba dvd player owner's manual

```
2
3
4
5
6
7
8
9
Table Of Contents
10
11
12
13
```

Table of Contents



Download this manual	Quick Links	



Introduction

SAFETY PRECAUTIONS

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

CAUTION:

This Digital Video Disc Player employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for

future reference. Should the unit require maintenance, contact an authorized service location.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.

Visible and invisible laser radiation when open and interlocks defeated.

DO NOT STARE INTO BEAM.

CLASS 1

LASER PRODUCT

In the spaces provided below, record the Model and Serial No. located on the rear panel of your DVD video player.	
Model No.	
Retain this information for future reference.	
The following information applies only to the model for U.K.	
If the socket outlets in your home are not suitable for the plug supplied with this unit,	
the plug must be cut off and an appropriate one fitted.	
The plug severed from this mains lead must be destroyed as it is hazardous if	
inserted into a live socket.	
IMPORTANT	
The wires in this mains lead are coloured accordance with the following code:	
BLUE: NEUTRAL	
BROWN: LIVE	
As the colours of the wires in the mains lead of this unit may not correspond with	
the coloured markin gs ident ifying the terminals in your plug, proceed as follows:	
The wire that is coloured blue must be connected to the terminal in the plug which is marked with the letter N or coloured black.	
The wire that is coloured brown must be connected to the terminal which is marked	
with the Letter L or coloured red.	
Do not connect either wire to the earth terminal which is marked by the letter E or	
by the safety earth symbol	
Use a 5A fuse which is approved by ASTA or BSI to BS1362.	
Always replace the fuse cover after changing the fuse.	
2	
E-2-15 ESE-R.pmd	
Serial No.	
General Information	
or coloured green or green-and-yellow.	
2	
3/10/2006, 11:19 AM	
Table of Contents	





Related Manuals for Toshiba E-2-15 ESE-R

DVD Player Toshiba E-1-360E Owner's Manual

Toshiba dvd player owner's manual (1 page)

DVD Player Toshiba HD-E1KE Owner's Manual

Toshiba owner manual hd dvd player hd-e1ke (72 pages)

DVD Player Toshiba HD-E1KE Service Manual

Toshiba hd-e1ke hd dvd player service manual (32 pages)

DVD Player Toshiba HD-A30 Owner's Manual

Hd dvd player (48 pages)

DVD Player TOSHIBA SD-370EKE Owner's Manual

Dvd video player (38 pages)

DVD Player Toshiba HD-XE1 Owner's Manual

Toshiba hd dvd player owner's manual hd-xe1 (76 pages)

DVD Player Toshiba HD-EP30KB Owner's Manual

Toshiba hd dvd player owner's manual (40 pages)

DVD Player Toshiba SDV398KC Owner's Manual

Dvd video player / video cassette recorder (36 pages)

DVD Player Toshiba SD-3750 Owner's Manual

(66 pages)

DVD Player Toshiba SD-3750 Owner's Manual

Toshiba dvd video player sd-3750, sd-k700 owner's manual (66 pages)

DVD Player Toshiba SD-6100KU2 Owner's Manual

Sd-6100ku2 user's guide (40 pages)

DVD Player Toshiba SD-K615 Owner's Manual

Toshiba dvd player owner's manual sd-k615 (30 pages)

DVD Player Toshiba SD-K220U Service Manual

Dvd video player & video cassette recorder (144 pages)

DVD Player Toshiba SD-4200KU Owner's Manual

Sd-4200ku user's guide (28 pages)

DVD Player Toshiba SD-6100 Specifications

Dvd player with 1080p upconversion (2 pages)

DVD Player Toshiba HD-A3KC Owner's Manual

Hd dvd player (48 pages)

Summary of Contents for Toshiba E-2-15 ESE-R

Page 1: Safety Precautions

Do not connect either wire to the earth terminal which is marked by the letter E or by the safety earth symbol Use a 5A fuse which is approved by ASTA or BSI to BS1362. Always replace the fuse cover after changing the fuse. E-2-15 ESE-R.pmd Serial No. General Information or coloured green or green-and-yellow.

<u>Page 2</u> Location of the required label The rating plate and the safety caution are on the rear of the unit. E-2-15 ESE-R.pmd 3/10/2006, 11:19 AM...

Page 3: Important Safety Instructions

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 8. Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on carpeting. E-2-15 ESE-R.pmd 3/10/2006, 11:19 AM...

Page 4 E-2-15 ESE-R.pmd 3/10/2006, 11:19 AM...

Page 5: Additional Safety Instructions

19. Be sure to use the unit near the wall outlet. If a malfunction occurs, disconnect the plug from the wall outlet at once. 20. The mains plug is used as the disconnect device, the disconnect device shall remain readily operable at any time. E-2-15 ESE-R.pmd 3/10/2006, 11:19 AM...

Page 7: Precautions

(cleaning or parts replacement) be performed every 1,000 hours of use. For further details, contact your nearest consumer electronics dealer. E-2-15 ESE-R.pmd Notes on moisture condensation Moisture condensation damages the DVD video player. Please read the following carefully.

Page 8: Notes On Discs

Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping. E-2-15 ESE-R.pmd Structure of disc contents Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. VIDEO CDs and audio CDs are divided into tracks.

Page 9: Playable Discs

Because of problems and errors that can occur during the creation of DVD and CD software and/or the manufacture of DVD and CD discs, Toshiba cannot assure that this DVD video player will successfully play every disc bearing the DVD and CD logos.

Page 10: Table Of Contents

Locating a title using the top menu \dots 30 Locating a desired section by entering the corresponding number \dots 31 Locating a specific chapter or track \dots 31 E-2-15 ESE-R.pmd Advanced playback Accessing a Specific Location Directly \dots 34 Entering the time counter of the desired location \dots

Page 11: Identification Of Controls

Introduction Identification of Controls See the page in for details. Front panel SKIP buttons HDMI indicator E-2-15 ESE-R.pmd 3/10/2006, 11:19 AM...

Page 12: Rear Panel

• During playback: • During playback: Example Example Some discs may only Some discs may only display chaper numbers. display track numbers. E-2-15 ESE-R.pmd Chapter/Track number Indicator Multifunctional indicator (indicates operating status or messages, etc.) Audio CD OPEN LOAD/CLOSE • During playback:...

Page 13: Remote Control

Return to menu display for VCD (2.0) discs with menu. Use the MENU button to display the menu included on many DVD video discs. To operate a menu, follow the instructions in "Locating a title using the top menu." E-2-15 ESE-R.pmd 3/10/2006, 11:19 AM...

Page 14: Loading Batteries

• If the batteries are dead or if you will not be using the remote control for a long time, remove the batteries to prevent battery acid from leaking into the battery compartment. E-2-15 ESE-

R.pmd Operating with the remote control Point the remote control at the remote sensor and press the buttons.