



 
Toshiba SD-P2000 Owner's Manual

Toshiba dvd player sd-p2000 owner's manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82



•

Table of Contents

-

Bookmarks

--

Quick Links

[1 Power Connection](#)

[2 Connecting to a Tv](#)

[3 Using the Battery Pack](#)

[4 Specifications](#)

[Download this manual](#)



VIDEO
/
AUDIO
DIGITAL VIDEO

TOSHIBA
PORTABLE DVD PLAYER

SD-P2000

OWNER'S MANUAL

© 2002 TOSHIBA CORPORATION
S
GX1C00007110



Introduction

Basic playback

Advanced **TOSHIBA**

playback

Quick control

Function setup

Connections

Others



[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Chapters

[Table of Contents](#) 15

[Table of Contents](#) 49

Related Manuals for Toshiba SD-P2000

[Portable DVD Player Toshiba SDP2000 Specifications](#)

Brochure (2 pages)

[Portable DVD Player Toshiba SD-P2500 Service Manual](#)

(16 pages)

[Portable DVD Player Toshiba SD-P2800 Owner's Manual](#)

Toshiba sd-p2800: user guide (72 pages)

[Portable DVD Player Toshiba SD-P2700 Owner's Manual](#)

Toshiba dvd player owner's manual sd-p2700 (76 pages)

[Portable DVD Player Toshiba SD-P2600 Owner's Manual](#)

Toshiba portable dvd player owner's manual sd-p2600 (96 pages)

[Portable DVD Player Toshiba SD-P2600 Service Manual](#)

(20 pages)

[Portable DVD Player Toshiba SD-P2600 Owner's Manual](#)

(96 pages)

[Portable DVD Player Toshiba SD-P2800SE Service Manual](#)

(25 pages)

[Portable DVD Player Toshiba SD-P2800SE Owner's Manual](#)

Toshiba owner's manual portable dvd player sd-p2800se (72 pages)

[Portable DVD Player Toshiba SD-P2900SR Owner's Manual](#)

Toshiba portable dvd player owner's manual (80 pages)

[Portable DVD Player TOSHIBA SD-P2800SN Owner's Manual](#)

(72 pages)

[Portable DVD Player Toshiba SD-P2900SN Service Manual](#)

(24 pages)

[Portable DVD Player Toshiba SD-P2700-S-TN Service Manual](#)

(24 pages)

[Portable DVD Player Toshiba SD-P2500 Specifications](#)

Toshiba dvd player product brochure (2 pages)

[Portable DVD Player Toshiba SDP63SWE Owner's Manual](#)

Toshiba portable dvd player user manual (76 pages)

[Portable DVD Player Toshiba SDP95S Owner's Manual](#)

Sdp95s user's guide (80 pages)

Summary of Contents for Toshiba SD-P2000

[Page 1](#) VIDEO AUDIO DIGITAL VIDEO PORTABLE DVD PLAYER SD-P2000 OWNER'S MANUAL ©
2002 TOSHIBA CORPORATION GX1C00007110 Introduction Basic playback Advanced playback
Quick control Function setup Connections Others...

[Page 2: Introduction](#)

Operation with non-compliant peripherals or peripherals not recommended by Toshiba is likely to result in interference to radio and TV reception. Changes or modifications made to this equipment, not expressly approved by Toshiba, or parties authorized by Toshiba, could void the user's authority to operate the equipment.

[Page 3](#) Location of the required label...

[Page 4: Important Safety Instructions](#)

Introduction IMPORTANT SAFETY INSTRUCTIONS CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE. This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard.

[Page 5](#) 7. Power-Cord Protection Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product. 8.

[Page 6](#) If you ever detect rust, the emission of an extraordinary odor, excessive heat or anything unusual of the battery pack, do not use it. Take it to an authorized Toshiba service provider.

[Page 7](#) g) Keep the battery pack away from heat or fire, if you detect the emission of an extraordinary odor or leakage of alkaline solution or other electrolytic substance. h) Never dispose of used battery packs with other ordinary solid wastes, since they contain toxic substances.

[Page 8](#) Introduction IMPORTANT SAFETY INSTRUCTIONS 24. Coin-shaped Battery a) Keep coin-shaped batteries out of children's reach. Be careful ingest internally, especially by children, as doing so may cause poisoning. b) Do not load a battery into the remote control with the wrong side out. c) Do not charge, heat, open, or short-circuit the batteries.

[Page 9: Precautions](#)

Precautions Notes on handling Do not shock the LCD panel. It may cause unit damage and malfunction. When shipping the player, the original shipping carton and packing materials come in handy. For maximum protection, repack the unit as it was originally packaged at the factory.

[Page 10: Notes And Information](#)

Introduction Notes and Information Structure of disc contents Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. DVD audio discs are divided into groups, and the groups are sub-divided into tracks. VIDEO CDs/audio CDs are divided into tracks.

[Page 11: Notes On Copyright](#)

Notes on copyright It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission. DVD video discs are copy protected, and any recordings made from these discs will be distorted. This product incorporates copyright protection technology that is protected by method claims of certain U.S.

[Page 12: Playable Discs](#)

Introduction Notes and Information (continued) About this owner's manual This owner's manual explains the basic instructions of this player. Some DVD video discs are produced in a manner that allows specific or limited operation during playback. As such, the player may not respond to all operating commands.

[Page 13](#) Exemptions Toshiba Corporation is not liable for any damage caused by fire, earthquake, use by a third person, accidents, owner's intentional or unintentional misuse, or uses in other improper conditions. Toshiba Corporation is not liable for incidental damages (such as profit loss or interruption in business, etc.) caused by use or misuse of this...

[Page 15: Table Of Contents](#)

Table of Contents Introduction SAFETY PRECAUTIONS ... 2 IMPORTANT SAFETY INSTRUCTIONS ... 4 Precautions ... 9 Notes and Information ... 10 Notes on region numbers ... 12 Table of Contents... 15 Identification of Controls ... 16 Main unit ... 16 Side view ...

[Page 16: Identification Of Controls](#)

Introduction Identification of Controls See the page in for details. Main unit Slide this switch to the right to open the top cover. Disc cover Disc cover open button Top cover open switch Remote sensor POWER/CHG (Power/Charge) indicator QUICK button NAVI button AV SOURCE button TOP MENU button...

[Page 17: Side View](#)

Side view Rear Side AV IN AV OUT COMPONENT VIDEO COMPONENT VIDEO connector AV OUT jack AV IN jack VOLUME Volume control Headphone jack 1 BATTERY S VIDEO BITSTREAM/PCM Battery pack connector cover BITSTREAM/PCM jack S VIDEO jack Headphone jack 2 DC IN 12V DC IN jack...

[Page 18: Remote Control](#)

Introduction Identification of Controls (continued) The instructions in this manual describe the functions of the remote control. See the page in Remote control MENU button (see below) TOP MENU button SKIP button 27 31 ENTER button Direction buttons PAGE - button REV button SLOW button PAUSE/STEP button...

[Page 19: Loading A Battery](#)

Loading a battery While pushing the holder in direction 1 , simultaneously slide it out in direction 2 Backside Place a coin-shaped battery (CR2025) with the side up on the holder. Keep the holder horizontal so that the battery does not fall through. Push the holder back into its receptacle.

[Page 20: Power Connection](#)

Introduction Power Connection Connect the supplied AC adapter to power the player. For outdoor use, the battery pack (supplied) is also available. When using the battery pack, follow the instructions on page Caution • Do not connect the power plug to a power outlet other than that indicated on the label, as this can result in a risk of fire or electric shock.

[Page 21: Basic Playback](#)

About this manual • The numbers indicated by lines on the illustrations correspond to the associated steps of the operation. • Aside from the section “Playing a Disc”, explanations of operations only include illustrations of the corresponding buttons on the remote control. The buttons sharing the same name on the main unit can also be used in the identical manner.

[Page 22: Playing A Disc](#)

Basic playback Playing a Disc This section shows you the basics on how to play a disc. indicates a reference page of this manual. See the page in for details. DVD-V DVD-A Basic playback Preparations • Connect the AC adapter or the battery pack player.

[Page 23: Start Playback](#)

TOP MENU MENU To obtain a higher quality picture Occasionally, some picture noise not usually visible during a normal broadcast may appear on the TV screen while playing a DVD video disc because the high resolution pictures on these discs include a lot of information. While the amount of ENTER noise depends on the TV you use with this player, you should generally reduce the sharpness adjustment on your TV when viewing DVD video discs.

[Page 24](#) Basic playback Playing a Disc (continued) Basic playback (continued) Disc cover open button STOP PLAY To change LCD brightness Press DIMMER on the remote control. 4 pre-selected brightness levels are AV SOURCE DIMMER provided. Note Only 2 brightness levels are available when using the battery pack.

[Page 25](#) LCD Screen/External Screen Selection Press the player MONITOR button. Each time the button is pressed, the MONITOR LCD screen will alternate as below. Normal Vertical inverse External Interlace External Progressive External Interlace: When connected to an Interlaced TV

or monitor. External Progressive: When connected to a Progressively scanned TV or monitor.

[Page 26](#) Basic playback Playing a Disc (continued) Basic playback (continued) Still pictures included on DVD audio discs DVD audio discs may include still pictures, which are classified into two large groups. • Slideshow: Still pictures appear one after another automatically consistent with the disc program.

[Page 27: Variable Speed Playback](#)

Variable Speed Playback You can play discs at various speeds, and resume playback from the location where you stopped playback. DVD-V DVD-A Playing in fast reverse or fast forward directions Press REV or FWD on the remote control during playback. SLOW REV: Fast reverse playback FWD: Fast forward playback...

[Page 28: Playing In Slow-Motion](#)

Basic playback Variable Speed Playback (continued) DVD-V DVD-A Playing in slow-motion Press SLOW while pressing SHIFT during playback. Each time you press the SLOW button, the slow-motion speed SHIFT changes. If you press the SLOW SLOW SLOW during playback, you can view the picture in reverse slow-motion.

[Page 29: Locating A Specific Title, Chapter, Or Track](#)

Locating a Specific Title, Chapter, or Track Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. DVD audio discs are divided into groups, and the groups are sub-divided into tracks. VIDEO CDs and audio CDs are divided into tracks. You can quickly locate any specific title, chapter, group, or track.

[Page 30: Locating A Desired Section By Entering Its Corresponding Number](#)

Basic playback Locating a Specific Title, Chapter, or Track (continued) DVD-V DVD-A Locating a desired section by entering its corresponding number Press T while pressing SHIFT. If you are using a VIDEO CD/audio CD, skip steps 1 and 2. Then at step 3, enter the number for the track you want using the number buttons.

[Page 31: Locating A Specific Chapter Or Track](#)

DVD-V DVD-A Locating a specific chapter or track Press SKIP () repeatedly to display the chapter or track number you want. Playback starts from the selected chapter or track. To locate succeeding chapters or tracks. SKIP Playback starts from the beginning of the SKIP current chapter or track.

[Page 32: Playing An Mp3 Encoded Cd](#)

Customers should also note that permission is required in order to download MP3 files and music from the internet. Toshiba has no right to grant such permission. Permission should always be sought from the copyright owner.

[Page 33: Advanced Playback](#)

Advanced playback Customizing the performance of your player. Accessing a Specific Location Directly Zooming a Picture Selecting a Camera Angle Selecting Subtitles Selecting a Language...

[Page 34: Accessing A Specific Location Directly](#)

Advanced playback Accessing a Specific Location Directly You can access a specific location by entering its corresponding time (hours, minutes, seconds). DVD-V DVD-A Entering the time counter of the desired location Press T while pressing SHIFT several times. You may have to press further SHIFT depending on the disc.

[Page 35: Zooming A Picture](#)

Zooming a Picture You can magnify areas within a picture. DVD-V DVD-A Zooming a picture During normal, slow or still playback, press ZOOM, ZOOM+ or ZOOM-. The player enters the zoom ZOOM playback mode, and a monitor display and icon appear. ZOOM e.g.

[Page 36: Selecting A Camera Angle](#)

Advanced playback Selecting a Camera Angle If a scene was recorded with multiple angles, you can easily change the camera angle of the scene you are viewing. DVD-V DVD-A Changing the camera angle Press ANGLE while playing a scene recorded with multiple angles. ANGLE While playing a scene recorded with multiple angles, the angle icon (...)

[Page 37: Selecting Subtitles](#)

Selecting Subtitles You can display subtitles on the screen and select a subtitle language from those included on the DVD video disc. Good evening! Bonsoir! ¡Buenas tardes! DVD-V DVD-A Selecting a subtitle language Press SUBTITLE during playback. The current subtitle setting is SUBTITLE displayed.

[Page 38: Selecting A Language](#)

Advanced playback Selecting a Language You can select a preferred language and sound recording system from those included on the disc. Good morning! Bonjour! DVD-V DVD-A Selecting a playback audio setting Press AUDIO during playback. AUDIO The current audio setting is displayed.

[Page 39](#) Output sound conversion table (sampling frequency/quantization bit) Sound recording system Discs Dolby Digital 48 kHz/16 bit 48 kHz/20 bit Linear 48 kHz/24 bit video discs 96 kHz/16 bit 96 kHz/20 bit 96 kHz/24 bit MPEG1, MPEG2 VIDEO CDs MPEG1 Linear PCM 44.1 kHz/16 bit Audio CDs 44.1 kHz/16 bit 48 kHz/16 bit...

[Page 41: Quick Control](#)

Quick control Simple use of a single button and the cursor control enables you to direct your playback, without manipulating many actual buttons. Using the Virtual Remote Control - V-REMOTE - Selecting the Playback Function - QUICK - Accessing Features - NAVI -...

[Page 42: Using The Virtual Remote Control](#)

Quick control Using the Virtual Remote Control - V-REMOTE - Pressing 2 buttons simultaneously displays a graphics based on-screen remote control that allows you to control playback as if you were doing it from the actual remote control. DVD-V DVD-A Using the virtual remote control During playback, press V-REMOTE while pressing SHIFT.

[Page 43: Selecting The Playback Function - Quick](#)

Selecting the Playback Function - QUICK - Pressing one button can display a list of playback functions which are relevant to your current playback mode. You can check and modify them from the list. DVD-V DVD-A Selecting the playback function During playback, press QUICK.

[Page 44: Playing In The Selected Mode](#)

Quick control Selecting the Playback Function - QUICK - (continued) Playing in the selected mode Memory playback DVD-V You can combine your favorite titles groups, chapters, or tracks and play them in the order you determine. You can program up to 30 selections into the memory. Select "Memory"...

[Page 45: Repeat Playback](#)

Repeat playback DVD-V DVD-A You can play a specific title, group, chapter, or track repeatedly. Select "Repeat" and press the ENTER button. The on-screen display shown below appears. e.g. Chapter Repeat Title Repeat All Repeat Repeat Off 1 Press to select. ENTER Chapter Repeat DVD-V...

[Page 46](#) Quick control Selecting the Playback Function - QUICK - (continued) Playing in the selected mode A-B Repeat DVD-V You can repeat playback of a specific segment. Select "A-B (Set A)", and at the beginning of the segment (point A) press the ENTER button. The on- screen display shown below appears.

[Page 47](#) 2 Press PLAY. PLAY The player starts random playback. Press the PLAY button within about 5 seconds after you select the random playback mode. To resume normal playback Press CLEAR while pressing SHIFT. CLEAR RETURN SHIFT The quick menu can also be available. Note Some discs may not permit random playback operation.

[Page 48: Accessing Features - Navi](#)

Quick control Accessing Features - NAVI - The NAVI menu provides an icon based display from which you can easily access key playback functions or settings. DVD-V DVD-A NAVI menu items Press NAVI. The NAVI menu appears. SETUP NAVI e.g. DVD-V Press to select icon.

[Page 49](#) Navi menu selections Strobe Viewer Setup Preview Capture Angle Viewer Picture Setting E.A.M. V-Remote Display Closed Caption You can divide a desired scene into stop action frames for careful analysis. You can change the default settings to customize performance to your preference.

[Page 50: Strobe Viewer](#)

Quick control Accessing Features - NAVI - (continued) NAVI menu items Strobe Viewer You can divide a desired scene into stop action frames for careful analysis. After selecting this icon and pressing ENTER, the following on-screen display appears: e.g. Slow Normal >>...

[Page 51: You Can Sample A Scene From A Playback Picture And Transform It](#)

Capture You can sample a scene from a playback picture and transform it into a background picture. After selecting this icon and pressing ENTER, the following on-screen display appears: e.g. Capture Storing Exit 1 Pause the playback at the scenes you wish to store.

[Page 52: Picture Setting](#)

Quick control Accessing Features - NAVI - (continued) NAVI menu items Picture Setting You can fine adjust picture quality and store up to 3 custom picture settings in the memory of the player. After selecting this icon and pressing ENTER, the following on-screen display appears: e.g.

[Page 53](#) E.A.M.: Enhanced Audio Mode You can obtain expansive virtual surround sound effects from just two speakers. Select this icon and press the ENTER button. The on-screen display shown below appears. e.g. 1 Select the sound enhancement by pressing Each time you press the button, the ENTER sound enhancement changes.

[Page 54: Closed Caption](#)

Quick control Accessing Features - NAVI - (continued) NAVI menu items Display You can view information about a disc and its operational status on the TV screen. After selecting this icon and pressing ENTER, the following on-screen display appears: e.g. Title : 1 Chapter : 23 Time : 1:23:45...

[Page 55: Function Setup](#)

Function Setup You can change the default settings to customize performance to your preference. Customizing the Function Settings Table of Languages...

[Page 56: Customizing The Function Settings](#)

Function setup Function setup Customizing the Function Settings You can change the default settings to customize performance to your preference. DVD-V DVD-A Setting procedure Press SETUP while pressing SHIFT during stop. The following on-screen display SHIFT appears. SETUP NAVI TV Shape Progressive 4:3 Output Progressive Conversion Press...

[Page 57](#) Setting Setting TV Shape Progressive 4:3 Output Progressive Conversion PCM Down Sampling Audio Out Select DVD-V Dynamic Range Control Karaoke Vocal On-Screen Language DVD-V Disc Menu Language Audio Language Subtitle Language On-Screen Displays DVD-V DVD-V Background Screen Saver Pause/Still Parental Lock Title/Group Stop Priority Contents Initialize...

[Page 58: Setting Details](#)

Function setup Customizing the Function Settings (continued) Setting details TV Shape Progressive 4:3 Output Progressive Conversion TV Shape DVD-V 4:3 Letterbox: Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture. 4:3 Normal: Select when a standard 4:3 TV is connected.

[Page 59](#) Audio PCM Down Sampling Audio Out Select Bitstream Dynamic Range Control Karaoke Vocal PCM Down Sampling DVD-V DVD-A Make this selection only when you use your audio equipment (e.g. receiver) connecting to the player via the BITSTREAM/PCM (DIGITAL) AUDIO OUT jack. According to performance of your connected receiver, select a sound processing option for playback of a disc that contains high frequency signals (sampling...

[Page 60](#) Function setup Customizing the Function Settings (continued) Setting details Dynamic Range Control Turn on or off a function that makes faint sounds easier to hear even if you lower the volume during late hours playback. Off: Full dynamic range is maintained. On: Dynamic range is reduced.

[Page 61: Subtitle Language](#)

Audio Language DVD-V English: To play sound tracks in English. French: To play sound tracks in French. Spanish: To play sound tracks in Spanish. Others: To make a further choice. After pressing the ENTER button, follow steps 1) - 4) below. 1) Obtain the abbreviation of the preferred language from the list 2) Select the first character by pressing...

[Page 62](#) Function setup Customizing the Function Settings (continued) Setting details On-Screen Displays On Background Screen Saver On-Screen Displays Off: Operational modes (e.g. " displayed. On: Operational modes (e.g. " displayed on-screen. Background DVD-V DVD-A Blue: Blue background. Gray: Gray background. Capture: To use a picture you sampled and stored in the memory using the Capture feature as a background.

[Page 63](#) 1) Press the number buttons to create a personal 4-digit security code, then press the ENTER button. If you make a mistake before pressing the ENTER button, press CLEAR while pressing SHIFT and enter your 4-digit security code again. 2) Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list below.

[Page 64: Pbc Vcd](#)

Function setup Customizing the Function Settings (continued) Setting details Title/Group Stop DVD-V DVD-A Off: The player continues after playback of a title/ group is completed. On: The player stops after playback of a title/group is completed. Off: When playing a VIDEO CD without using the menu.

[Page 65: Table Of Languages](#)

Table of Languages Table of languages and their abbreviations Abbreviation Language -- No alternate language CHI (ZH) Chinese DUT (NL) Dutch ENG (EN) English FRE (FR) French GER (DE) German ITA (IT) Italian JPN (JA) Japanese KOR (KO) Korean MAY (MS) Malay...

[Page 67: Connections](#)

Connections You can connect the player to a TV or audio system. Also, you can connect a battery pack to power the player. Connecting to a TV Connecting to Headphones Viewing Pictures from Connected Video Equipment Connecting to Optional Equipment Using the Battery Pack (sold separately)

[Page 68: Connecting To A Tv](#)

Connections Connecting to a TV Connect the player to your TV. For details of output sound, see Connecting to a TV AV IN AV OUT COMPONENT VIDEO To AV OUT Audio/video cable (supplied) Notes • Refer to the owner's manual of the connected TV as well. •...

[Page 69: Connecting To An Audio System And Tv Equipped With Component Video Inputs](#)

INTERLACED outputs/inputs (ColorStream Some TVs or monitors are equipped with component video inputs. Connecting to these inputs allows you to enjoy higher quality picture playback. Actual labels for component video inputs may vary depending on the TV manufacturer. (ex. Y, R-Y, B-Y or Y, C In some TVs or monitors, the color levels of the playback picture may be reduced slightly or the tint may change.

[Page 70: Connecting To Headphones](#)

Connections Connecting to Headphones You can listen to movies and music privately by connecting headphones. (headphone) jack (not supplied) VOLUME Viewing Pictures From

Connected Video Equipment You can use the LCD of this player to monitor pictures of video equipment connected via the AV IN jack. Press the AV SOURCE button, then switch player mode and external AV input mode.

[Page 71: Connecting To Optional Equipment](#)

Connecting to Optional Equipment You can enjoy high quality dynamic sounds by connecting the player to optional audio equipment. • For connection to your TV, see “Connecting to a TV” 68 69 • For details of output sound, see • This section uses the following reference marks. : Front speaker : Rear speaker : Sub woofer...

[Page 72: Connecting To An Amplifier Equipped With A Dolby Digital Decoder](#)

Connections Connecting to Optional Equipment (continued) Connecting to an amplifier equipped with a Dolby Digital decoder Dolby Digital Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home. You can enjoy motion picture and live concert DVD video discs with this dynamic realistic sound by connecting the player to a 6 channel amplifier equipped with a Dolby Digital decoder or Dolby Digital processor.

[Page 73: Connecting To An Amplifier Equipped With A Dts Decoder](#)

Connecting to an amplifier equipped with a DTS decoder Digital Theater Systems (DTS) DTS is a high quality surround technology used in theaters and now available for home use, on DVD video discs or audio CDs. If you have a DTS decoder or processor, you can obtain the full benefit of 5.1 channel DTS encoded sound tracks on DVD video discs or audio CDs.

[Page 74: Connecting To An Amplifier Equipped With A Digital Audio Input](#)

Connections Connecting to Optional Equipment (continued) Connecting to an amplifier equipped with a digital audio input 2 channel digital stereo You can enjoy the dynamic sound of 2 channel digital stereo by connecting an amplifier equipped with a digital audio input and speaker system (right and left front speakers).

[Page 75: Using The Battery Pack](#)

Using the Battery Pack Warning • Do not use a battery pack other than one specified as it can result in a fire or damage to the unit. • Do not heat, open, or short-circuit the battery pack. Do not throw the battery pack into a fire. Doing so may cause an explosion or a fire.

[Page 76](#) Connections Using the Battery Pack (continued) Detaching the battery pack 1 Turn the player off. 2 Disconnect the AC adapter and the power cord from the player. 3 Slide the battery pack's lock switch in the open direction, then slide the player in the direction of the arrow to remove it.

[Page 77: Others](#)

Others Before Calling Service Personnel Specifications LIMITED WARRANTY PORTABLE DVD PLAYER...

[Page 78: Before Calling Service Personnel](#)

Others Before Calling Service Personnel Check the following guide for the possible cause of a problem before contacting service. Symptoms and correction Symptom Cause No power. • The AC adapter or power plug is disconnected. • The battery pack has been removed. •...

[Page 79: Specifications](#)

Specifications Player / Connectors / Liquid crystal display / Supplied accessories Player Power supply Mass External dimensions Signal system Laser Frequency range Operating conditions Connectors Video output (AV OUT) S video output (S VIDEO) Component video output (COMPONENT VIDEO) Audio output (BITSTREAM/PCM) Audio output (AV OUT) Video input (AV IN) Audio input (AV IN)

[Page 80: Limited Warranty Portable Dvd Player](#)

LIMITED WARRANTY PORTABLE DVD PLAYER Toshiba America Consumer Products, Inc. (“TACP”) and Toshiba Hawaii, Inc. (“THI”) make the following limited warranties. These limited warranties

extend to original consumer purchaser or any person receiving this set as a gift from the original consumer purchaser and to no other purchaser or transferee.

[Page 81](#) Canadian consumers are requested to complete the special Canadian "Warranty Registration Form" enclosed, and forward this completed form with a copy of bill of sale to TOSHIBA OF CANADA to "Register and Validate" their warranty. Product must be purchased from an Authorized Canadian Dealer.

[Page 82](#) Printed in Japan...

This manual is also suitable for:

[P2000 - dvd player - 8.9](#)