

Customizing The Function Settings - Toshiba D-R4SC Owner's Manual

 
Dvd video recorder

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131



•

Table of Contents

-

Bookmarks

--



Function Setup

DVD-RAM DVD-RW

DVD-R

Function Setup

DVD-RAM DVD-RW DVD-R DVD-VIDEO VCD CD

Customizing the function settings

You can change the default settings to customize performance to your preference.

OPEN/CLOSE
DISPLAY FL SELECT DIMMER

Start

You can change the default settings to customize performance to your preference.

SUBTITLE AUDIO/SAP FREEZE

ANGLE

REMAIN REC MODE EXTEND

SETUP

VOL

TIMESLIP

MUTE

EASY

TOP MENU



1 During stop, press SETUP.

SETUP

The following setup display appears.

NAVI
SELECT/
ENTER
INSTANT
REPLAY
QUICK MENU
SKIP REV
STOP
REV
PLAY
REC
SEARCH
ADJUST

T
1
2
3
4
5
6
7
8
9

Notes

- SETUP button can function even during normal playback. However some items may be grayed out and they cannot be selected. In this case, try again after playback is stopped.
- SETUP button does not function during recording, Recorded Title Play, Chase Play or Pause TV modes.

106

DVD-VIDEO
VCD
CD

1

PROGRESSIVE
SETUP
ZOOM

2

CH
INPUT SELECT
MENU
SELECT/
ENTER
TV
DVD
INSTANT

Function Setup

DVD-RAM DVD-RW DVD-R DVD-VIDEO VCD CD

Customizing the function settings

You can change the default settings to customize performance to your preference.



1 During stop, press SETUP.




The following setup display appears.



2 Press ◀/▶ to select the icon that contains a desired item, then ENTER.



For details on each setting, see page 107.
e.g. When "Display settings" is selected, the following display appears.

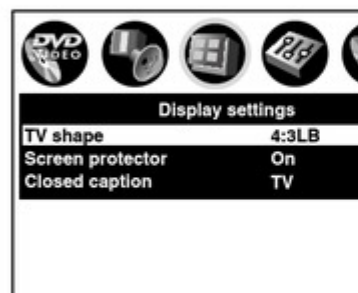

3 Press ▲/▼ to select a desired item, then SELECT/ENTER.



4 Refer to the explanations on page 110, to change the selected item. Press other buttons, then press SELECT/ENTER.

SKIP
SKIP FWD

3

FWD
SELECT/
ENTER
CHP DIVIDE

4

+ 10
0
CLEAR
SELECT/
ENTER

5

SETUP

During stop, press SETUP.

The following setup display appears.

e.g.

DVD player settings
DVD disc menu language
DVD audio language
DVD subtitle language

Press

/

to select the icon of a group that contains a desired item, then press SELECT/ENTER.

For details on each setting, see the next page.

e.g. When "Display settings" is selected:

Display settings
TV shape
Screen protector
Closed caption

Press

/

to select a desired item, then press SELECT/ENTER.

Refer to the explanations on pages beginning from 110, to change the selection by other buttons, then press SELECT/ENTER.

• To select another item in the same group, repeat steps 3 to 4.

Function Setup

DVD-RAM DVD-RW DVD-R DVD-VIDEO VCD CD

Customizing the function settings

You can change the default settings to customize performance to your preference.

1 During stop, press SETUP.



The following setup display appears

e.g.




2 Press ◀/▶ to select the icon that contains a desired item, then press ENTER.



For details on each setting, see

e.g. When "Display settings" is

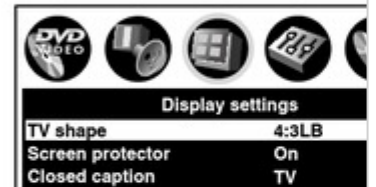

3 Press ▲/▼ to select a desired item, then press SELECT/ENTER.



4 Refer to the explanations on pages beginning from 110, to change the selection by other buttons, then press SE

- To shift to another group, press O button then repeat steps 2 to 4.

Function Setup

The setup display disappears when the setting is completed.

English
English
No subtitle
SETUP
4:3LB
On
TV
SETUP

/
or

Customizing the function settings

You can change the default settings to customize performance to your preference.

[Table of Contents](#)

[Next Page](#)

[1](#)

...

[105](#)

[106](#)

[107](#)

[108](#)

Quick Links:

[Choosing a Disc](#)

[Rear Panel](#)

[Remote Control](#)

[Before Recording](#)

[Recording an External Source](#)

Related Manuals for Toshiba D-R4SC

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (195 pages)

[DVR Toshiba D-R4SU Owner's Manual](#)

(131 pages)

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (53 pages)

[DVD Recorder Toshiba D-R4SU Service Manual](#)

Dvd video recorder (22 pages)

[DVR Toshiba D-KR4 Owner's Manual](#)

Toshiba d-kr4: installation guide (52 pages)

[DVR Toshiba D-R4 Specifications](#)

Digital video recorder (2 pages)

[DVD Recorder Toshiba DR420 Specifications](#)

Dvd recorder with 1080p upconversion (2 pages)

[DVD Recorder Toshiba D-R410 Specification Sheet](#)

Dvd recorder with 1080p upconversion (2 pages)

[DVD Recorder Toshiba D-R400 Owner's Manual](#)

Toshiba dvd video recorder owner's manual (103 pages)

[DVD Recorder Toshiba D-R400 Specifications](#)

Dvd recorder with 1080p upconversion (2 pages)

[DVD Recorder Toshiba DR430 Specifications](#)

Dvd recorder with 1080p upconversion (2 pages)

[DVD Recorder Toshiba DR430KC Quick Manual](#)

Dvd video recorder (2 pages)

[DVD Recorder Toshiba D-R1SU Owner's Manual](#)

Dvd video recorder (144 pages)

[DVD Recorder Toshiba D-R160SB Owner's Manual](#)

Dvd video recorder (67 pages)

[DVD Recorder Toshiba DVR D-R17DTKB Owner's Manual](#)

Dvd video recorder (88 pages)

[DVD Recorder TOSHIBA D-R150SB Owner's Manual](#)

Dvd video recorder (48 pages)

Related Content for Toshiba D-R4SC

[D-R250SB Presetting Channels With The Auto Setup Function](#)

Toshiba D-R250SB

[DVR19DTKB2 Function Indicator Symbols](#)

Toshiba DVR19DTKB2

[W808 Counter Function](#)

Toshiba W808

[RD-85DTSB Main Function Buttons](#)

Toshiba RD-85DTSB

[D-R3 Using The Repeat Function](#)

Toshiba D-R3

[D-VR6KC Recording Function](#)

Toshiba D-VR6KC

[RD-XV47KE Function Indicator Symbols](#)

Toshiba RD-XV47KE

[D-KR10KU Settings For An External Device](#)

Toshiba D-KR10KU

This manual is also suitable for:

D-r4suD-kr4suD-kr4D-r4