

Chapter 6: Using The Tv's Features; Selecting The Video Input Source To View; Labeling The Video Input Sources - Toshiba Regza 26HL67 Owner's Manual

Toshiba integrated high definition lcd television owner's manual 26hl67, 32hl67, 32hl67u, 37hl67, 42hl67

1
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66



-

[Table of Contents](#)

•

Troubleshooting

•

Bookmarks



Selecting the video input source to view

To select the video input source to view:

1

Press + on the remote control or TV control panel.

2

And then either:

- a) Press 0-8; or
- b) Repeatedly press Bb on the remote control and then press T to change the input; or
- c) Repeatedly press on the remote control or control panel to change the input.

The current signal source displays in the top right corner of the Input Selection screen.

Input Selection
0

Selecting the video input source to view

To select the video input source to view:

1

Press + on the remote control or TV control panel.

2

And then either:
a) Press 0-8; or

Labeling the video input source

You can label each video input device you connected to each source. The list of labels:

- -- (default label)
- Audio Receiver
- Cable
- Compact Disc

ANT
 ANT
 1
 Video 1
 2
 Video 2
 3
 ColorStream HD1
 4
 ColorStream HD2
 5
 HDMI 1
 6
 HDMI 2
 7
 HDMI 3
 8
 PC
 0
 -
 8
 /
 INPUT

Chapter 6: Using the TV's features

Selecting the video input source to view


To select the video input source to view:

- 1 Press **INPUT** on the remote control or TV control panel.
- 2 You can label the video input sources according to the specific devices you have connected to the TV (- "Labeling the video input sources" at right).
- 3 Press 0-8, or
- 4 Repeatedly press **▲▼** on the remote control and then press **ENTER** to change the input; or
- 5 Repeatedly press **INPUT** on the remote control or TV control panel to change the input.

The current signal source displays in the top right corner

Chapter 6: Using the TV's features

 ANT
 to Select
 Navigate

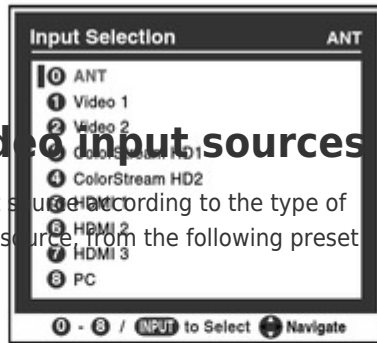

Labeling the video input sources

You can label each video input source according to the type of device you connected to each source. From the following preset list of labels:

-- (default label)

Audio Receiver

Cable

Compact Disc

DTV

DVD

Game Console

HD DVD

Laser Disk

Satellite/DSS

VCR

Video Recorder

Hide (to hide an unused input in the Input Selection screen)

Note: If you select PC in the Input Selection screen, you can

Labeling the video

 
 
You can label each video input device you connected to each source. From the following list of labels:

- -- (default label)
- Audio Receiver
- Cable
- Compact Disc
- DTV
- DVD
- Game Console
- HD DVD
- Laser Disk
- Satellite/DSS
- VCR
- Video Recorder
- Hide (to hide an unused input in the Input Selection screen)

Note: If you select PC in the Input Selection screen, you can choose only "--" or "Hide" as a label.

To label the video input source:

- 1 Press **MENU** and open the **Preferences** menu.
- 2 Highlight **Input Labeling**.
- 3 Press **▲** or **▼** to highlight the label.

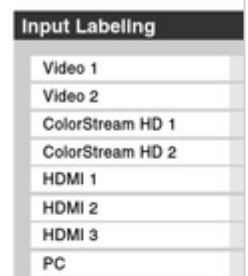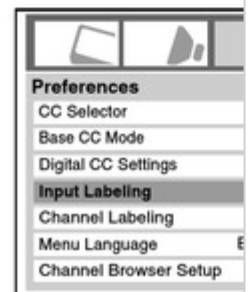

choose only "--" or "Hide" as the label.

To label the video input sources:

1

Press Y and open the Preferences menu.

2

Highlight Input Labeling and press T.

3

Press B or b to highlight the video source you want to label.

Preferences

- CC Selector
- Base CC Mode
- Digital CC Settings

Input Labeling

- Channel Labeling
- Menu Language
- Channel Browser Setup

Input Labeling

- Video 1
- Video 2
- ColorStream HD 1
- ColorStream HD 2
- HDMI 1
- HDMI 2
- HDMI 3
- PC
- Reset
- Off
- Off
- CC1
- CC2
- CC3
- CC4
- English
- T1
- T2
- VCR
- Cable
- Video Recorder
- Hide
- DTV
- Satellite/DSS
- DVD
-

Done

(continued)

35

Selecting the video input source to view

To select the video input source to view:

1 Press **INPUT** on the remote control or TV control panel.

2 And then either:

- a) Press 0-8; or
- b) Repeatedly press **▲▼** on the remote control and then press **ENTER** to change the input; or
- c) Repeatedly press **INPUT** on the remote control or TV control panel to change the input.

The current signal source displays in the top right corner of the **Input Selection** screen.

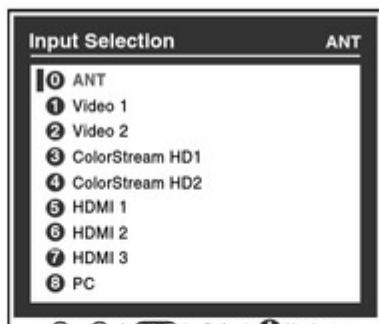 


Table of Contents

Labeling the video

You can label each video input device you connected to each source list of labels:

- -- (default label)
- Audio Receiver
- Cable
- Compact Disc
- DTV
- DVD
- Game Console
- HD DVD
- Laser Disk
- Satellite/DSS
- VCR
- Video Recorder
- Hide (to hide an unused input)

Note: If you select PC in the list, choose only "--" or "Hide" as the label.

To label the video input source

[Previous Page](#)
[Next Page](#)

1
...
32
33
34
35
36
37
38
39

Quick Links:

[Removing Pedestal Stand](#)

[Features of Your New Tv](#)

[Overview of Steps for Installing, Setting...](#)

Related Manuals for Toshiba Regza 26HL67

[LCD TV Toshiba Regza 26HL67 Owner's Manual](#)

Integrated high definition lcd television (75 pages)

[LCD TV Toshiba 26HL47 Owner's Manual](#)

Integrated high definition lcd television (74 pages)

[LCD TV Toshiba REGZA 26HL67 Manuel D'utilisation](#)

Toshiba flat panel television user manual (66 pages)

[LCD TV Toshiba REGZA 26HL67 Owner's Manual](#)

Integrated high definition lcd television (66 pages)