

Changing The On-Screen Display Language; Selecting The Antenna Input - Toshiba 42H82 Owner's Manual

Toshiba owner's manual projectiontelevision

1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59

•


[Table of Contents](#)

•

Troubleshooting

•

Bookmarks

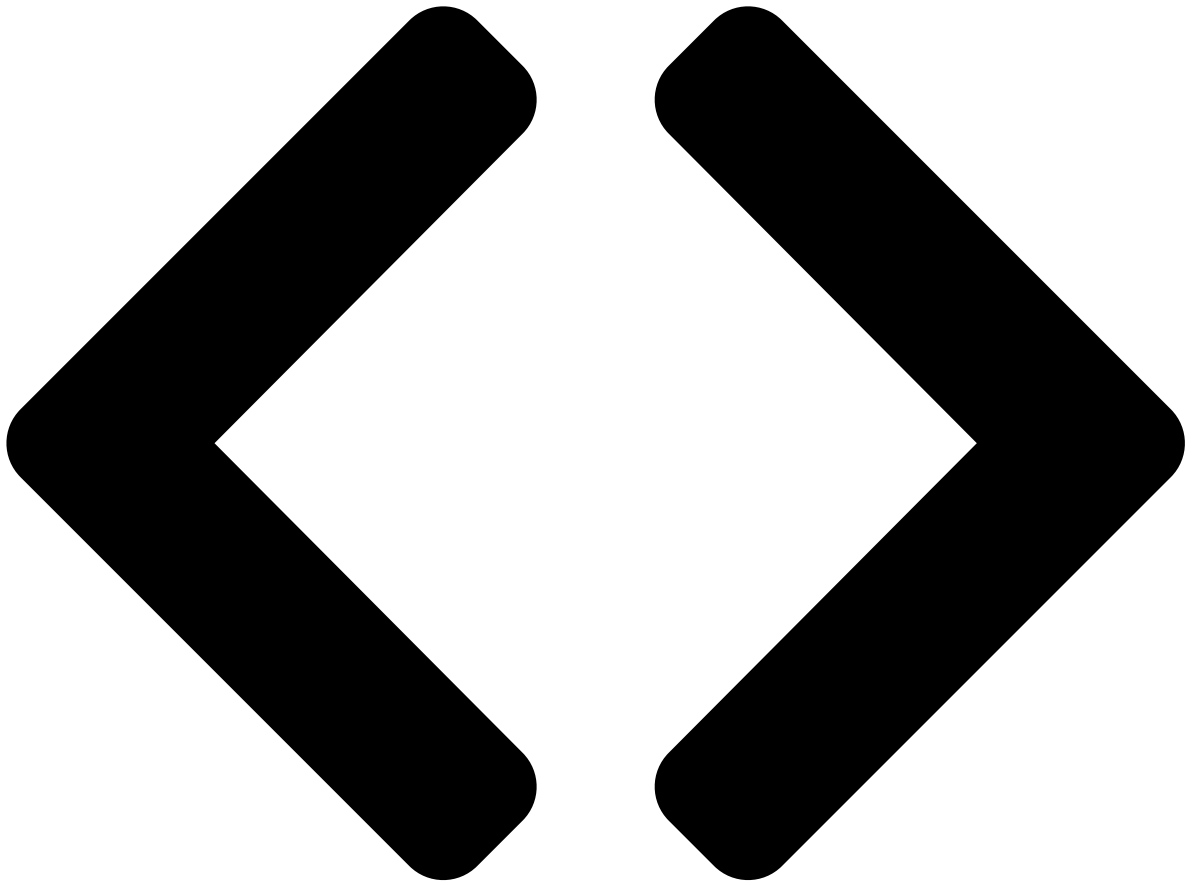

Enlarged version

Changing the on-screen display language

You can choose from three different languages (English, French and Spanish) for the on-screen display of adjustment menus and messages. To select a language:

 
 
1. Press MENU, and then press \leftarrow or \rightarrow until the SET UP menu appears.
2. Press y or z to highlight LANGUAGE.

Changing the on-screen display language

You can choose from three different languages (English, French and Spanish) for the on-screen display of adjustment menus and messages.

To select a language:

1. Press MENU, and then press \leftarrow or \rightarrow until the SET UP menu appears.
2. Press \blacktriangle or \blacktriangledown to highlight LANGUAGE.

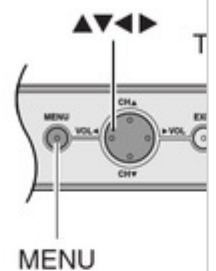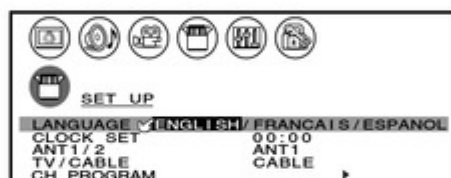

0 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

SET UP
LANGUAGE
ENGL SH
/
FRANCA
CLOCK
SET
00:00
ANT
ANT

1
/ 2
ANT 1
TV
/ CABLE
CABLE
CH
PROGRAM
ADD
/
ERASE
ADD
QUICK CONNECT GUIDE

Changing the on-screen display language

You can choose from three different languages (English, French and Spanish) for the on-screen display of adjustment menus and messages.

To select a language:

1. Press MENU, and then press ◀ or ▶ until the SET UP menu appears.
2. Press ▲ or ▼ to highlight LANGUAGE.

3. Press x or • to highlight your desired language.

2. Press ▲ or ▼ to highlight LANGUAGE.

Selecting the antenna input

You can connect to two different antenna input sources (ANT 1 or ANT 2).

To select the antenna input using the TV/VIDEO button:

1. Press the TV/VIDEO button on the remote control or TV (see illustrations below). The current signal source displays in purple.
2. Continue pressing the TV/VIDEO button to select ANT 1 or

ANT 2.

 
 
3. Press ◀ or ▶ to highlight your desired language.

Selecting the antenna input

You can connect to two different antenna input sources (ANT 1 or ANT 2).

To select the antenna input using the TV/VIDEO button:

1. Press the TV/VIDEO button on the remote control or TV (see illustrations below). The current signal source displays in purple.
2. Continue pressing the TV/VIDEO button to select ANT 1 or ANT 2.

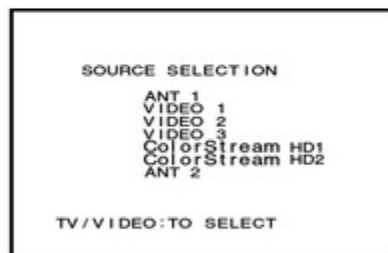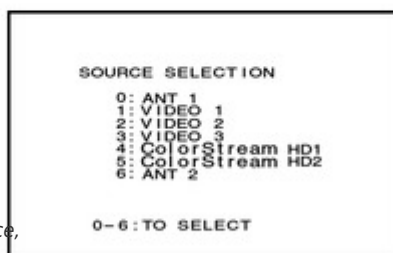


Pressing TV/VIDEO on the remote control displays the current signal source (to change the signal source, press TV/VIDEO again or 0-6)

To select the antenna input using the menu system:



1. Press MENU, and then press x or • to highlight the SET UP menu.
2. Press y or z to highlight ANT 1/2.

To select the antenna input using the menu system:

 1. Press MENU, and then press ◀ or ▶ to highlight the SET UP menu.
2. Press ▲ or ▼ to highlight ANT 1/2.

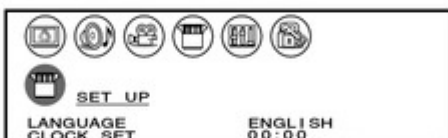

  SET UP
LANGUAGE
ENGLISH
CLOCK
SET
00:00
ANT
1
/ 2
ANT 1

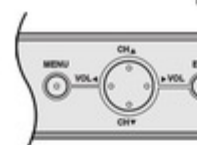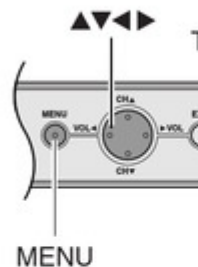

TV
/ CABLE
CABLE
CH
PROGRAM
ADD
/
ERASE
ADD
QUICK CONNECT GUIDE

 
3. Press x or • to highlight either ANT 1 or ANT 2, depending on the antenna terminal you wish to use.

Changing the on-screen display language

You can choose from three different languages (English, French and Spanish) for the on-screen display of adjustment menus and messages.

To select a language:

1. Press MENU, and then press ◀ or ▶ until the SET UP menu appears.
2. Press ▲ or ▼ to highlight LANGUAGE.

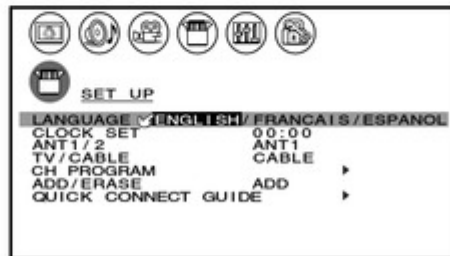


3. Press ◀ or ▶ to highlight your desired language.

Selecting the antenna input


You can connect to two different antenna input sources (ANT 1 or ANT 2).

To select the antenna input using the TV/VIDEO button:

 1. Press the TV/VIDEO button on the remote control or TV (see illustrations below). The current signal source displays in purple.
2. Continue pressing the TV/VIDEO button to select ANT 1 or ANT 2.

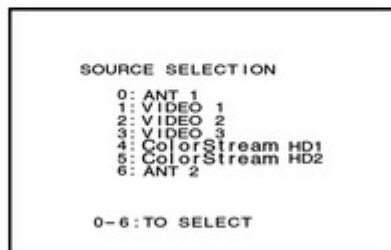



 
Pressing TV/VIDEO on the remote control displays the current signal source (to change the signal source, press TV/VIDEO again or 0-6)

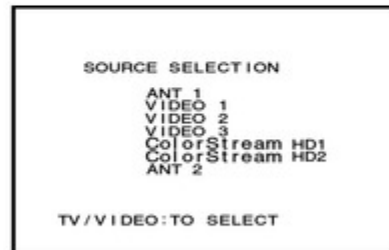

Pressing TV/VIDEO on the TV changes the current signal source

To select the antenna input using the menu system:

   1. Press MENU, and then press ◀ or ▶ to highlight the SET UP menu.
2. Press ▲ or ▼ to highlight ANT 1/2.

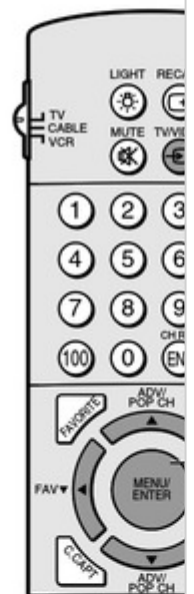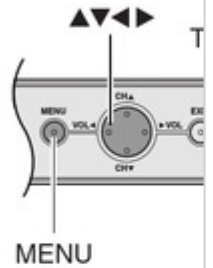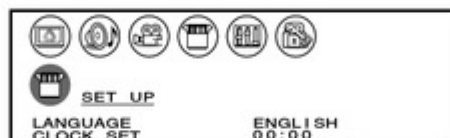

ESPAÑOL

SOURCE
SELECT I ON
ANT 1
V I DEO 1
V I DEO 2

V I DEO

3

C

o o

I

r

S

t r e a m

C

o o

I

r

S

t r e a m

ANT 2

V I / V I DEO TO SELECT

Pressing TV/VIDEO on the TV changes

the current signal source

1

2

3

4

5

6

7

8

9

CH RTN

0

100

ENT

ADV/

POP CH

MENU/

FAV

ENTER

ADV/

yzx •

TV front panel

CH

MENU

EXIT

VOL

CH

MENU

LIGHT

RECALL

POWER

TV

CABLE

MUTE

TV/VIDEO

VCR

1

2

3

4

5

6

7

8

9

POP CH
STOP SOURCE
PLAY PIP
REC
TV/VCR
REW
STILL
LOCATE SWAP
HD1
HD2

TV front panel

CH
MENU
EXIT
VOL
VOL
CH

TV/VIDEO

TV/VIDEO
TOUCH FOCUS
POWER
TIMER

TV/VIDEO

CH
VOL
MENU

FAV
yZX •

FF
TV/VIDEO
TOUCH FOCUS
POWER

21

Changing the on-screen display language

 
You can choose from three different languages (English, French and Spanish) for the on-screen display of adjustment menus and messages.

To select a language:

1. Press MENU, and then press ◀ or ▶ until the SET UP menu appears.
2. Press ▲ or ▼ to highlight LANGUAGE.



[Table of Contents](#)

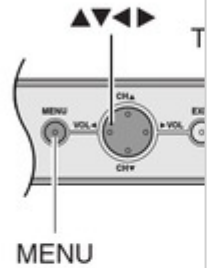

[Previous Page](#)
[Next Page](#)

1
...
18
19
20
21
22
23
24
25

Quick Links:

[Exploring Your New Tv](#)

[Connecting Your Tv](#)

[Connecting a Cable Converter Box](#)

[Specifications](#)

[Troubleshooting](#)

Related Manuals for Toshiba 42H82

[TV Toshiba 42H82 Service Manual](#)

(117 pages)

[Projection TV TOSHIBA 57H82 Owner's Manual](#)

(64 pages)

[TV Toshiba 50H82 Service Manual](#)

Color television (59 pages)

[LCD TV Toshiba 65H82 Supplementary Manual](#)

Toshiba 65h82: supplementary guide (4 pages)

[Projection TV Toshiba 50H82 Specifications](#)

Brochure (2 pages)

[Projection TV Toshiba 65H82 Specifications](#)

Brochure (2 pages)

[Projection TV Toshiba 42H83 Owner's Manual](#)

Toshiba projection television owner's manual 42h83 (59 pages)

[Projection TV Toshiba 42HM66 Owner's Manual](#)

Integrated high definition dlp projection television (36 pages)

[51HC85 Changing The On-Screen Display Language](#)

Toshiba 51HC85

[COLORSTREAM 43A10 Changing The On-Screen Display Language](#)

Toshiba COLORSTREAM 43A10

[ColorStream TP50H50 Changing The On-Screen Display Language](#)

Toshiba ColorStream TP50H50

[46H83 Changing The On-Screen Display Language](#)

Toshiba 46H83

[65HDX8 Changing The On-Screen Display Language](#)

Toshiba 65HDX8

[46HM84 Changing The On-Screen Display Language](#)

Toshiba 46HM84

[DLP 46HM84 Changing Tile On-Screen Display Language](#)

TOSHIBA DLP 46HM84

[ColorStream TP50G60 Changing The On-Screen Display Language](#)

Toshiba ColorStream TP50G60