



# Using The Auto Format; Activating Blue Screen; Adjusting The Brightness Of Side Panel; Selecting The Video Input Source To View - Toshiba 42WL68A Owner's Manual

Toshiba lcd color tv owner's manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32

--

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## Using the auto format

When the TV receives a true HDMI signal picture and the auto format is On, it will automatically be displayed in HDMI signal format, irrespective of the TV's previous setting.

1

Press M, then press Y or y to display the **FUNCTION** menu.

FUNCTION  
Teletext  
Teletext SW  
Auto format  
Blue Screen  
Side panel  
MENU  
Back  
EXIT

### Using the auto format

When the TV receives a true HDMI signal picture and the auto format is On, it will automatically be displayed in HDMI signal format, irrespective of the TV's previous setting.

1 Press **MENU**, then press **⇐** or **⇨** to display the **FUNCTION** menu.



2

Press < or > to select Auto format, then press Y or y

## Selecting the video view

1 Press and hold **⊕** or press the video input mode list **P▼** or **P▲** to select appropriate the TV right side panel or repeatedly to select required

to select On or Off.

## Activating blue screen

With the blue screen function On, the screen will automatically turn blue and the sound will be muted when no signal is being received.


### 1 Using the auto format

From the FUNCTION menu, press < or > to select Blue screen.

2 Press Y or y to select On or Off.

Note: 1 Press , then press or to display the FUNCTION menu.

In the PC input mode, double-window mode (- page 23) or teletext mode (- page 21), this function is not available.

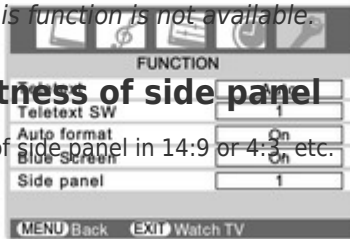

### Adjusting the brightness of side panel

You can adjust the brightness of side panel in 14:9 or 4:3, etc. mode.

1 From the FUNCTION menu, press or to select Auto format, then press or to select Side panel.

### 2 Activating blue screen

Press Y or y to adjust the settings as required.

20 Using the TV's features

1 From the FUNCTION menu, press or to select Blue screen.

2 Press or to select On or Off.

Note: In the PC input mode, double-window mode (page 23) or teletext mode (page 21), this function is not available.

## 1 Selecting the video input source to view

### Adjusting the brightness of side panel

Press and hold or press on the remote control until the video input mode list appears on the screen, then press < or > to select appropriate input source (or press the TV right side panel or on the remote control repeatedly to select required input source directly).

OK: 1 From the FUNCTION menu, press or to select Side panel.

2 Press or to adjust the settings as required.



Ex. PC VGA mode

PC  
VGA


2 Press Q.

## Using the TV's features

## Selecting the video view

1 Press and hold or press the video input mode list. or to select appropriate the TV right side panel or repeatedly to select required

OK:

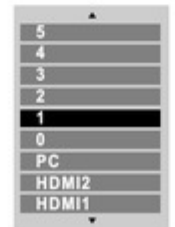

Ex. PC VGA



2 Press .  
 1 ( (1), video 1 inp  
 2 ( (2), video 2 inp  
 C1 ( (C1), COMPC  
 C2 ( (C2), COMPC  
HDMI1 ( HDMI 1 inp  
HDMI2 ( HDMI 2 inp  
PC ( RGB/PC, PC inp

Note: When the component video input mode is selected, the M (page 25) output audio signal

- o 1 (o (1), video 1 input) or o 1S (S-video input)
- o 2 (o (2), video 2 input) or o 2S (S-video input)
- o C1 (o (C1), COMPONENT VIDEO INPUT),
- o C2 (o (C2), COMPONENT VIDEO INPUT),
- HDMI1 (o HDMI 1 input),
- HDMI2 (o HDMI 2 input),
- PC (o RGB/PC, PC input)

## Using the TV's features

Note:

### Using the auto format

When the TV receives a true HDMI signal picture and the auto format is On, it will automatically be displayed in HDMI signal format, irrespective of the TV's previous setting.

O:

(Press and hold)

C1

2



 
1

1

PC

HDMI2

 

 
HDMI1

**1** Press , then press  or  to display the **FUNCTION** menu.



[Table of Contents](#)

## Selecting the video view

**1** Press and hold  or press the video input mode list  or  to select appropriate the TV right side panel or repeatedly to select required

[Previous Page](#)  
[Next Page](#)

1  
...  
17  
18  
19  
20  
21  
22  
23  
24

## Related Manuals for Toshiba 42WL68A

[LCD TV Toshiba 32WLT66A Owner's Manual](#)

Integrated digital lcd tv (44 pages)

[LCD TV Toshiba 26WL66A Owner's Manual](#)

Toshiba lcd colortv owner's manual (32 pages)

[LCD TV Toshiba 42WL55A Service Manual](#)

Lcd color television (37 pages)

[LCD TV Toshiba 42WL55A Owner's Manual](#)

Lcd color tv (44 pages)

[LCD TV Toshiba 42WL58A Owner's Manual](#)

Lcd color tv (56 pages)

[LCD TV Toshiba 42WL58A Service Manual](#)

(44 pages)

[LCD TV Toshiba Regza Owner's Manual](#)

Regza wlg66 series (116 pages)

[LCD TV Toshiba 42WLG66 Service Manual](#)

(26 pages)

[LCD TV Toshiba 42WLT66 Service Manual](#)

(191 pages)

[LCD TV Toshiba WLT66 Series Owner's Manual](#)

Toshiba crt television user manual (40 pages)

[LCD TV Toshiba 42WP48A Owner's Manual](#)

(52 pages)

[LCD TV Toshiba WLT68 Owner's Manual](#)

Wlt68 series (40 pages)

[LCD TV Toshiba WL56 Series Service Manual](#)

(111 pages)

[LCD TV Toshiba 37XV500A Owner's Manual](#)

Toshiba integrated digital lcd tv owner's manual (44 pages)

[LCD TV Toshiba Regza 42HL167 Owner's Manual](#)

Integrated high definition lcd television (82 pages)

[LCD TV TOSHIBA 42XV600A Owner's Manual](#)

Integrated digital lcd tv (52 pages)

## Related Content for Toshiba 42WL68A

[42WL58A To Use The Auto Format](#)

Toshiba 42WL58A

[22AV700A Auto Format](#)

Toshiba 22AV700A

[32C3000A Using The Auto Format](#)



Toshiba 32C3000A

[22SL700A Auto Format](#)

Toshiba 22SL700A

[L243 D Auto Format \(Widescreen\)](#)

Toshiba L243 D

[32DB833G COMBI Series Auto Format \(Widescreen\)](#)

Toshiba 32DB833G COMBI Series

[32W23 DIGITAL Series Auto Format \(Widescreen\)](#)

Toshiba 32W23 DIGITAL Series

[26EL833G Auto Format \(Widescreen\)](#)

Toshiba 26EL833G

This manual is also suitable for:

[42wl68e42wl68t](#)