



# Using The Remote Control; Preparing The Remote Control For Use; Installing The Remote Control Batteries; Using The Remote Control With A Vcr Or A Cable Tv Converter - Toshiba 43A10 Owner's Manual

Colorstream projection television



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47

---

•

[Table of Contents](#)

- 


Troubleshooting

•

## Bookmarks





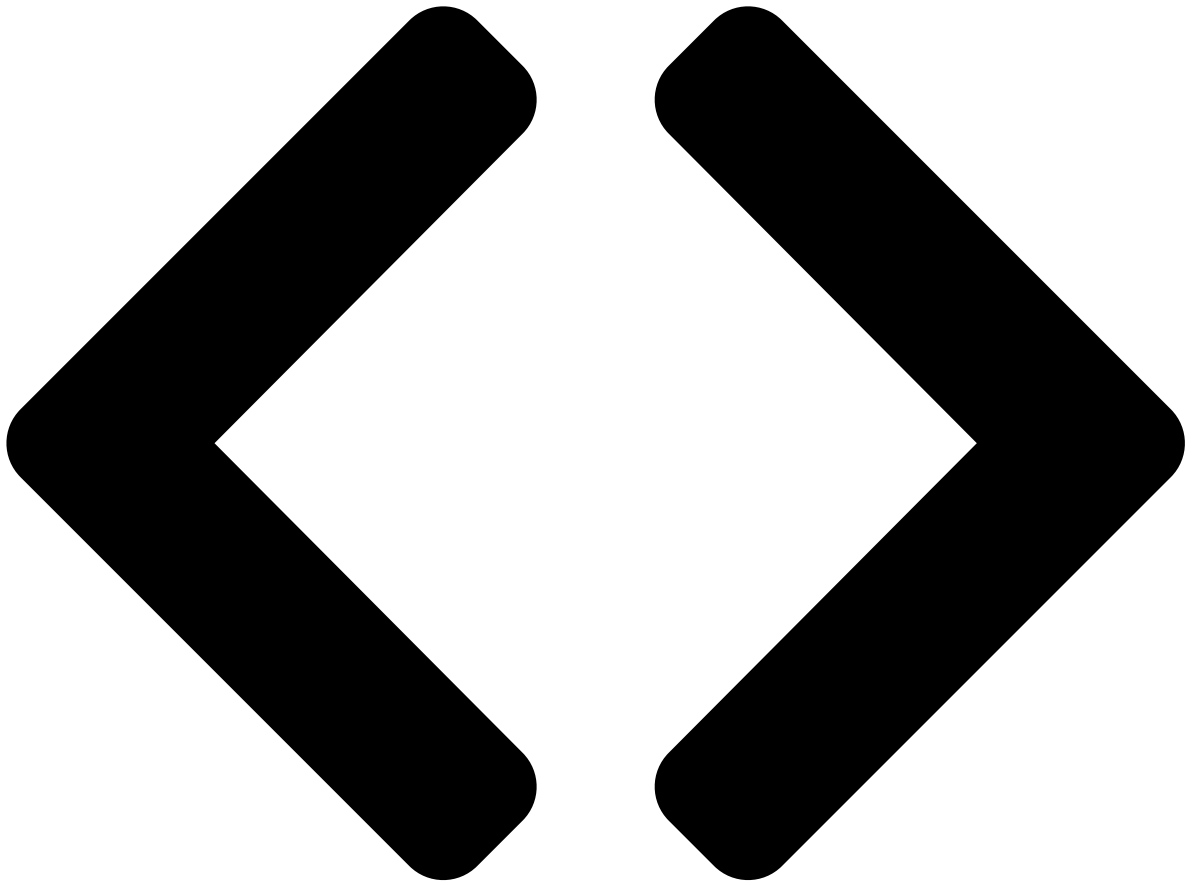

Enlarged version

## Using the remote control

### Preparing the remote control for use

---

With the remote control, you can operate your TV, most VCR models, and cable TV converters together, even if they are different brands. If you will be using your TV with a Toshiba VCR, your remote control is already programmed and ready to use. If you own different brands of VCRs and/or converters, you first have to program your remote control. (See "Programming the remote control for use with a VCR or a cable TV converter" on page 12.)

### Installing the remote control batteries

To install the batteries:

1. Slide the battery cover off the back of the remote control.
2. Install two "AA" size batteries. Match the + and - signs on the

batteries to the signs on the battery compartment.

3. Slide the battery cover back on to the remote control until the lock snaps.

## Using the remote control with a VCR or a cable

### TV converter

To control a Toshiba VCR:

Set the TV/CABLE/VCR switch to the VCR position. The shaded buttons shown at right will then control the VCR. The rest of the buttons will operate the TV as usual.

To control a non-Toshiba VCR:



If you own different brands of VCRs, program the remote control to recognize the brand of your VCR. (See "Programming the remote control for use with a VCR or a cable TV converter" on page 12.)

#### Note:

*This remote control's functions may or may not operate your VCR or cable TV converter. Refer to the owner's manuals supplied with the equipment to see which features are available. In addition, the original controllers may have features not available on this remote control. If you would like to continue to use these features, you may want to use the original remote control.*

#### Caution:

- Dispose of your batteries in a designated disposal area. Do not throw your batteries into a fire.
- Do not mix battery types or combine used batteries with new ones.
- Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.
- If you do not intend to use the remote control for a long time, remove the batteries.

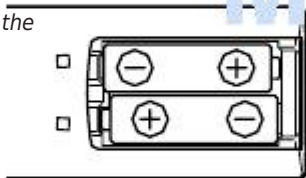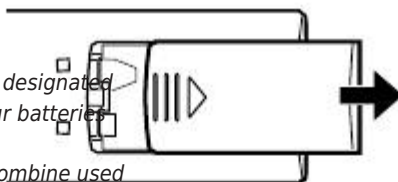

ManualsLib.com

POWER  
RECALL  
MUTE

POWER

1

2

3

Channel

4

5

6

Number

9

7

8

CH RTN

100

0

Enter

ENT

CH

MENU/

Channel

VOL

VOL

ENTER

 
CH

TV

CABLE

VCR

Record

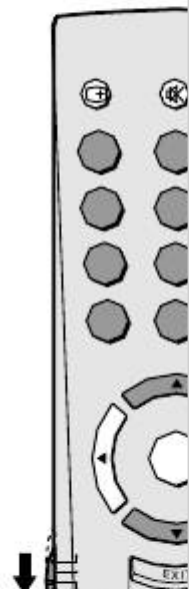

TV/VCR

FAV CH  
TV/WIDE

STOP

REC  
TV/VCR  
STOP  
PLAY

PLAY

STILL  
SOURCE  
PIP

Fast Forward

SLOW  
PAUSE  
REW  
FF

Rewind

PIP CH  
LOCATE  
SWAP

PAUSE

SLOW

**11**



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
8  
9  
10  
11  
12  
13  
14  
15

Quick Links:

[Exploring Your New Tv](#)

## Related Manuals for Toshiba 43A10

[TV Toshiba 43A10 Service Manual](#)

(104 pages)

[Projection TV Toshiba COLORSTREAM 43A10 Owner's Manual](#)

(47 pages)

[TV Toshiba 43A10 Service Manual](#)

(8 pages)

[Projection TV Toshiba 43H72 Owner's Manual](#)



Toshiba owner's manual projection television 43h72, 50h72 (56 pages)

[Projection TV Toshiba 43H72 Specifications](#)

Theaterview hd (2 pages)

[Projection TV Toshiba 43HX71 Owner's Manual](#)

Toshiba owner's manual projection television 43hx71, 53hx71 (56 pages)

[Projection TV Toshiba 43A61 Owner's Manual](#)

Projection television (52 pages)

[Projection TV Toshiba 43H70 Owner's Manual](#)

Colorstream projection television (48 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

Toshiba projection television owner's manual (52 pages)

[Projection TV Toshiba COLORSTREAM 43A61 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba 43AX60 Owner's Manual](#)

Colorstream projection television (54 pages)

[Projection TV Toshiba COLOASTREAM 43AX60 Owner's Manual](#)

(54 pages)

[Projection TV Toshiba 50PH46P Service Manual](#)

Wh4 chassis (78 pages)

[Projection TV Toshiba 43PH46P Service Manual](#)

(78 pages)

[Projection TV Toshiba 50HX70 Owner's Manual](#)

Colorstream projection television (56 pages)

## Related Content for Toshiba 43A10

[DLP 44HM85 Remote Control Functions In Tv Mode](#)

Toshiba DLP 44HM85

[51H94 Remote Control](#)

Toshiba 51H94

[46H84 Learning About The Remote Control](#)

Toshiba 46H84

[42HM66 Using The Remote Control](#)

Toshiba 42HM66

[65HDX8 Using The Remote Control](#)

Toshiba 65HDX8

[56MX195 Using The Remote Control Mode Button To Control Your Other Devices](#)

Toshiba 56MX195

[46HM84 Remote Control](#)

Toshiba 46HM84

[46HM84 Using The Remote Control](#)

Toshiba 46HM84