

Labeling Channels - Toshiba 43A10 Owner's Manual

Colorstream projection television

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47

•

[Table of Contents](#)

•

Troubleshooting

•

Bookmarks



 
To clear your favorite channels:

1. Press MENU, then press x or • until the CUSTOM menu appears.
2. Press y or z to highlight FAVORITE CH2 for example.
3. Press x or • to display the FAVORITE CH2 menu.

To clear your favorite channels:

1. Press MENU, then press ◀ or ▶ until the CUSTOM menu appears.
2. Press ▲ or ▼ to highlight FAVORITE CH2 for example.
3. Press ◀ or ▶ to display the FAVORITE CH2 menu.

CUSTOM
T I M E R
C C
O F F
F A V O R I
T E
C H
I
F A V O R I
T E
C H 2
C H I N P U T
C H L A B E L
I N G
V
I D E O
L A B E L
B A C K G R O U N D
C L E A R

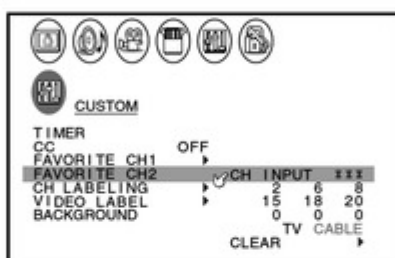


4. Press y or z to highlight CLEAR, then press • or x until "0" replaces the channel numbers you have programmed.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

CUSTOM
T I M E R
C C
O F F
F A V O R I
T E
C H
1
F A V O R I
T E
C H 2
C H I N P U T
C H L A B E L
I N G
V
I D E O
L A B E L
B A C K G R O U N D
C L E A R

To clear your favorite channels:

 1. Press MENU, then press ◀ or ▶ until the CUSTOM menu appears.
2. Press ▲ or ▼ to highlight FAVORITE CH2 for example.
3. Press ◀ or ▶ to display the FAVORITE CH2 menu.

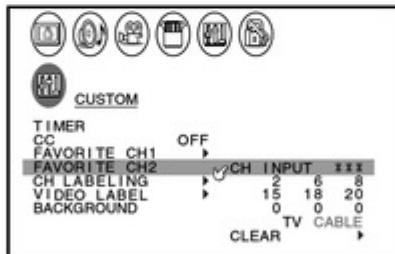

Labeling channels

Channel labels appear above the channel number display each time you turn on the TV, select a channel, or press the RECALL button.

You can choose any four characters to identify the channels.

To create channel labels:

1. Press MENU, then press x or y until the CUSTOM menu appears.
2. Press y or z to highlight CH LABELING.
3. Press x or • to display the CH LABELING menu.

CH INPUT will be highlighted.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35



Labeling channels

 
Channel labels appear above the channel number display each time you turn on the TV, select a channel, or press the RECALL button. You can choose any four characters to identify the channels.

To create channel labels:

1. Press MENU, then press ◀ or ▶ until the CUSTOM menu appears.
2. Press ▲ or ▼ to highlight CH LABELING.
3. Press ◀ or ▶ to display the CH LABELING menu.

4. Press the Channel Number buttons to select a channel you want to label.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

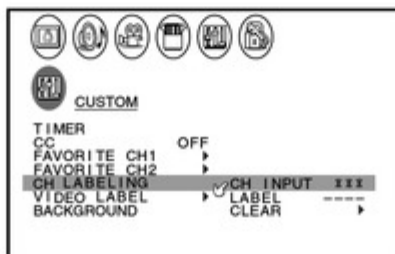

4. Press the Channel Number buttons to select a channel you want to label.



5. Press z to highlight LABEL.



 
Using the TV's Features

CUSTOM
T I M E R
C C
O F F
F A V O R I
T E
C H
1
F A V O R I
T E
C H 2
C H L A B E L
I N G
C H
V
I D E O
L A B E L
B A C K G R O U N D
C L E A R


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

To clear your favorite channels:

1. Press MENU, then press ◀ or ▶ until the CUSTOM menu appears.
2. Press ▲ or ▼ to highlight FAVORITE CH2 for example.
3. Press ◀ or ▶ to display the FAVORITE CH2 menu.

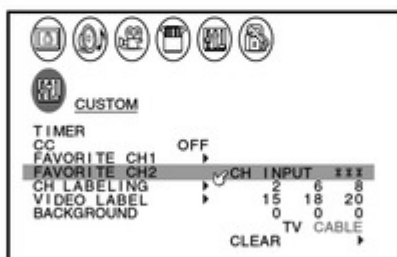

 4. Press ▲ or ▼ to highlight CLEAR, then press ▶ or ◀ until "0" replaces the channel numbers you have programmed.

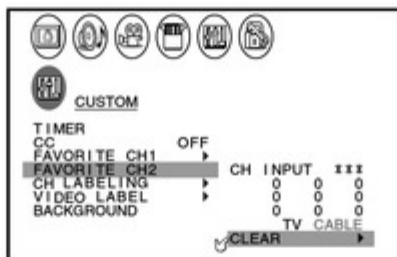


Labeling channels

Channel labels appear above the channel number display each time you turn on the TV, select a channel, or press the RECALL button. You can choose any four characters to identify the channels.

To create channel labels:

 1. Press MENU, then press ◀ or ▶ until the CUSTOM menu appears.
2. Press ▲ or ▼ to highlight CH LABELING.
3. Press ◀ or ▶ to display the CH LABELING menu. CH INPUT will be highlighted.

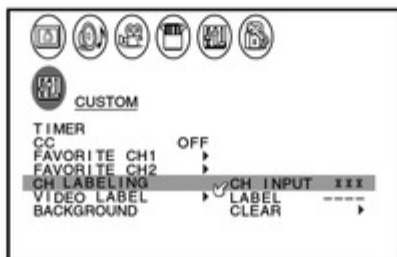

4. Press the Channel Number buttons to select a channel you want to label.

 


Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
19
20
21
22
23
24
25
26

Quick Links:

[Exploring Your New Tv](#)

Related Manuals for Toshiba 43A10

[TV Toshiba 43A10 Service Manual](#)

(104 pages)

[Projection TV Toshiba COLORSTREAM 43A10 Owner's Manual](#)

(47 pages)

[TV Toshiba 43A10 Service Manual](#)

(8 pages)

[Projection TV Toshiba 43H72 Owner's Manual](#)

Toshiba owner's manual projection television 43h72, 50h72 (56 pages)

[Projection TV Toshiba 43H72 Specifications](#)

Theaterview hd (2 pages)

[Projection TV Toshiba 43HX71 Owner's Manual](#)

Toshiba owner's manual projection television 43hx71, 53hx71 (56 pages)

[Projection TV Toshiba 43A61 Owner's Manual](#)

Projection television (52 pages)

[Projection TV Toshiba 43H70 Owner's Manual](#)

Colorstream projection television (48 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

Toshiba projection television owner's manual (52 pages)

[Projection TV Toshiba COLORSTREAM 43A61 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba 43AX60 Owner's Manual](#)

Colorstream projection television (54 pages)

[Projection TV Toshiba COLOASTREAM 43AX60 Owner's Manual](#)

(54 pages)

[Projection TV Toshiba 50PH46P Service Manual](#)

Wh4 chassis (78 pages)

[Projection TV Toshiba 43PH46P Service Manual](#)

(78 pages)

[Projection TV Toshiba 50HX70 Owner's Manual](#)

Colorstream projection television (56 pages)

Related Content for Toshiba 43A10

[TP55G65 Labeling Channels](#)

Toshiba TP55G65

[65HX83 Labeling Channels](#)

Toshiba 65HX83

[ColorStream TP50H60 Labeling Channels](#)

Toshiba ColorStream TP50H60

[55A10 Labeling Channels](#)

Toshiba 55A10

[50HX70 Labeling Channels](#)

Toshiba 50HX70

[50A50 Labeling Channels](#)

Toshiba 50A50

[43AX60 Labeling Channels](#)

Toshiba 43AX60

[42HDX82 Labeling Channels](#)

Toshiba 42HDX82