

Using The V-Chip Menu; Enable Blocking; Tv Rating; (Independent Rating System For Broadcasters) - Toshiba 43A10 Owner's Manual

Colorstream projection television

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47

•


[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

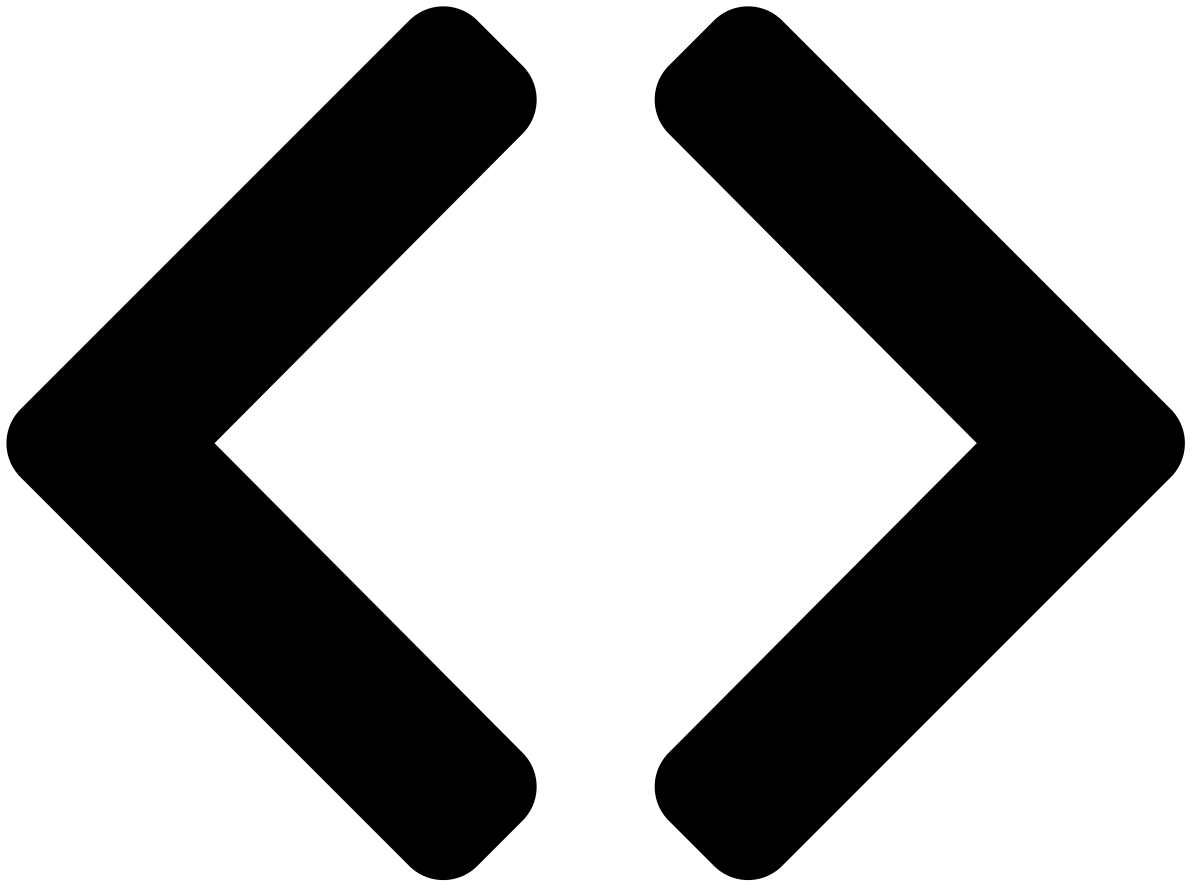

Enlarged version

Using the V-CHIP menu

Some TV programs and movies include signals that classify the content of the program (violence, sex, dialog, language). The V-CHIP control feature in this TV detects the signals and blocks the programs according to your selections. To use this feature, perform the following setup.

ENABLE BLOCKING

1. From the LOCKS menu, select ENABLE BLOCKING.
2. Press x or • to select ON or OFF.

ON : To enable your setting (Lock)

OFF: To release your setting (Unlock)

Note: The CH LOCK function is not affected with this selection.

TV RATING (Independent rating system for broadcasters)

Note: The CH LOCK function is not affected with this selection.



To select
Press ▼

1. From the LOCKS menu, select TV RATING.
2. Press x or • to display the TV RATING menu.
3. Press z or y to select item.
4. Press • to lock (display X)

Using the V-CHIP menu

Some TV programs and movies include signals that classify the content of the program (violence, sex, dialog, language). The V-CHIP control feature in this TV detects the signals and blocks the programs according to your selections. To use this feature, perform the following setup.

Ratings

Description and Content Themes

MA

Mature Audience Only (This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.)

L) Crude or indecent language S) Explicit sexual activity

V) Graphic violence

14

Parents Strongly Cautioned (This program contains some material that many parents would find unsuitable for children under 14 years of age.)

D) Intensely suggestive dialog L) Strong coarse language

S) Intense sexual situations V) Intense violence

PG

Parental Guidances Suggested (This program contains material that parents may find unsuitable for younger children.)

D) Some suggestive dialog L) Infrequent coarse language

S) Some sexual situations V) Moderate violence

G

General Audience (Most parents would find this program suitable for all ages.)

Y7FV

Directed to Older Children (This program is designed for

Y7

children age 7 and above. Note: Programs in which fantasy

violence may be more intense or more combative than

other programs in this category will be designated Y7FV.)

Y

All Children (This program is designed to be appropriate for all

children.)

3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

LOCKS

TV RATING

MA

14

PG G

DIALOG

LANGUAGE

SEX

)

VIOLENCE

NO

DLSV

YOUTH TV RATING

Y7FV Y7 Y

VCHIP MENU

3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

LOCKS Menu

LOCKS

VCHIP

ENABLE

BLOCKING

ENABLE BLOCKING

1. From the LOCKS menu, select ENABLE BLOCKING.

2. Press ◀ or ▶ to select ON or OFF.

ON : To enable your setting (Lock)

OFF: To release your setting (Unlock)

Note: The CH LOCK function is not affected with this selection.

TV RATING (Independent rating system for broadcasters)

1. From the LOCKS menu, select TV RATING.

 
2. Press ◀ or ▶ to display the TV RATING menu.

3. Press ▼ or ▲ to select item.

4. Press ▶ to lock (display X)

Press ◀ to unlock (display ✓)

5. Repeat steps 3 and 4 to set the next item.

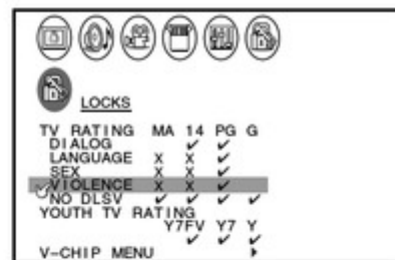

The TV age-based ratings and content themes you can lock are listed in the table below.


Ratings	Description and Content Themes
MA	Mature Audience Only (This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.) L) Crude or indecent language S) Explicit sexual activity V) Graphic violence
14	Parents Strongly Cautioned (This program contains some material that many parents would find unsuitable for children under 14 years of age.) D) Intensely suggestive dialog L) Strong coarse language S) Intense sexual situations V) Intense violence
PG	Parental Guidances Suggested (This program contains material that parents may find unsuitable for younger children.) D) Some suggestive dialog L) Infrequent coarse language S) Some sexual situations V) Moderate violence
G	General Audience (Most parents would find this program suitable for all ages.)
Y7FV Y7	Directed to Older Children (This program is designed for children age 7 and above. Note: Programs in which fantasy violence may be more intense or more combative than other programs in this category will be designated Y7FV.)



To select...
Press ▼



 To display the program you a
RECALL butt

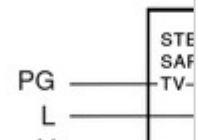

ON
/ OFF
TV RAT
ING
MPAA
RATING
BLOCKING OPT I ON
CH
LOCK
V
I
DEO
LOCK
V I DEO
NEW P I N
CODE

To select each item:
Press z or y .

POWER
RECALL
MUTE

1
2
3

6

4

5

8

9

7

CH RTN

100

0

ENT

CH

MENU/

VOL

VOL

ENTER

CH

TV

CABLE

VCR

FAV CH

TV/VIDEO

To display the rating of the TV

program you are watching, press the

RECALL button.

STEREO

SAP

PG

TV-PG

L

L

V

9 : 25

YZX •

V

ANT 1

4

CABLE

27

Using the V-CHIP menu

Some TV programs and movies include signals that classify the content of the program (violence, sex, dialog, language). The V-CHIP control feature in this TV detects the signals and blocks the programs according to your selections. To use this feature, perform the following setup.

ENABLE BLOCKING

1. From the LOCKS menu, select ENABLE BLOCKING.
2. Press ◀ or ▶ to select ON or OFF.
ON : To enable your setting (Lock)
OFF: To release your setting (Unlock)

Note: The CH LOCK function is not affected with this selection.


TV RATING (Independent rating system for broadcasters)

1. From the LOCKS menu, select TV RATING.
2. Press ◀ or ▶ to display the TV RATING menu.
3. Press ▼ or ▲ to select item.
4. Press ▶ to lock (display X)
Press ◀ to unlock (display ✓)
5. Repeat steps 3 and 4 to set the next item.



The TV age-based ratings and content themes you can lock are listed in the table below.

Ratings	Description and Content Themes
MA	Mature Audience Only (This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.) L) Crude or indecent language S) Explicit sexual activity V) Graphic violence
14	Parents Strongly Cautioned (This program contains some material that many parents would find unsuitable for children under 14 years of age.) D) Intensely suggestive dialog L) Strong coarse language S) Intense sexual situations V) Intense violence
PG	Parental Guidances Suggested (This program contains material that parents may find unsuitable for younger children.) D) Some suggestive dialog L) Infrequent coarse language

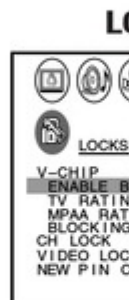 

To select
Press ▼



To display the

[Previous Page](#)
[Next Page](#)

1
...
24
25
26
27
28
29
30
31

Quick Links:

[Exploring Your New Tv](#)

Related Manuals for Toshiba 43A10

[TV Toshiba 43A10 Service Manual](#)

(104 pages)

[Projection TV Toshiba COLORSTREAM 43A10 Owner's Manual](#)

(47 pages)

[TV Toshiba 43A10 Service Manual](#)

(8 pages)

[Projection TV Toshiba 43H72 Owner's Manual](#)

Toshiba owner's manual projection television 43h72, 50h72 (56 pages)

[Projection TV Toshiba 43H72 Specifications](#)

Theaterview hd (2 pages)

[Projection TV Toshiba 43HX71 Owner's Manual](#)

Toshiba owner's manual projection television 43hx71, 53hx71 (56 pages)

[Projection TV Toshiba 43A61 Owner's Manual](#)

Projection television (52 pages)

[Projection TV Toshiba 43H70 Owner's Manual](#)

Colorstream projection television (48 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

Toshiba projection television owner's manual (52 pages)

[Projection TV Toshiba COLORSTREAM 43A61 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba 43AX60 Owner's Manual](#)

Colorstream projection television (54 pages)

[Projection TV Toshiba COLOASTREAM 43AX60 Owner's Manual](#)

(54 pages)

[Projection TV Toshiba 50PH46P Service Manual](#)

Wh4 chassis (78 pages)

[Projection TV Toshiba 43PH46P Service Manual](#)

(78 pages)

[Projection TV Toshiba 50HX70 Owner's Manual](#)

Colorstream projection television (56 pages)

Related Content for Toshiba 43A10

[65HC15 Using The V-Chip Menu](#)

Toshiba 65HC15

[55A10 Using The V-Chip Menu](#)

Toshiba 55A10

[TheaterWide 51HC85 Using The V-Chip Menu](#)

Toshiba TheaterWide 51HC85

[50HX70 Using The V-Chip Menu](#)

Toshiba 50HX70

[50A50 Using The V-Chip Menu](#)

Toshiba 50A50

[43AX60 Using The V-Chip Menu](#)

Toshiba 43AX60

[42HDX82 Using The V-Chip Menu](#)

Toshiba 42HDX82

[TheaterWide 65NH84 Using The V-Chip Menu](#)

Toshiba TheaterWide 65NH84