



# Selecting The Color Temperature; Resetting Your Picture Adjustments - Toshiba 43A10 Owner's Manual

Colorstream projection television



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## Selecting the color temperature

You can change the quality of the picture by selecting from three preset color temperatures: cool, medium, and warm.

### Mode

### Picture Quality

cool  
blueish  
medium  
neutral  
warm  
reddish

## Selecting the color temperature

You can change the quality of the picture by selecting from three preset color temperatures: cool, medium, and warm.

Mode	Picture Quality
cool	blueish
medium	neutral
warm	reddish

To select the color temperature:

1. Press MENU, then press x or • until the PICTURE menu appears.  
1. Press MENU, then press ◀ or ▶ until the PICTURE menu appears.
2. Press y or z to highlight COLOR TEMPERATURE.  
2. Press ▲ or ▼ to highlight COLOR TEMPERATURE.
3. Press x or • to highlight the mode you want.  
3. Press ◀ or ▶ to highlight the mode you want.



PICTURE ANTENNA  
 MODE  
 PREFERENCE  
 FLESH TONE  
 ON  
 NOISE  
 REDUCTION  
 OFF  
 COLOR  
 TEMPERATURE  
 COOL MED UM  
 CONVERGENCE  
 SAVE NEW  
 PREFERENCE


## Selecting the color temperature

You can change the quality of the picture by selecting from three preset color temperatures: cool, medium, and warm.

Mode	Picture Quality
cool	blueish
medium	neutral
warm	reddish

## Resetting your picture adjustments

1. Press MENU, then press x or • until the PICTURE menu appears.
2. Press y or z to highlight RESET or ▼ to highlight COLOR TEMPERATURE.
3. Press ◀ or ▶ to highlight the mode you want.

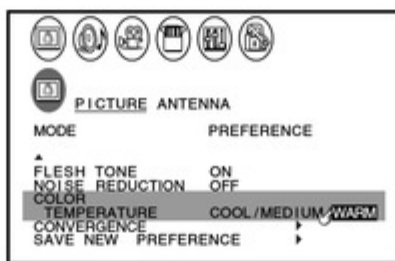


PICTURE ANTENNA  
 MODE  
 SPORTS  
 CONTRAST  
 100  
 BRIGHTNESS  
 50  
 COLOR  
 50  
 TINT  
 0  
 SHARPNESS  
 50  
 RESET  
 DONE  
 PREFERENCE  
 SAVE NEW

## Resetting your picture adjustments

1. Press MENU, then press ◀ or ▶ until the PICTURE menu appears.
2. Press ▲ or ▼ to highlight RESET.

The RESET function adjusts the picture functions to the following factory settings:

- contrast ..... max (100)
- brightness ..... center (50)
- color ..... center (50)
- tint ..... center (0)
- sharpness ..... center (50)

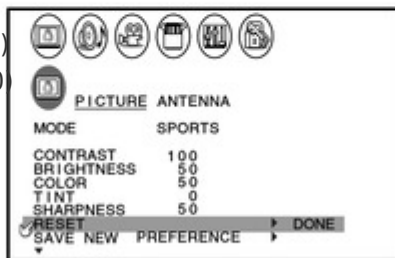

The RESET function adjusts the picture functions to the following factory settings:

- color temperature ..... cool
- contrast ..... max (100)
- noise reduction ..... off
- brightness ..... center (50)
- color ..... center (50)
- tint ..... center (0)
- sharpness ..... center (50)

- color temperature ..... cool
- noise reduction ..... off
- picture mode ..... sports

POWER  
 RECALL  
 MUTE  
 1  
 2  
 3  
 6  
 4  
 5  
 9

## Selecting the color temperature

You can change the quality of the picture by selecting from three preset color temperatures: cool, medium, and warm.

Mode	Picture Quality
cool	blueish
medium	neutral
warm	reddish



[Table of Contents](#)

Next Page

1  
...  
30  
31  
32  
33  
34  
35  
36  
37

Quick Links:

[Exploring Your New Tv](#)

## Related Manuals for Toshiba 43A10

[TV Toshiba 43A10 Service Manual](#)

(104 pages)

[Projection TV Toshiba COLORSTREAM 43A10 Owner's Manual](#)

(47 pages)

[TV Toshiba 43A10 Service Manual](#)

(8 pages)

[Projection TV Toshiba 43H72 Owner's Manual](#)

Toshiba owner's manual projection television 43h72, 50h72 (56 pages)

[Projection TV Toshiba 43H72 Specifications](#)

Theaterview hd (2 pages)

[Projection TV Toshiba 43HX71 Owner's Manual](#)

Toshiba owner's manual projection television 43hx71, 53hx71 (56 pages)

[Projection TV Toshiba 43A61 Owner's Manual](#)

Projection television (52 pages)

[Projection TV Toshiba 43H70 Owner's Manual](#)

Colorstream projection television (48 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

Toshiba projection television owner's manual (52 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba COLORSTREAM 43A61 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba 43AX60 Owner's Manual](#)

Colorstream projection television (54 pages)

[Projection TV Toshiba COLOASTREAM 43AX60 Owner's Manual](#)

(54 pages)

[Projection TV Toshiba 50PH46P Service Manual](#)

Wh4 chassis (78 pages)

[Projection TV Toshiba 43PH46P Service Manual](#)

(78 pages)

[Projection TV Toshiba 50HX70 Owner's Manual](#)

Colorstream projection television (56 pages)

## Related Content for Toshiba 43A10

[57HDX82 Selecting The Color Temperature](#)

Toshiba 57HDX82

[65HC15 Selecting The Color Temperature](#)

Toshiba 65HC15

[55A10 Selecting The Color Temperature](#)

Toshiba 55A10

[TheaterWide 51HC85 Selecting The Color Temperature](#)

Toshiba TheaterWide 51HC85

[50HX70 Selecting The Color Temperature](#)

Toshiba 50HX70

[50A50 Selecting The Color Temperature](#)

Toshiba 50A50

[43AX60 Selecting The Color Temperature](#)

Toshiba 43AX60

[42HDX82 Selecting The Color Temperature](#)

Toshiba 42HDX82